Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

KREAFUNK KFLK23

KREAFUNK aHEAD 2 Wireless Bluetooth On-Ear Headphones

Model: KFLK23

1. Introduction

Thank you for choosing the KREAFUNK aHEAD 2 Wireless Bluetooth On-Ear Headphones. These headphones are designed to provide a superior audio experience with active noise cancellation, ensuring clear sound by blocking out surrounding noise. With a comfortable design and long battery life, they are ideal for various activities, from relaxing at home to exercising on the go.

Key Features:

- High-quality sound with Active Noise Cancellation (ANC).
- Up to 20 hours of playtime on a single charge.
- Fast charging: full charge in 1.5 hours.
- Built-in microphone for hands-free calling.
- Water-resistant (IPX4) design.
- Includes washable sports cushions for versatile use.

2. Package Contents

Please verify that all items are present in your package:

- KREAFUNK aHEAD 2 Wireless Bluetooth On-Ear Headphones
- Charging Cable
- Ear Cushions (including a set of washable sports cushions)

3. Product Overview



Image: Front view of the KREAFUNK aHEAD 2 Wireless Bluetooth On-Ear Headphones, showcasing the pink color and overall design.



Image: Angled view of the KREAFUNK aHEAD 2 headphones, highlighting the control buttons (+, -, and the K button) on the right earcup.

Controls and Indicators:

- **Power/Multi-function Button (K button):** Used for power on/off, play/pause, answer/end calls, and activating voice assistant.
- **Volume Up (+) Button:** Increases volume, next track (long press).
- **Volume Down (-) Button:** Decreases volume, previous track (long press).
- **ANC Switch:** Toggles Active Noise Cancellation on/off.
- **LED Indicator:** Shows power status, pairing mode, and charging status.
- **USB-C Charging Port:** For connecting the charging cable.
- **Microphone:** For hands-free calls.

4. Setup

4.1 Charging the Headphones

Before first use, fully charge your aHEAD 2 headphones. Connect the included USB-C charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, wall adapter). The LED indicator will show charging status and turn off or change color when fully charged.

A full charge takes approximately 1.5 hours.

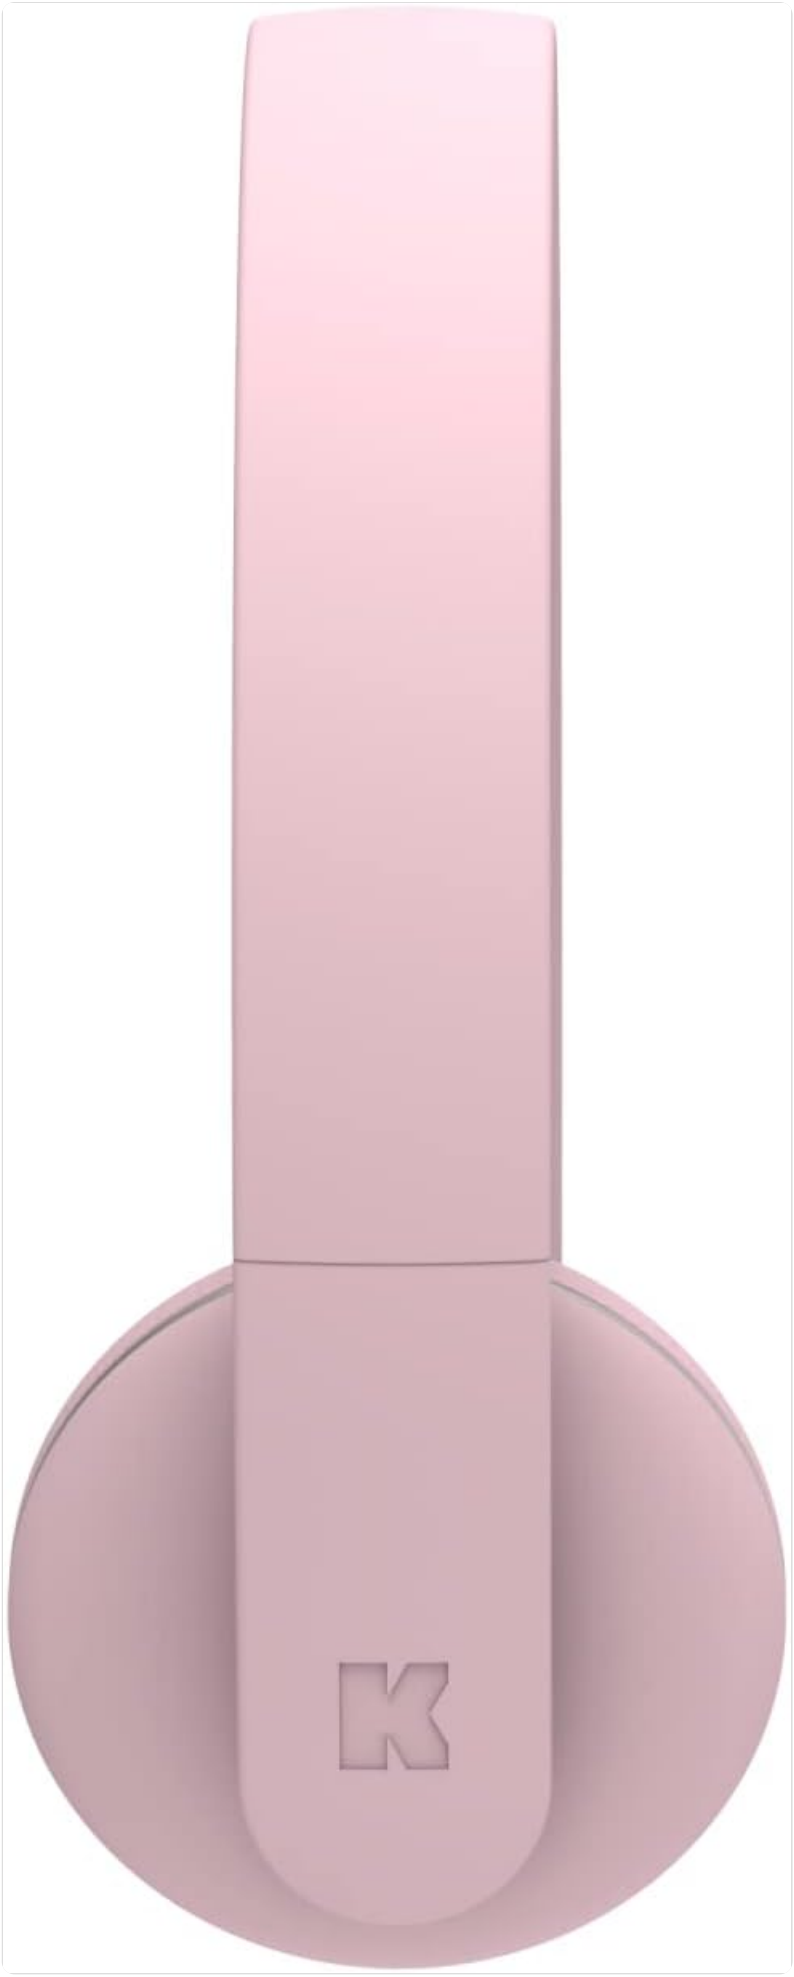


Image: Side view of the KREAFUNK aHEAD 2 headphones, showing the sleek design and the 'K' logo on the earcup, where the charging port is located.

4.2 Bluetooth Pairing

1. Ensure the headphones are turned off.
2. Press and hold the Power/Multi-function (K) button for approximately 5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "KREAFUNK aHEAD 2" from the list of found devices.
5. Once connected, the LED indicator will turn solid blue or flash blue slowly.

The headphones will automatically attempt to reconnect to the last paired device when powered on, if within the 10-meter Bluetooth range.

5. Operating Instructions

5.1 Power On/Off

- **Power On:** Press and hold the Power/Multi-function (K) button for 2-3 seconds until the LED indicator lights up.
- **Power Off:** Press and hold the Power/Multi-function (K) button for 3-4 seconds until the LED indicator turns off.

5.2 Music Playback

- **Play/Pause:** Press the Power/Multi-function (K) button once.
- **Volume Up:** Press the (+) button.
- **Volume Down:** Press the (-) button.
- **Next Track:** Long press the (+) button.
- **Previous Track:** Long press the (-) button.

5.3 Call Management

- **Answer/End Call:** Press the Power/Multi-function (K) button once.
- **Reject Call:** Long press the Power/Multi-function (K) button.
- **Activate Voice Assistant:** Double-press the Power/Multi-function (K) button.

5.4 Active Noise Cancellation (ANC)

The aHEAD 2 headphones feature Active Noise Cancellation to reduce ambient noise. Locate the ANC switch on the headphones and slide it to the 'ON' position to activate ANC. Slide it to 'OFF' to deactivate.

5.5 Water Resistance (IPX4)

The headphones are rated IPX4 water-resistant, meaning they are protected against splashing water from any direction. This makes them suitable for light rain or sweaty workouts. *Do not submerge the headphones in water.*





Image: A person wearing the KREAFUNK aHEAD 2 headphones, demonstrating their comfortable fit during use.



Image: A person wearing the KREAFUNK aHEAD 2 headphones in a side profile, illustrating their use in a casual setting while holding a beverage.

6. Maintenance

6.1 Cleaning

To clean your headphones, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, cleaning solvents, or strong detergents. Ensure no liquid enters the openings.

6.2 Ear Cushions

The aHEAD 2 headphones come with washable sports cushions. To clean them, gently remove the cushions from the earcups. Wash them by hand with mild soap and water, then allow them to air dry completely before reattaching them to the headphones.



Image: The KREAFUNK aHEAD 2 headphones shown with black ear cushions, indicating the removable and washable nature of the sports cushions.

6.3 Storage

When not in use, store your headphones in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the headphones.

7. Troubleshooting

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.

Problem	Possible Cause	Solution
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red LED). Turn on Bluetooth on your device. Move headphones closer to your device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; headphones not connected.	Increase volume on both headphones and your device. Ensure headphones are properly paired and connected.
ANC not working effectively.	ANC switch off; very high-frequency noise.	Ensure ANC switch is in the 'ON' position. ANC is most effective against low-frequency constant noise.

8. Specifications

Feature	Specification
Model Name	aHEAD2
Model Number	KFLK23
Connectivity Technology	Wireless, Bluetooth
Wireless Communication Technology	Bluetooth 5.0
Bluetooth Range	10 Meters
Battery Life	20 Hours
Charging Time	1.5 Hours
Noise Control	Active Noise Cancellation
Water Resistance Level	IPX4 (Water Resistant)
Frequency Range	20 Hz - 20,000 Hz
Item Weight	1.1 pounds (0.5 Kilograms)
Product Dimensions	6.3 x 1.97 x 6.69 inches

9. Warranty and Support

KREAFUNK products are designed with quality and durability in mind. For specific warranty information regarding your aHEAD 2 headphones, please refer to the warranty card included with your purchase or visit the official KREAFUNK website. The manufacturer is KREAFUNK.

If you encounter any issues or require further assistance, please contact KREAFUNK customer support through their official channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09YRZ81JF

More documents and user manuals: **https://manuals.plus/**