DEWALT 190 2091 DW2 A

DEWALT Heavy Duty Bluetooth Neckband Headphones User Manual

Model: 190 2091 DW2 A

Introduction

Thank you for choosing the DEWALT Heavy Duty Bluetooth Neckband Headphones. These headphones are designed to provide robust audio performance and clear communication in challenging environments. They feature advanced noise reduction, extended battery life, and a durable, comfortable design suitable for jobsite use.
Key features include:

- **cVc 8.0 Noise Reduction Technology:** Suppresses noisy backgrounds for clear calls.
- **30+ Hour Playtime:** Listen to music and take calls throughout the workday without frequent recharging.
- **Lightweight and Flexible Neckband:** Adjusts comfortably to your neck, providing a barely-there feel.
- **IPX6 Water Resistance:** Built to withstand sweat and water, ideal for harsh jobsite conditions.
- **Custom-Fit Earbuds:** Includes extra, interchangeable ear cushions for a perfect fit for various ear canal sizes.

What's Included

Your DEWALT Heavy Duty Bluetooth Neckband Headphones package contains the following items:

- DEWALT Jobsite Pro Neckband Earphones
- 8 Ear Cushions + Ear Fins (various sizes and styles)
- Type C Charging Cable
- User Manual



Product Packaging



8 Ear Cushions + Ear Fins



USB to Type C Charging Cable



User Manual

Setup

1. Charging the Headphones

Before first use, fully charge your DEWALT headphones. A full charge provides over 30 hours of playtime.

1. Connect the included Type C charging cable to the charging port on the neckband.
2. Connect the other end of the cable to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicator will show charging status (refer to the manual for specific light patterns).
4. Once fully charged, disconnect the cable.



Fast-Charge Type C Port

2. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device to begin listening.

1. Ensure the headphones are powered off.
2. Press and hold the multi-function button (usually the power button) until the LED indicator flashes rapidly, indicating pairing mode.
3. On your device, go to Bluetooth settings and search for available devices.
4. Select "DEWALT Jobsite Pro" from the list.
5. Once connected, the LED indicator will change (refer to the manual for specific light patterns) and a voice prompt may confirm the connection.

Operating Instructions

Power On/Off

- **Power On:** Press and hold the multi-function button for approximately 3 seconds.
- **Power Off:** Press and hold the multi-function button for approximately 5 seconds.

Music Playback

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.



Enjoy over 30 hours of continuous playback.

Call Management

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.
- **Voice Assistant:** Double-press the multi-function button to activate your device's voice assistant.



Experience crystal-clear calls with cVc 8.0 Noise Reduction.

Noise Isolation

The headphones feature cVc 8.0 Noise Reduction Technology to minimize background noise during calls, allowing for clearer communication in loud environments.



Focus on your audio with effective noise isolation.

Maintenance

To ensure the longevity and optimal performance of your DEWALT headphones, follow these maintenance guidelines:

Cleaning

- Wipe the headphones with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Regularly remove ear cushions and clean them with mild soap and water. Ensure they are completely dry before reattaching.
- Clean the charging port area gently with a dry, soft brush if dust or debris accumulates.

Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid storing them in humid environments or where they might be exposed to excessive dust.
- Do not bend or twist the neckband excessively during storage.



Rated IPX6 for sweat and water resistance.



IPX6 Waterproof design for durability.

Troubleshooting

If you encounter any issues with your DEWALT headphones, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully using the provided Type C cable.


Problem	Possible Cause	Solution
Cannot pair with device.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing LED). Turn device Bluetooth off/on. Move headphones closer to the device (within 10 meters).
No sound or low volume.	Volume too low on headphones or device; headphones not connected.	Increase volume on both headphones and connected device. Re-pair the headphones if disconnected.
Poor call quality.	Weak signal; excessive background noise.	Move closer to the connected device. Ensure microphone is not obstructed. cVc 8.0 Noise Reduction is active, but extreme noise may still affect clarity.
Headphones disconnect frequently.	Out of range; interference.	Stay within 10 meters of your connected device. Avoid strong electromagnetic interference.

Specifications

Feature	Detail
Model Name	DEWALT Jobsite Pro Neckband Earphones
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.0
Bluetooth Range	10 Meters
Noise Control	Sound Isolation (cVc 8.0 Noise Reduction)
Battery Life	15 Hours (Note: Product description states 30+ hours, refer to latest product packaging for most accurate runtime)
Charging Time	2 Hours
Water Resistance Level	IPX6 (Sweat and Water Resistant)
Headphones Jack	USB Type C
Item Weight	56.7 Grams
Material	Plastic
Manufacturer	E-filliate Inc.
UPC	826341046398

Warranty & Support

Your DEWALT Heavy Duty Bluetooth Neckband Headphones come with a manufacturer's warranty. Please refer to the included User Manual for detailed warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the seller or manufacturer directly.
If purchased on Amazon, you can typically contact the seller through your order details page. Look for an option like "Ask a question" or "Contact Seller".

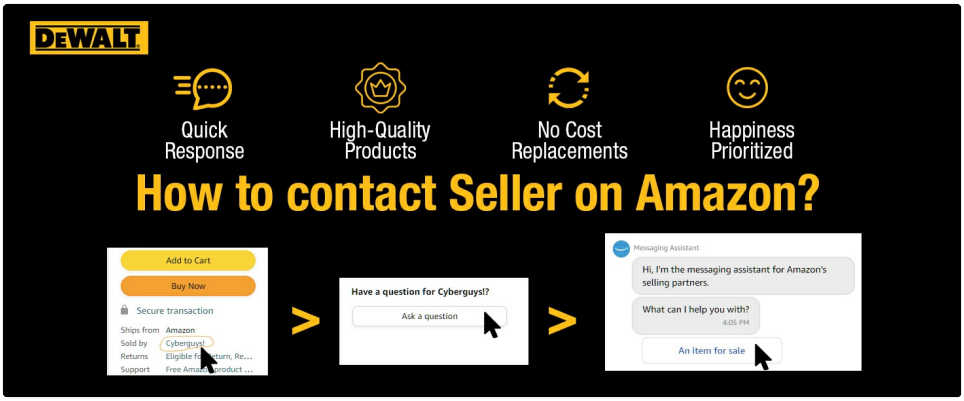

Guide on how to contact the seller on Amazon for support.

Official Product Videos

There are no official product videos from the seller available for embedding at this time.

© 2025 DEWALT. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question