Nutale F7X

Nutale Bluetooth Key Finder F7X Instruction Manual

Model: F7X

1. Introduction

The Nutale Bluetooth Key Finder F7X is a compact device designed to help you locate misplaced items such as keys, wallets, pets, or backpacks. It connects to your smartphone via Bluetooth and utilizes the Nut App to provide various tracking and alert functionalities. This manual provides detailed instructions for setting up, operating, and maintaining your Nutale Key Finder.

2. What's in the Box

- Nutale Bluetooth Key Finder (4 units: 2 White, 2 Gray)
- Keychains (4 units)
- CR2032 Batteries (pre-installed or included separately)
- User Manual (this document)



Image: Contents of the Nutale Key Finder package, showing four key finders with keychains and four additional trackers.

3. Product Overview

The Nutale Key Finder F7X is a small, square-shaped device with a textured surface, designed for easy attachment to various items. It features a single button for interaction and houses a replaceable CR2032 battery. Its compact size (1.5 x 1.5 x 0.28 inches) makes it discreet and portable.

4. Getting Started

4.1 App Installation

1. Download the **Nut App** from the Apple App Store (for iOS devices) or Google Play Store (for Android devices).

2. Install the app on your smartphone.
3. Follow the on-screen instructions to create an account or log in.



Image: The Nut App interface on a smartphone, showing item tracking, with links to download the app.

4.2 Device Pairing

1. Ensure Bluetooth is enabled on your smartphone.
2. Open the Nut App.
3. Press and hold the button on your Nutale Key Finder until you hear a beep or see an indicator light (if applicable).
4. In the Nut App, tap the '+' icon or the 'Add Device' option to search for nearby key finders.
5. Select your Nutale Key Finder from the list of discovered devices to complete the pairing process.
6. You can rename your device within the app (e.g., "Keys," "Wallet," "Pet").

5. Operating Instructions

5.1 One-Touch Find (Locating Items)

To find an item attached to your Nutale Key Finder:

1. Open the Nut App on your smartphone.
2. Select the desired key finder from your device list.
3. Tap the "CALL" button within the app. Your Nutale Key Finder will emit an audible ring, helping you locate the item.

5.2 Find Your Phone

If you cannot find your smartphone, even if it's on silent mode:

- Double-press the button on your Nutale Key Finder. Your phone will ring, allowing you to locate it quickly.



Image: Visual guide for using the Nutale Key Finder's 'One-click search' and 'Find the Phone' features.

5.3 Location Record Locator

The Nut App automatically records the last connected location of your key finder. If an item goes out of Bluetooth range, the app will mark its last known position on a map, assisting you in narrowing down your search area.

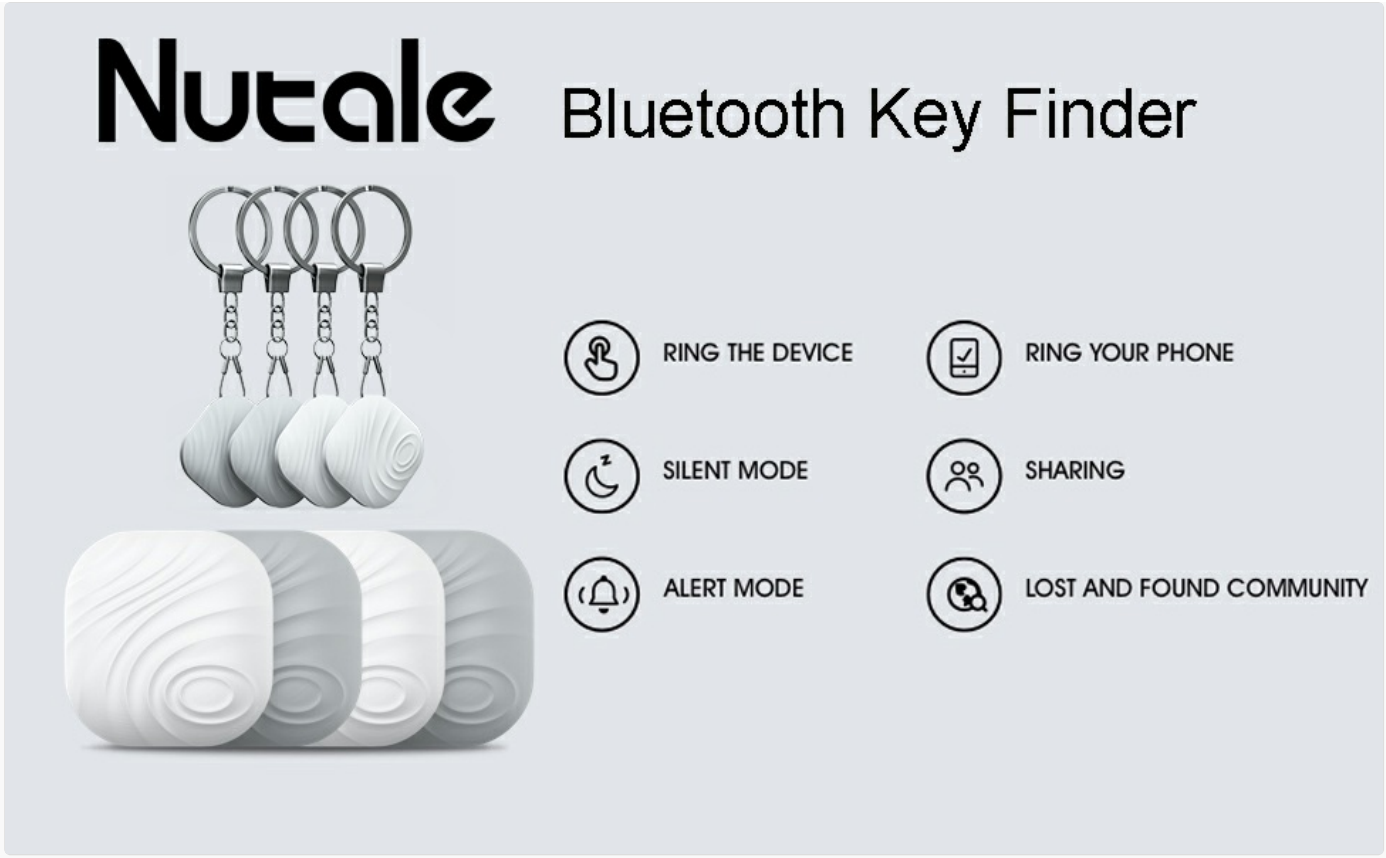


Image: The Nut App's map feature showing the last known location and community search capabilities.

5.4 Additional Features

- **Silent Mode:** Configure the device to not ring during specific times or locations.
- **Alert Mode:** Receive notifications if you leave an item behind or if it moves out of range.
- **Sharing:** Share access to your key finders with trusted family members or friends through the app.
- **Lost and Found Community:** Leverage the Nutale community to help locate items that are far away. If another Nutale user comes within range of your lost item, its location can be anonymously updated in your app.



Image: Overview of the Nutale Key Finder's main features.

6. Battery Replacement

The Nutale Key Finder uses a standard CR2032 coin cell battery, which typically lasts up to 10 months. When the battery is low, the app will notify you. Follow these steps to replace the battery:

1. Locate the small gap on the side of the key finder.
2. Carefully insert a thin tool (like a guitar pick or a small flat-head screwdriver) into the gap and gently pry open the device's shell.
3. Remove the old CR2032 battery.
4. Insert a new CR2032 battery with the positive (+) side facing up.

5. Align the two halves of the shell and press them firmly together until they click into place, ensuring all sides are tightly sealed.
6. Long press the button on the device to hear the boot-up sound, confirming it is powered on.

Your browser does not support the video tag.

Video: A demonstration of how to replace the battery in the Nutale Key Finder. It shows opening the device, removing the old battery, inserting a new CR2032 battery with the positive side up, closing the device, and powering it on.

7. Specifications

Feature	Detail
Model Number	F7X
Product Dimensions	1.5 x 1.5 x 0.28 inches (3.81 x 3.81 x 0.71 cm)
Item Weight	3.84 ounces (108.86 grams)
Connectivity Technology	Bluetooth
Power Source	CR2032 Battery
Battery Life	Up to 10 months
Material	Plastic
Compatible Devices	iOS and Android smartphones/tablets

8. Troubleshooting

- **Device not connecting to app:**
  Ensure Bluetooth is enabled on your phone. Make sure the key finder's battery is not depleted. Try restarting both the key finder (by removing and reinserting the battery) and the Nut App. Ensure your phone's operating system is up to date.
- **Key finder not ringing:**
  Check the volume settings within the Nut App for the specific device. Ensure the key finder is within Bluetooth range of your phone. Verify the battery level.
- **Phone not ringing when key finder button is pressed:**
  Ensure the Nut App has the necessary permissions to play sounds or override silent mode on your phone. Check the app settings for the 'Find Your Phone' feature.
- **Inaccurate location tracking:**
  Location accuracy depends on GPS availability and Bluetooth signal strength. Ensure your phone's location services are enabled for the Nut App. The 'last connected location' is an approximation.
- **Short battery life:**
  Ensure you are using a fresh, high-quality CR2032 battery. Frequent use of the ringing feature or being constantly out of range can slightly reduce battery life.

9. Safety Information

- Keep the device and batteries out of reach of small children and pets. Swallowing coin cell batteries can be dangerous.
- Do not expose the device to extreme temperatures, direct sunlight, or water.
- Do not attempt to disassemble or modify the device beyond battery replacement.
- Dispose of used batteries responsibly according to local regulations.

10. Warranty and Support

Nutale products are designed for reliability and performance. For technical support, warranty information, or any questions regarding your Nutale Key Finder, please refer to the contact information provided with your product packaging or visit the official Nutale website. Life-time technical support is typically offered for this product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question