Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl BP-DLG1200PS

onerbl AC/DC Adapter Instruction Manual

For Duralast Gold 1200 Peak Amps Jump Starter Power Station BP-DLG1200PS

1. Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC/DC Adapter, specifically designed for the Duralast Gold 1200 Peak Amps Jump Starter Power Station (Model BP-DLG1200PS). Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The onerbl AC/DC Adapter. This image displays the main unit of the AC/DC adapter, featuring a standard US wall plug on one

end and a barrel connector on the other, connected by a black cable. The adapter itself is black with ventilation grooves and includes basic input/output specifications printed on its surface.

2. Safety Information

- Ensure the adapter is used with the specified Duralast Gold 1200 Peak Amps Jump Starter Power Station (BP-DLG1200PS) only.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open or modify the adapter. This will void the warranty and may cause damage or injury.
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep out of reach of children.

3. Setup

3.1 Unpacking

1. Carefully remove the onerbl AC/DC Adapter from its packaging.
2. Inspect the adapter and cable for any signs of damage. If damage is present, do not use the product and contact customer support.

3.2 Connecting the Adapter

1. Locate the charging input port on your Duralast Gold 1200 Peak Amps Jump Starter Power Station BP-DLG1200PS.
2. Insert the barrel connector end of the onerbl AC/DC Adapter firmly into the charging input port of the jump starter.
3. Plug the AC wall plug end of the adapter into a standard AC 100-240V wall outlet.



Image 3.2: The onerbl AC/DC Adapter in use. This image shows the black AC/DC adapter plugged into a white power strip or surge protector, which is then connected to a Duralast Gold 1200 Peak Amps Jump Starter Power Station (BP-DLG1200PS) or similar device, indicating the charging process.

4. Operating

4.1 Charging the Duralast Jump Starter

Once the adapter is correctly connected to both the jump starter and a power outlet, the jump starter should begin charging. Refer to your Duralast Gold 1200 Peak Amps Jump Starter Power Station's manual for specific charging indicators (e.g., LED lights, display screen) and expected charging times.

- The adapter provides a stable power supply for efficient charging.
- The adapter is designed with over voltage and over heat protection to ensure safe charging.

5. Maintenance

5.1 Cleaning

- Before cleaning, always unplug the adapter from the wall outlet and the jump starter.
- Wipe the adapter with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

5.2 Storage

- Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid tightly coiling the cable to prevent damage.

6. Troubleshooting

- **Adapter not powering on:**
  - Ensure the adapter is securely plugged into a working wall outlet.
  - Check if the wall outlet is functional by plugging in another device.
  - Verify that the barrel connector is fully inserted into the jump starter's charging port.
- **Jump Starter not charging:**
  - Confirm all connections are secure.
  - Refer to your Duralast Jump Starter's manual for specific charging instructions and indicators.
  - If the issue persists, the jump starter itself may require service.
- **Adapter feels warm:**
  - It is normal for the adapter to feel slightly warm during operation.
  - The adapter includes over heat protection. If it becomes excessively hot, unplug it immediately and contact support.

7. Specifications

Feature	Detail
Brand	onerbl
Input Voltage	AC 100-240V, 50/61Hz Auto (Worldwide AC Input)
Product Dimensions	6 x 4 x 2 inches (approximate adapter body dimensions)
Item Weight	8 ounces
Protections	Over Voltage Protection, Over Heat Protection
Compatibility	Duralast Gold 1200 Peak Amps Jump Starter Power Station BP-DLG1200PS

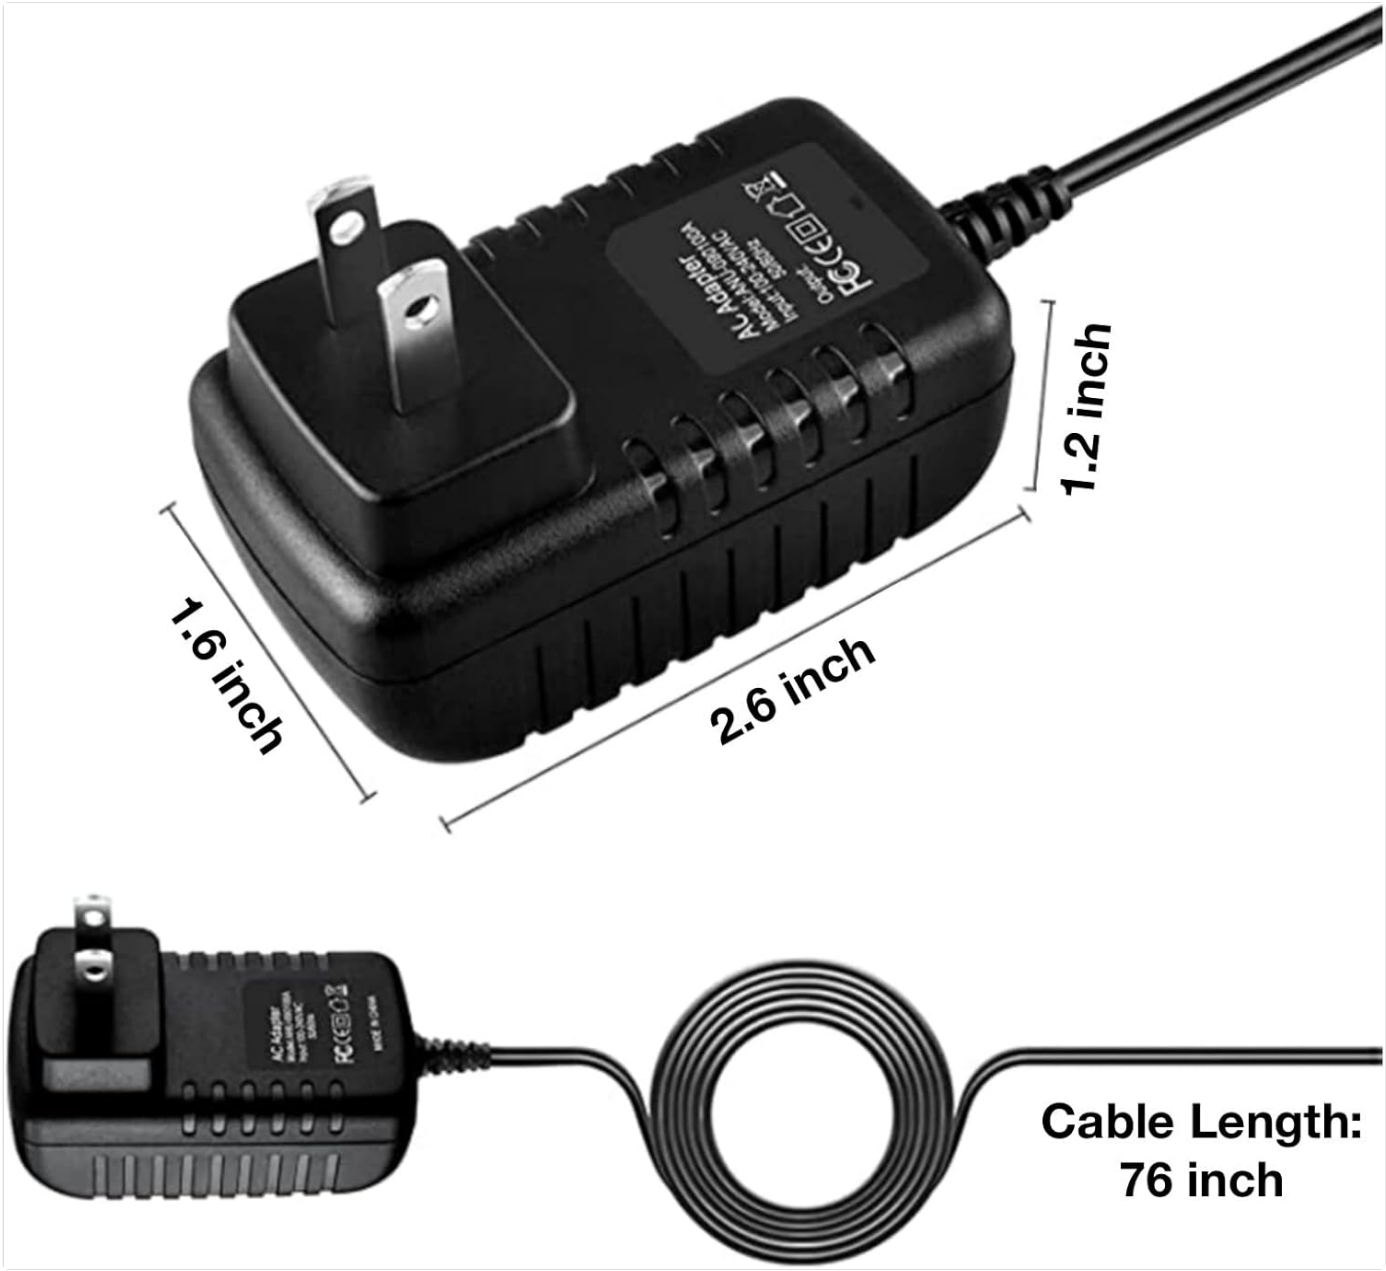


Image 7.1: Dimensions and Cable Length of the onerbl AC/DC Adapter. This image illustrates the physical dimensions of the adapter body (approximately 2.6 inches long, 1.6 inches wide, 1.2 inches thick) and indicates a cable length of 76 inches.

8. Warranty and Support

This onerbl AC/DC Adapter is a high-quality replacement unit. For specific warranty details, please refer to the documentation provided at the time of purchase or contact the seller directly. For technical support or inquiries, please reach out to the onerbl customer service team via the contact information provided with your purchase.
The product is tested and confirmed to be in great working condition, featuring built-in over voltage and over heat protection for reliability.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B151FFPQ

More documents and user manuals: **https://manuals.plus/**