Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl A30610Q

onerbl AC Adapter Instruction Manual

For Wahl Clipper Models 8552, 8554, and 8745 (A30610Q Compatible)

1. Introduction

This manual provides essential instructions for the safe and effective use of your onerbl AC Adapter. Please read this manual thoroughly before using the product and retain it for future reference. This adapter is designed as a replacement power supply for specific Wahl Clipper models.

2. Product Overview

The onerbl AC Adapter is a high-quality replacement power supply designed to provide reliable power to your compatible Wahl clippers. It features a robust design and incorporates safety mechanisms to protect your devices.



Image 2.1: Front view of the onerbl AC Adapter with its power cord.

Key Features:

- **Input:** AC 100-240V, 50/60Hz (Worldwide AC Input)
- **Safety Protections:** Over Voltage Protection, Over Heat Protection, Short-Circuit Protection, Over-Current Protection.
- **Durable Construction:** Features copper wire and a PVC jacket for enhanced longevity.



Image 2.2: Illustration of the adapter's built-in safety features, including protection against short-circuits, over-voltage, and over-current.

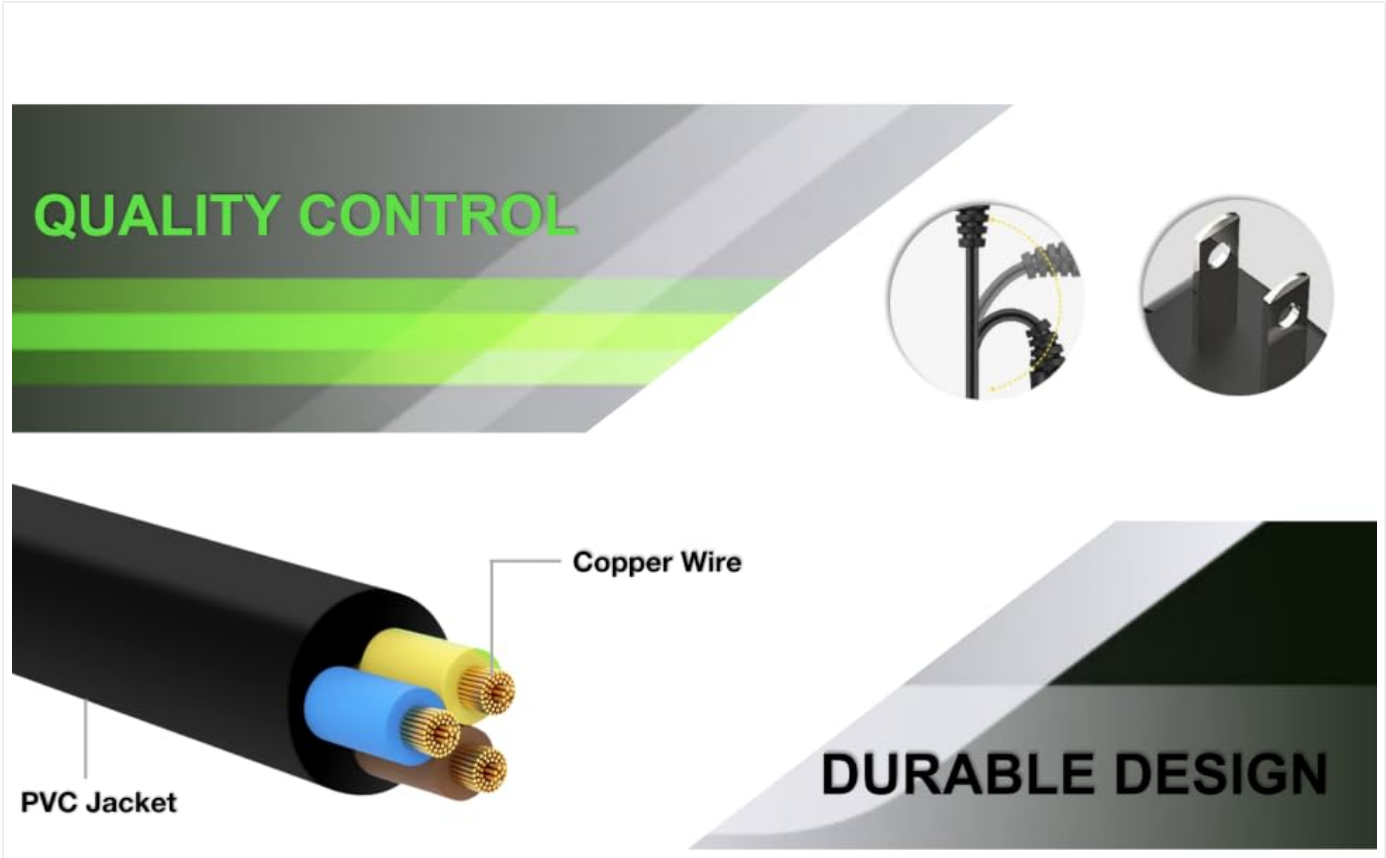


Image 2.3: Details on the durable design, highlighting the copper wire and PVC jacket construction.

3. Compatibility

This onerbl AC Adapter (Model A30610Q compatible) is specifically designed for use with the following Wahl Clipper models:

- Wahl Clipper 8552
- Wahl Clipper 8554
- Wahl Clipper 8745

Ensure your clipper model matches one of the listed compatible models before use.

4. Safety Information

Please observe the following safety precautions to prevent injury or damage to the product and connected devices:

- Do not expose the adapter to water or excessive moisture.
- Do not disassemble or attempt to repair the adapter. Refer servicing to qualified personnel.
- Avoid using the adapter in extremely hot or cold environments.
- Ensure the adapter is plugged into a properly grounded outlet.
- Do not use if the adapter or cord is damaged.
- Keep out of reach of children.

5. Setup

Follow these steps to set up your onerbl AC Adapter:

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage.
2. **Connect to Clipper:** Insert the barrel connector end of the adapter cable firmly into the charging port of your Wahl Clipper.
3. **Connect to Power Outlet:** Plug the AC adapter into a standard wall outlet (AC 100-240V).



Image 5.1: The AC adapter connected to a power source, demonstrating typical usage.

6. Operating Instructions

Once connected, the adapter will begin to supply power to your Wahl Clipper. The charging indicator on your clipper (if present) should illuminate, indicating that it is receiving power.

- Allow sufficient time for your clipper's battery to fully charge as per its original manufacturer's guidelines.
- Disconnect the adapter from the power outlet and the clipper once charging is complete or when the clipper is not in use.

7. Maintenance

Proper maintenance ensures the longevity and safe operation of your AC adapter:

- **Cleaning:** Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Avoid tightly coiling the cable to prevent damage.

- **Cable Care:** Do not bend, twist, or pull the cable excessively. Avoid placing heavy objects on the cable.

8. Troubleshooting

If you encounter issues with your onerbl AC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper not charging.	• Adapter not properly plugged in. • Clipper charging port issue. • Damaged adapter or cable. • Incompatible clipper model.	• Ensure both ends of the adapter are securely connected. • Verify your clipper model is listed in the compatibility section. • Inspect the adapter and cable for visible damage. If damaged, discontinue use. • Test with another compatible power source if available to rule out clipper issues.
Adapter feels hot during use.	• Normal operation (slight warmth). • Overload or poor ventilation.	• A slight warmth is normal. • Ensure the adapter is in a well-ventilated area. • If it becomes excessively hot, disconnect immediately and contact support.

If the problem persists after trying these solutions, please contact onerbl customer support.

9. Specifications

Model	A30610Q Compatible
Input Voltage	AC 100-240V, 50/60Hz
Output	Refer to adapter label (not explicitly provided)
Connector Type	Barrel Connector
Cable Length	76 inches (approx. 6.3 feet)
Adapter Dimensions (L x W x H)	2.6 x 1.6 x 1.2 inches
Item Weight	8 ounces
Special Feature	Travel-friendly design



Image 9.1: Physical dimensions of the AC adapter and its cable length.

10. Warranty and Support

Specific warranty information for this onerbl AC Adapter is not provided in the product details. For warranty claims or technical support, please refer to the retailer where the product was purchased or contact onerbl customer service directly through their official channels.

Contact Information: Please check the product packaging or the retailer's website for the most current customer support contact details.

© 2026 onerbl. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B152FL9X

More documents and user manuals: **https://manuals.plus/**