Nespresso BNE800BTR1BUS1

Nespresso Creatista Plus Espresso Machine User Manual

Model: BNE800BTR1BUS1 | Brand: Nespresso by Breville

Introduction

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your Nespresso Creatista Plus Espresso Machine. Please read this manual thoroughly before first use and keep it for future reference. This machine is designed to brew high-quality coffee and espresso, and to froth milk for various coffee beverages.

Important Safety Instructions

- Always connect the machine to a grounded power outlet.
- Do not immerse the machine, power cord, or plug in water or other liquids.
- Keep hands and cords away from hot surfaces and steam.
- Unplug the machine before cleaning and when not in use for extended periods.
- Ensure the water tank is filled with fresh, potable water before operation.
- Use only Nespresso OriginalLine capsules with this machine.

Setup Guide

1. Unboxing and Initial Placement

Carefully remove the machine from its packaging. Place the machine on a stable, flat, heat-resistant surface, away from water splashes and heat sources. Ensure adequate space around the machine for ventilation and access to the water tank and capsule container.



Image: The Nespresso Creatista Plus Espresso Machine in Black Truffle, showcasing its sleek design and compact footprint, ready for placement on a countertop.

2. Filling the Water Tank

Remove the 1.5L removable water tank from the back of the machine. Fill it with fresh, potable water up to the 'MAX' level

indicator. Replace the water tank securely in its position.



Image: A rear-angled view of the Nespresso Creatista Plus, highlighting the transparent water tank on the left side, indicating its removable nature for easy refilling.

3. Power Connection and Initial Rinse

Plug the machine into a suitable power outlet. The machine heats up in less than 3 seconds. Before first use, or after a long period of inactivity, perform an initial rinse cycle without a capsule to clean the internal system. Refer to the display for guided instructions.

Operating Instructions

1. Machine Overview and Display

The Nespresso Creatista Plus features an intuitive TFT LCD display that guides you through preparation settings and maintenance. Use the dial and buttons to navigate the menu and select your desired beverage.





Image: An overhead view of the Nespresso Creatista Plus, focusing on the top panel with the LCD display showing a 'Café Latte' selection, and the control dial and buttons.

2. Brewing Coffee and Espresso

1. Ensure the water tank is filled.
2. Lift the lever and insert a Nespresso OriginalLine capsule into the capsule slot. Close the lever.
3. Place a cup on the drip tray. Adjust the pop-out cup shelf if using a smaller cup.
4. Select your desired coffee or espresso type from the display (e.g., Ristretto, Espresso, Lungo).
5. Press the start button to begin brewing.





Image: A direct front view of the Nespresso Creatista Plus, showing an espresso shot being brewed into a clear glass cup, with the stainless steel milk jug positioned next to it.



Image: A hand reaching to press a button on the top panel of the Nespresso Creatista Plus, demonstrating the user interaction with the machine's controls.

3. Integrated Milk Frother

The Creatista Plus features an automatic built-in steam wand for milk frothing, allowing for latte art creation. It offers 8 texture levels and 11 temperature settings (55-76°C / 133-169°F).

1. Fill the included stainless steel milk jug with fresh, cold milk.
2. Place the milk jug under the steam wand.
3. Select your desired milk texture and temperature on the display.
4. The machine will automatically froth the milk to your specifications. The steam wand auto-purges after each use for cleanliness.

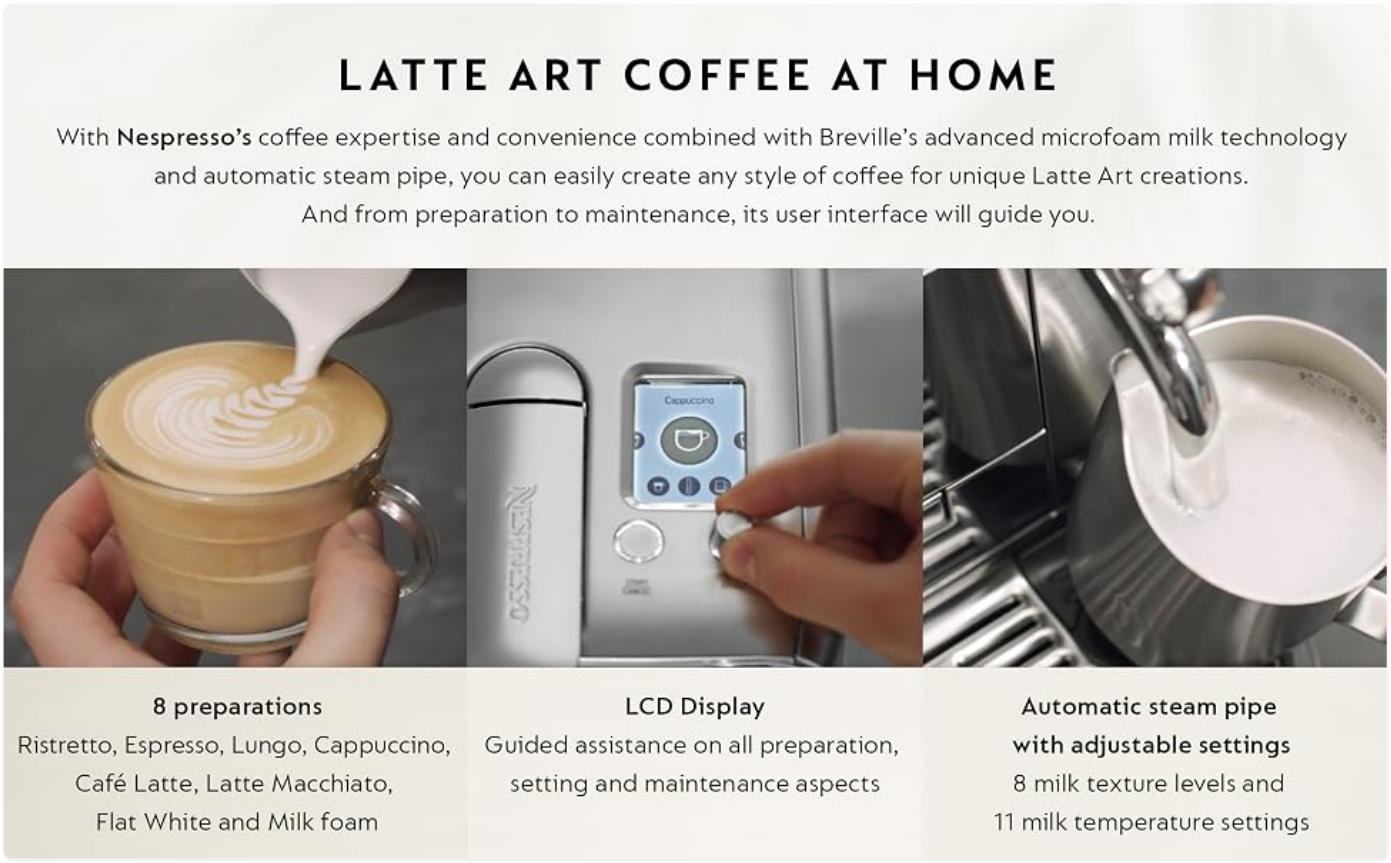


Image: A visual representation of the Creatista Plus's capabilities, illustrating the 8 available coffee preparations, the guiding LCD display, and the automatic steam pipe with adjustable settings for milk texture and temperature.

4. Beverage Options

The Creatista Plus offers a range of pre-programmed coffee and milk-based recipes:

- Ristretto (25 ml / 0.85 oz)
- Espresso (40 ml / 1.35 oz)
- Lungo (110 ml / 3.7 oz)
- Caffè Latte (350 ml / 11.8 oz)
- Cappuccino (100 ml or 85 ml / 3.35 oz or 2.85 oz)
- Latte Macchiato (160 ml / 5.35 oz)
- Flat White (180 ml / 6 oz)
- Milk foam only



Image: A visual guide to different Nespresso cup options, including Latte Macchiato, Caffè Latte, Ristretto, Cappuccino, Flat White, Espresso, and Lungo, with their respective recommended volumes.

Maintenance and Cleaning

1. Daily Cleaning

- **Drip Tray and Used Capsule Container:** Empty and rinse the drip tray and used capsule container daily. The drip tray has a sensor that alerts you when it needs emptying.
- **Milk Jug and Steam Wand:** After each use, the steam wand performs an auto-purge. Wipe the steam wand with a damp cloth immediately after frothing milk. Clean the stainless steel milk jug with warm soapy water.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

2. Descaling

The machine will indicate when descaling is required via the LCD display. Regular descaling is crucial to maintain machine performance and coffee quality. Use only the Nespresso descaling solution and follow the instructions provided on the display or with the descaling kit.

3. Capsule Recycling

Nespresso aluminum capsules are recyclable. Collect used capsules and return them to Nespresso through their recycling program. This helps protect the environment and ensures sustainable practices.



Image: A visual representation of Nespresso's recycling initiative, showing used capsules and a person collecting coffee cherries, emphasizing the circularity and sustainability of the process.

Troubleshooting

Problem	Possible Cause	Solution
No coffee flow / Machine not starting	Water tank empty; Machine not preheated; Capsule not inserted correctly.	Fill water tank; Wait for machine to heat up (approx. 3 seconds); Ensure capsule is properly seated and lever is closed.
Weak coffee / Little crema	Machine needs descaling; Incorrect capsule type; Water quality.	Perform descaling procedure; Ensure use of Nespresso OriginalLine capsules; Use fresh, filtered water.
Milk not frothing correctly	Steam wand blocked; Milk jug not clean; Incorrect milk type/temperature.	Clean steam wand thoroughly; Ensure milk jug is clean; Use fresh, cold milk (dairy or suitable non-dairy).
Machine leaking	Water tank not seated correctly; Drip tray full.	Re-seat water tank firmly; Empty and clean drip tray.

If the problem persists after attempting these solutions, please contact Nespresso Customer Service for further assistance.

Technical Specifications

Model Name: Creatista Plus

Model Number: BNE800BTR1BUS1

Brand: Nespresso by Breville

Color: Black Truffle

Product Dimensions (D x W x H): 15.47" x 6.73" x 12.13"

Item Weight: 12.04 pounds

Voltage: 120.0 V

Power: 1300-1600 Watts

Pressure: 19 bars

Water Tank Capacity: 1.5 L

Heat-up Time: Less than 3 seconds

Automatic Off Mode: After 9 minutes of inactivity

Included Components: Stainless Steel Milk Jug, Tasting Box of Nespresso Capsules

Human Interface Input: Buttons, TFT LCD Display

UPC: 021614800527

Warranty Information

Your Nespresso Creatista Plus Espresso Machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

Optional Protection Plans

Extended protection plans may be available for purchase to provide additional coverage beyond the standard manufacturer's warranty. These plans typically cover repairs or replacements for a specified duration.

- **3-Year Protection Plan:** Extends coverage for 3 years.
- **4-Year Protection Plan:** Extends coverage for 4 years.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

For details on purchasing these plans, please consult your retailer or the Nespresso website.

Customer Support

For any questions, assistance, or to order Nespresso capsules, please contact Nespresso Customer Service. They can provide support for machine operation, troubleshooting, descaling, and recycling.

Nespresso Official Website: www.nespresso.com

Nespresso Store on Amazon: Visit the Nespresso Store

Phone Support: Refer to your local Nespresso website for country-specific contact numbers.

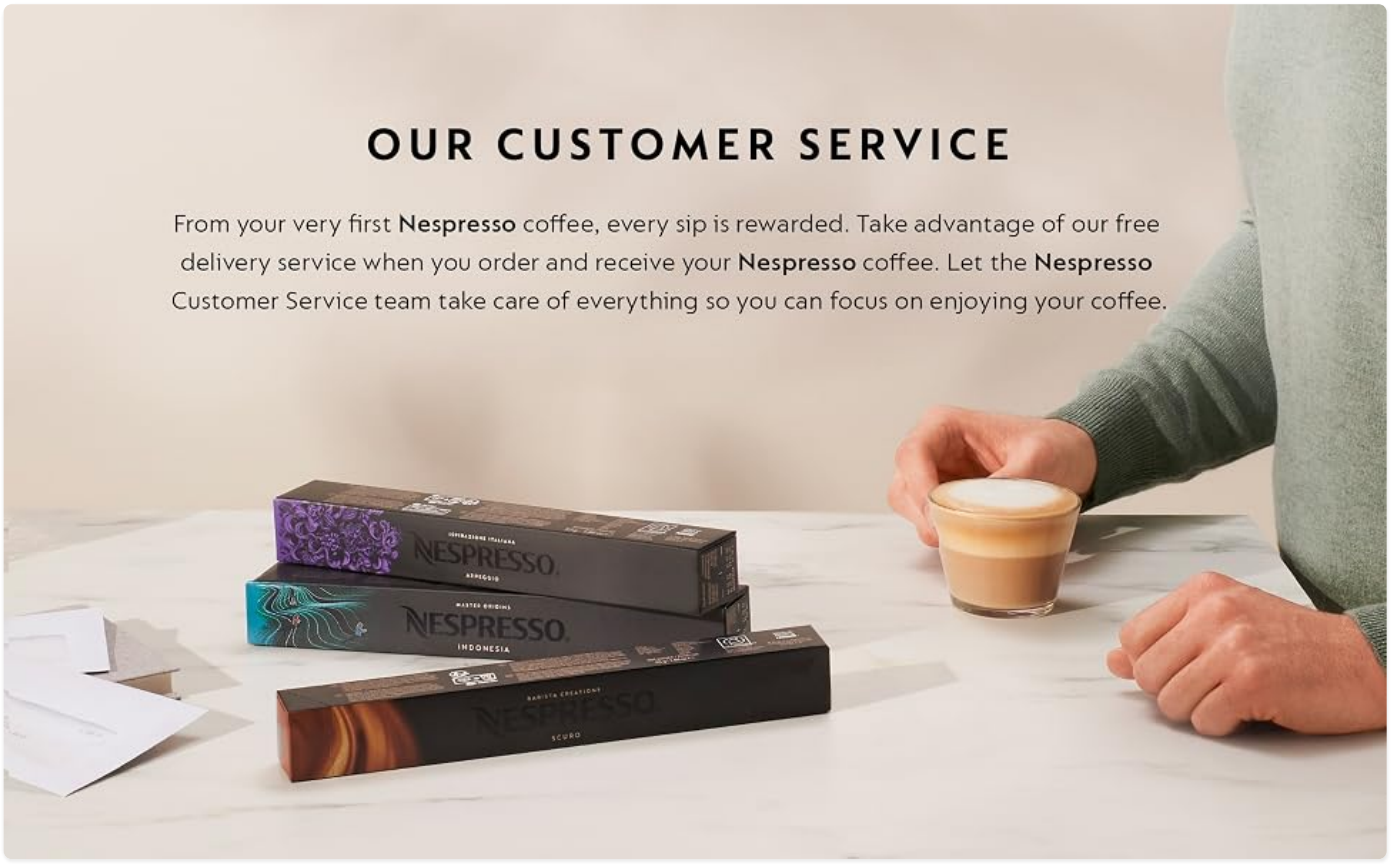


Image: An image depicting Nespresso coffee boxes and a prepared coffee cup, symbolizing the support available for enjoying your Nespresso experience.

© 2025 Nespresso. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question