Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

JVC LT-24VAH305D

JVC LT-24VAH305D Smart TV User Manual

Model: LT-24VAH305D

Introduction

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your JVC LT-24VAH305D Smart TV. Please read this manual thoroughly before using your television to ensure proper and safe operation.

Setup Guide

Unpacking and Initial Inspection

Carefully remove the TV from its packaging. Inspect the TV and all accessories for any signs of damage. Keep the original packaging for future transport or service needs.

Package Contents

- JVC LT-24VAH305D Smart TV
- Remote Control
- Power Cord
- User Manual (this document)
- TV Stand (2 pieces) and Screws

Attaching the TV Stand

If you are not wall-mounting the TV, attach the included stand feet:

1. Place the TV face down on a soft, flat surface to prevent screen damage.
2. Align each stand foot with the corresponding slots on the bottom of the TV.
3. Secure each foot with the provided screws. Ensure they are tightened firmly.


Connecting Power and Antennas

- Connect the power cord to the TV's power input and then to a wall outlet.
- For DVB-T2 reception, connect a coaxial cable from your antenna to the "ANT IN" port on the TV.

First Time Setup Wizard

Upon first power-on, the TV will guide you through the initial setup process. This includes:

- Language selection
- Network connection (Wi-Fi or Ethernet)
- Google account sign-in (optional, but recommended for full Android TV features)
- Channel scanning (DVB-T/DVB-T2)
- Time zone and date settings

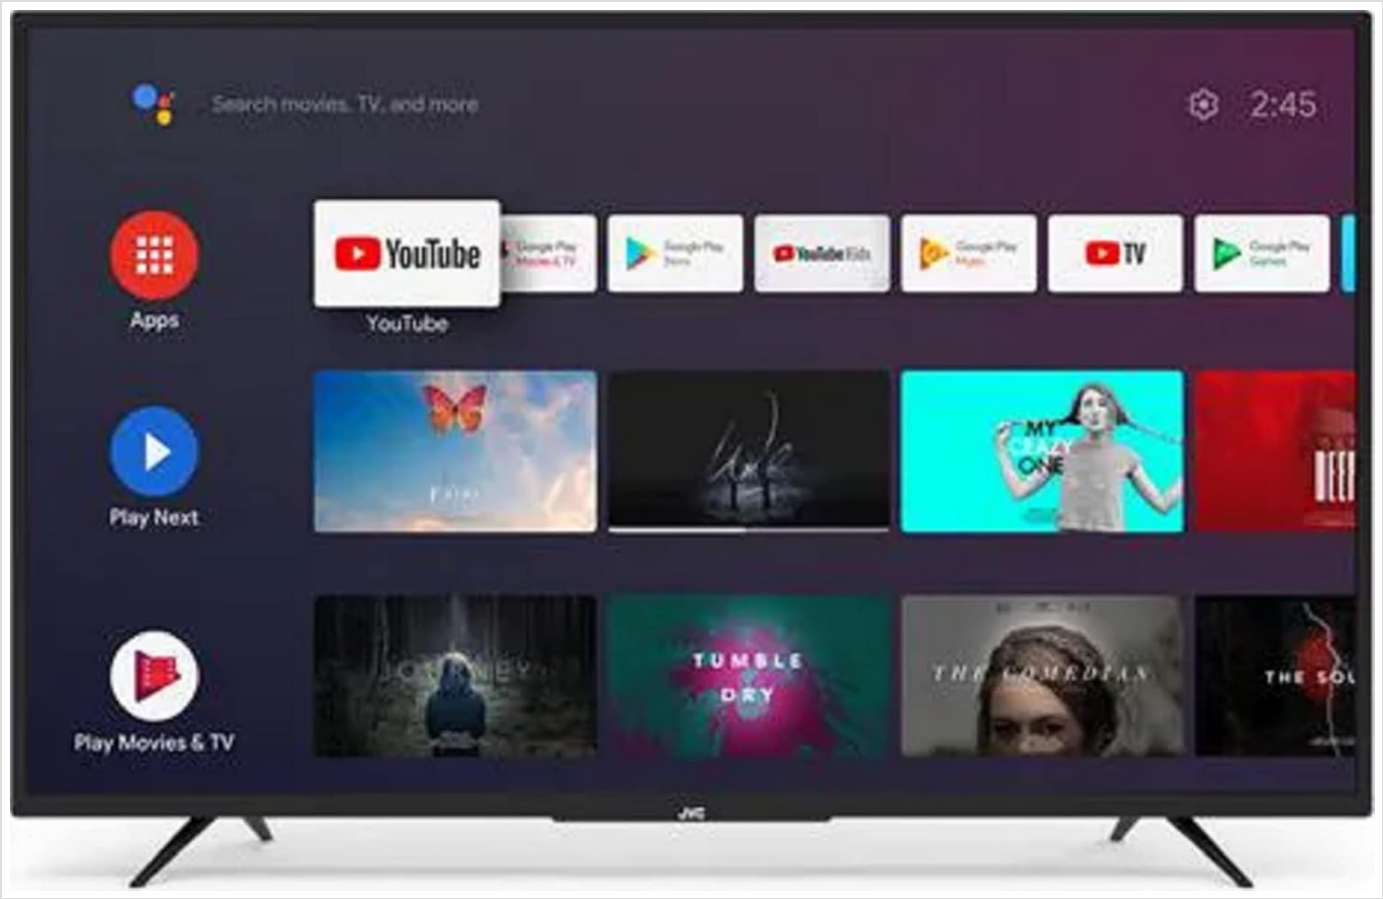

This image shows the JVC LT-24VAH305D Smart TV from the front. The screen is active, displaying the Android TV user interface. Key elements visible include the 'Search movies, TV, and more' bar at the top, app icons such as 'Apps', 'YouTube', 'Google Play Movies & TV', 'Google Play Store', 'YouTube Kids', and 'Google Play Games'. Below these, content recommendations are displayed, including 'Play Next' and 'Play Movies & TV' sections. The time '2:45' is visible in the top right corner. The TV itself is black with two dark grey V-shaped feet at the bottom.

Operating Instructions

Remote Control Overview

Familiarize yourself with the remote control buttons for navigation, volume, channel selection, and smart TV functions.

Basic TV Functions

- **Power On/Off:** Press the power button on the remote or TV.
- **Channel Selection:** Use the CH+/- buttons or number pad.
- **Volume Adjustment:** Use the VOL+/- buttons.
- **Input Source:** Press the "Source" button to switch between HDMI, AV, TV, etc.

Android TV Features

- **Home Screen:** Access apps, content recommendations, and settings.
- **Google Assistant:** Use voice commands by pressing the Google Assistant button on the remote.
- **App Installation:** Download apps from the Google Play Store.
- **Casting:** Cast content from compatible devices using Chromecast built-in.
- **HbbTV:** Access interactive services on compatible broadcast channels.

Network Connectivity

Your TV supports both Wi-Fi and Ethernet connections for internet access. Navigate to *Settings > Network & Internet* to configure your connection.

Maintenance

Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Do not use abrasive cleaners or solvents.

Software Updates

Ensure your TV's software is up to date for optimal performance and security. Navigate to *Settings > Device Preferences > About > System update* to check for and install updates.

Storage and Transport

If storing or transporting the TV, use the original packaging to protect it from damage.

Troubleshooting

This section addresses common issues you might encounter. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
No Power	Power cord not connected; outlet not working.	Check power cord connection; test outlet with another device.
No Picture/Sound	Incorrect input source; loose cable connection.	Verify input source; check HDMI/AV cable connections.
Remote Control Not Working	Dead batteries; obstruction.	Replace batteries; remove obstructions between remote and TV.
Cannot Connect to Wi-Fi	Incorrect password; router issue; TV too far from router.	Re-enter password; restart router; move TV closer or use Ethernet.

Technical Specifications

Feature	Detail
Model Name	LT-24VAH305D

Feature	Detail
Brand	JVC
Screen Size	24 Inches
Display Technology	LED
Resolution	1366 x 768 pixels (HD)
Operating System	Android TV
Tuner Technology	DVB-T, DVB-T2
Connectivity	Bluetooth, Ethernet, HDMI, USB, VGA, Wi-Fi
Additional Features	HbbTV, Internet Browser, Netflix
Aspect Ratio	16:9
Total USB Ports	1
Model Year	2021

Warranty and Support

Warranty Information

Your JVC LT-24VAH305D Smart TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, service requests, or further inquiries, please contact JVC customer support. Contact details can typically be found on the JVC official website or on the warranty card.
Note: Do not attempt to repair the TV yourself. Unauthorized repairs will void the warranty.

© 2024 JVC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B1VQWCL5

More documents and user manuals: **https://manuals.plus/**