Veise KS02A

Veise Fingerprint Door Lock User Manual

Model: KS02A

Introduction

Thank you for choosing the Veise Fingerprint Door Lock. This smart deadbolt provides advanced security and convenient access to your home. It integrates multiple unlocking methods, robust security features, and is designed for straightforward installation and reliable performance.
Key features include:

- **Fingerprint Unlock:** Identifies your fingerprint within 0.3 seconds with a 99.99% recognition rate.
- **4-in-1 Unlock Methods:** Supports up to 20 fingerprints, 20 passwords, 2 spare keys, and one-time passwords for temporary visitors.
- **Security Locking:** Features an auto-lock function (10-99 seconds) and a 'One-touch Lock' activated by pressing and holding any key for 2 seconds.
- **Easy Installation:** Designed for quick setup with a screwdriver, compatible with all American standard left- and right-handed doors.
- **Durability:** ANSI Grade 3 standard certification ensures safety and durability.

Setup and Installation

The Veise Fingerprint Door Lock is designed for easy installation, typically requiring only a screwdriver. Before beginning, please ensure your door meets the compatibility requirements.
Door Compatibility Check:

- Hole diameter: 1-2/1" (54mm)
- Minimalist Distance: 1-5/8" (41mm)
- Backset: 2-3/8" or 2-3/4" (60mm or 70mm)
- Bore Diameter: 1" (25mm)
- Door thickness: 1-3/8"-2" (35mm-50mm)



Image: Door dimensions and compatibility for installation.

For detailed step-by-step instructions, please refer to the official Installation Manual PDF provided with your product or available for download from the manufacturer's website.

General Installation Steps:

1. Prepare the door by ensuring the correct hole diameter and backset.
2. Install the latch into the door edge.
3. Mount the exterior assembly onto the door.
4. Install the interior mounting plate.
5. Connect the cable and install the interior assembly.
6. Test the lock's functionality.



Image: Front and back view of the Veise Fingerprint Door Lock.

Operating Instructions

The Veise Fingerprint Door Lock offers multiple convenient ways to unlock and secure your door.

Unlocking the Door

You can unlock the door using one of the following methods:

- **Fingerprint:** Place your registered fingerprint on the sensor. The lock will identify it within 0.3 seconds and unlock.
- **Passcode:** Enter your unique user code on the keypad. The lock supports up to 20 different user codes.
- **One-Time Passwords:** Generate temporary codes for visitors, which are automatically deleted after a single use.
- **Physical Key:** Use one of the two provided spare keys as a traditional backup.

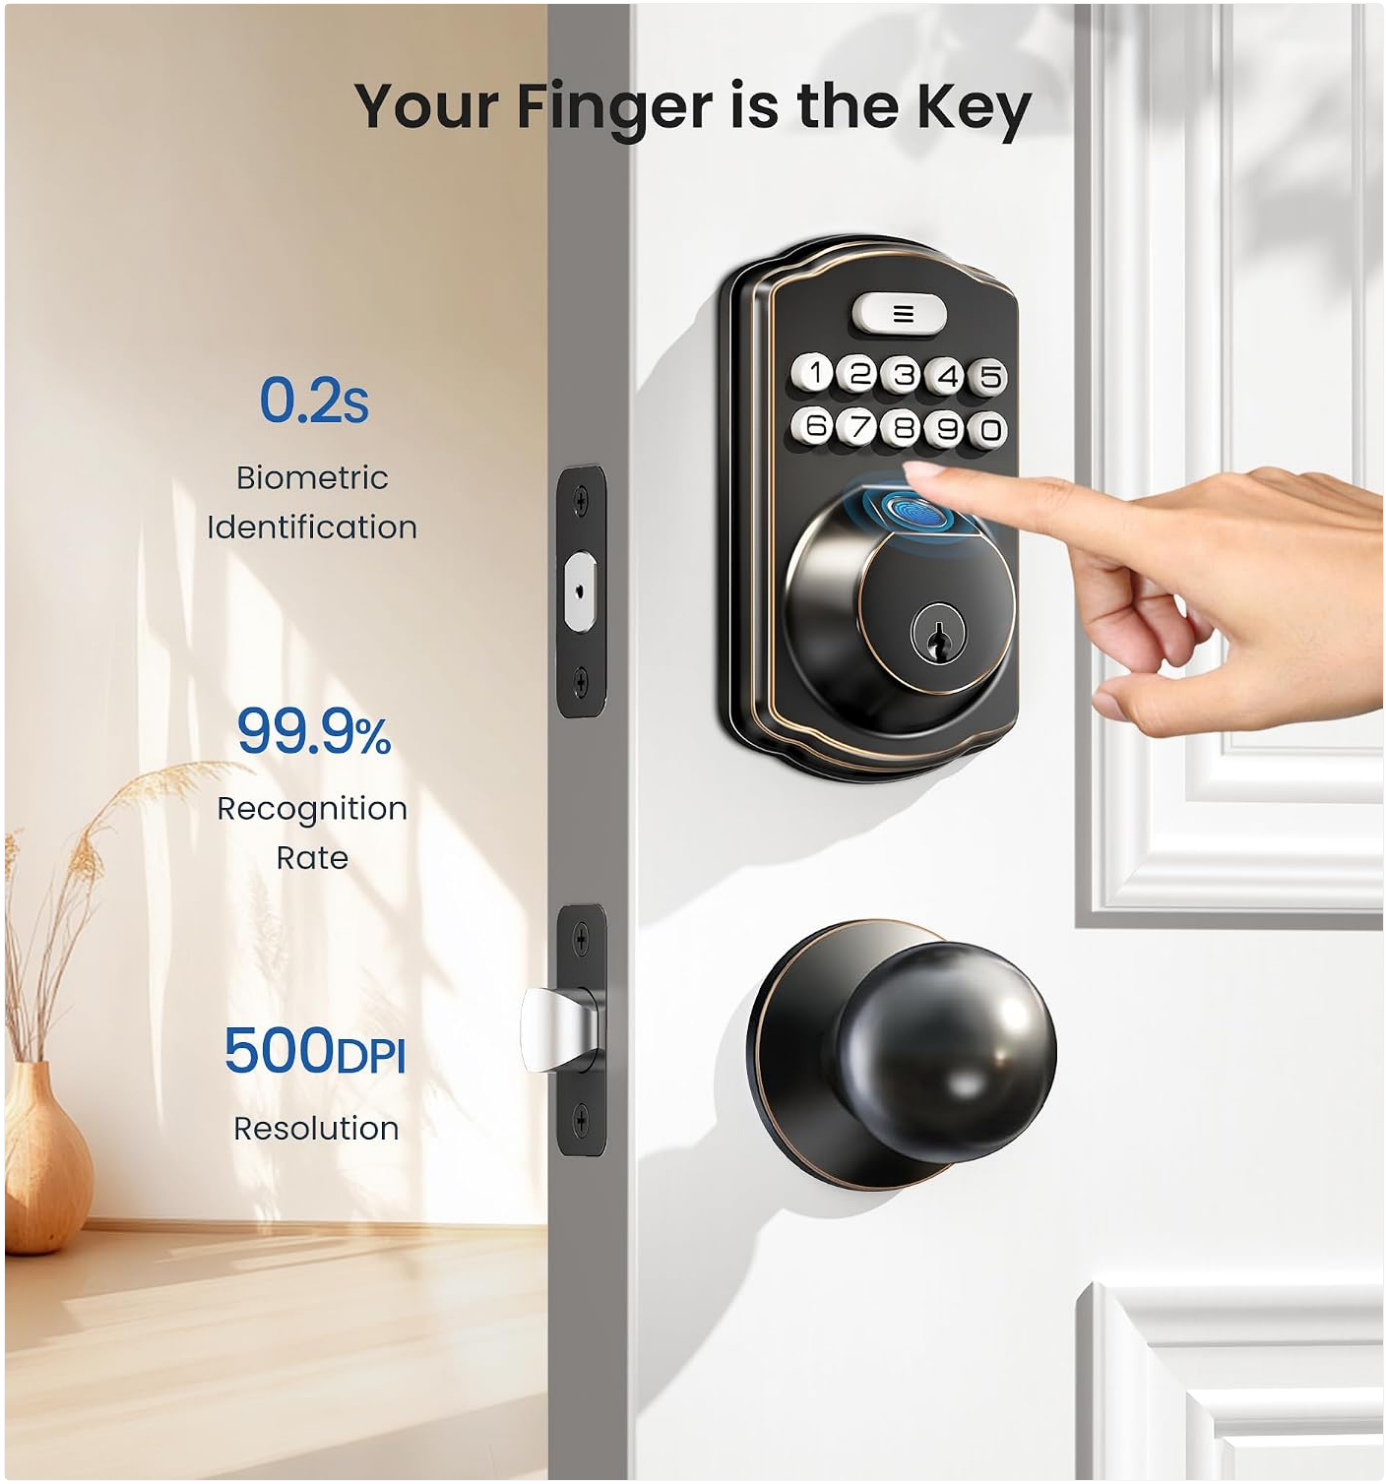


Image: Fingerprint unlocking in action.



Image: Overview of the 4-in-1 unlocking options.

Locking the Door

- **Auto-Lock:** The door lock can be set to automatically lock itself after a period of 10-99 seconds.
- **One-Touch Lock:** Press and hold any key on the keypad for 2 seconds to instantly lock the door.
- **Manual Lock:** From the inside, rotate the knob to lock or unlock the door in 1 second.



Image: Auto-lock feature demonstration.

Maintenance

To ensure optimal performance and longevity of your Veise Fingerprint Door Lock, follow these maintenance guidelines:

- **Battery Replacement:** The lock is battery-powered. Replace batteries when the low battery alert is indicated. The lock is designed for long battery life (365+ days).
- **Cleaning:** Wipe the keypad and fingerprint sensor with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Weather Resistance:** The lock has an IP54 waterproof rating and operates effectively in temperatures from -31°F to 158°F. While durable, avoid direct and prolonged exposure to extreme weather conditions if possible.



Image: Multi-function and security features, including battery life and weather resistance.

Troubleshooting

If you encounter any issues with your Veise Fingerprint Door Lock, please refer to the following common solutions:

- **Fingerprint Not Recognized:** Ensure your finger is clean and dry. Try re-registering your fingerprint if the issue persists. Some users find programming fingerprints twice improves recognition.
- **Keypad Not Responding:** Check the batteries. If the low battery indicator is active, replace the batteries immediately.
- **Door Not Locking/Unlocking:** Verify that the deadbolt is properly aligned with the strike plate. Ensure there are no obstructions.

- **Low Battery Indicator:** The low battery indicator may not be immediately obvious. It is recommended to replace batteries proactively or when any unusual behavior is observed. Always have the physical keys as a backup.

For more complex issues, please contact Veise customer support.

Specifications

Feature	Detail
Brand	Veise
Model Name	KS02A
Lock Type	Keypad, Fingerprint
Material	Aluminum, Metal
Color	Oil Rubbed Bronze
Item Dimensions (L x W x H)	2.71 x 1.2 x 5.47 inches
Item Weight	1.7 pounds
Power Source	Battery-Powered (Batteries not included)
Special Features	20 individual user codes, auto-locking, easy installation, fingerprint unlock, keyed unlock, passcode unlock, one-time access
Certification	ANSI Grade 3 standard
Included Components	2 Backup Keys, Installation Instruction, Fingerprint Door Lock, Latch, Strike, Mounting Plate, Screws, Programming Quick Set Up Guide

Warranty and Support

Veise is committed to providing high-quality products and excellent customer service.

- **Warranty:** Veise offers at least a 1-year warranty on this product.
- **Online Phone Support:** Lifetime online phone support is available from Monday to Friday, 9 AM to 5 PM PST.
- **Email Service:** 24/7 after-sales email service is provided for your convenience.

For further assistance, please refer to the official User Guide PDF or contact Veise customer support directly.

Download User Guide (PDF)

© 2024 Veise. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question