Nespresso EN640B

Nespresso De'Longhi Gran Lattissima EN640.B Automatic Coffee Maker User Manual

Model: EN640B

1. Important Safety Instructions

Please read all instructions carefully before using the Nespresso De'Longhi Gran Lattissima EN640.B coffee maker. Keep this manual for future reference.

- Ensure the appliance is connected to a grounded power outlet with the correct voltage (240 Volts).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep children away from the appliance during operation.
- Do not operate the appliance if the power cord or plug is damaged. Contact authorized service personnel.
- Always unplug the machine before cleaning and when not in use for extended periods.
- Use only Nespresso capsules in this machine.
- Exercise caution with hot surfaces and hot liquids during and after operation.

2. Product Overview

The Nespresso De'Longhi Gran Lattissima EN640.B is an automatic single-serve capsule coffee machine designed to prepare a variety of coffee and milk-based beverages with ease. It features a 19-bar pressure pump system for optimal extraction and an integrated milk system for frothing fresh milk.



The Nespresso De'Longhi Gran Lattissima EN640.B coffee machine, showcasing its sleek black design, integrated milk carafe, and a prepared latte. This machine offers a sophisticated solution for various coffee preparations.




A detailed front view of the Gran Lattissima, highlighting the control panel, coffee spout, and milk frother. The intuitive design allows for easy access to all functions.

2.1 Components

- Water Tank (removable)
- Capsule Container (for used capsules)
- Drip Tray and Grid
- Coffee Outlet
- Milk Carafe with Frother Spout (removable and dishwasher safe)
- Control Panel with One-Touch Recipe Buttons
- Power Button

2.2 Welcome Set

Your machine includes a welcome set of 7 Nespresso capsules, allowing you to explore different coffee styles from espressos to lungos immediately.

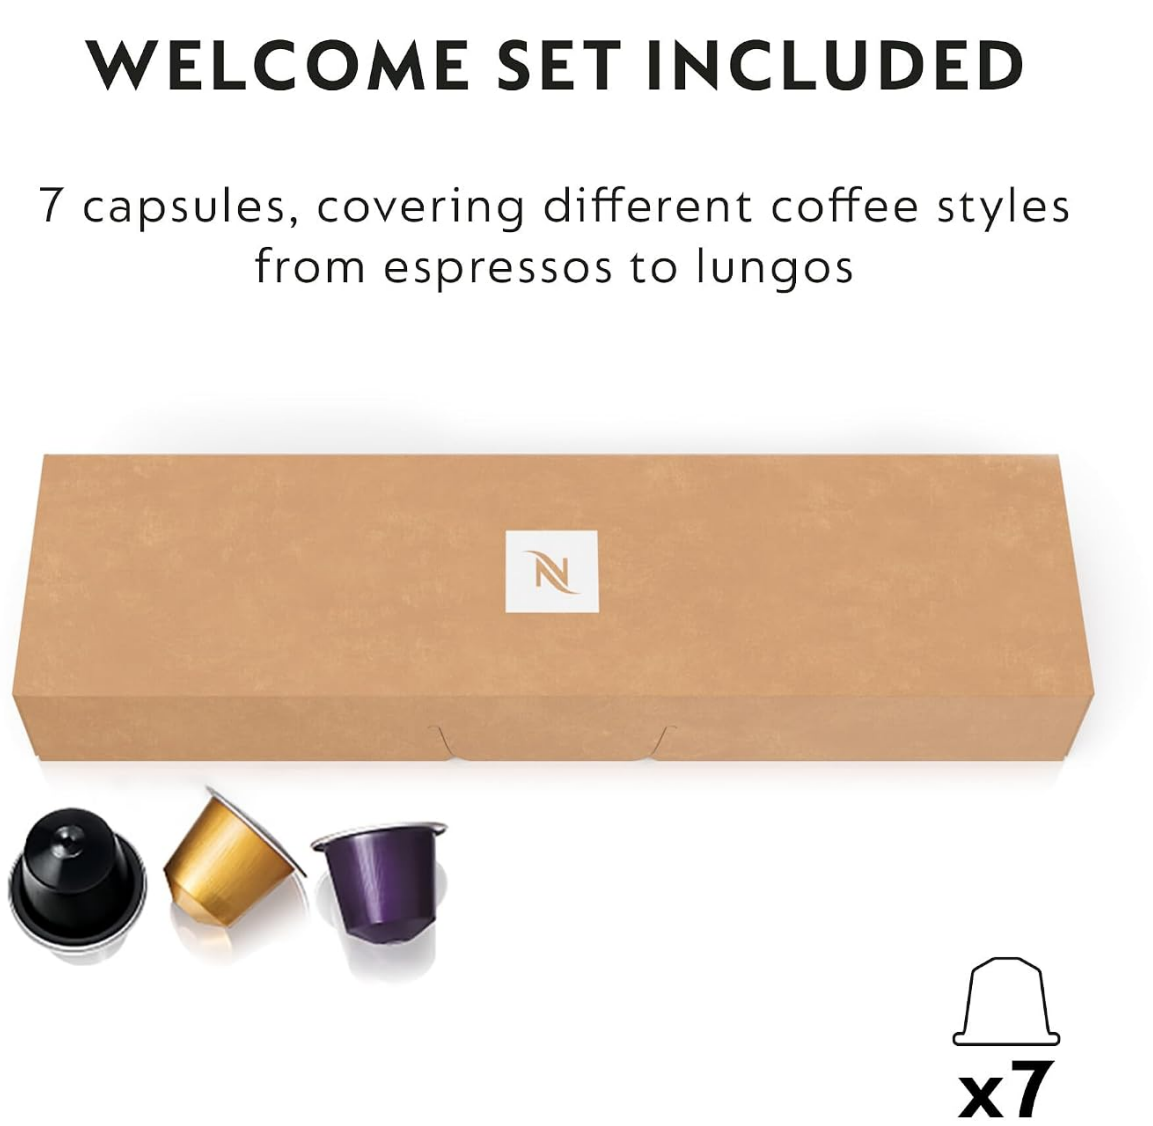

The Nespresso welcome set, including a brown box and seven assorted coffee capsules, provided with the machine to explore different coffee styles.

3. Setup

3.1 Unpacking

1. Remove the machine from its packaging.
2. Place the machine on a stable, flat, heat-resistant surface, away from water splashes and heat sources.
3. Remove all protective films and packaging materials.

3.2 Initial Rinse

Before first use, or after a long period of non-use, rinse the machine to ensure optimal hygiene and coffee quality.

1. Fill the water tank with fresh drinking water.
2. Place a container (at least 0.5L) under the coffee outlet.

3. Press any coffee button to start the rinsing cycle. Repeat this process 2-3 times until clear water flows out.

3.3 Water Tank Filling

- Lift the water tank from the back of the machine.
- Fill it with fresh drinking water up to the 'MAX' level.
- Place the water tank back onto the machine, ensuring it is securely seated.

3.4 Milk Carafe Assembly

- Ensure the milk carafe components are clean.
- Assemble the milk carafe and attach it to the machine's milk frother connection point.
- The milk carafe has a detachable lid for easy refilling between preparations.

4. Operation

4.1 Powering On

Press the power button to turn on the machine. The machine heats up in approximately 25 seconds.

4.2 Inserting a Nespresso Capsule

1. Lift the lever to open the capsule chamber.
2. Insert a Nespresso capsule into the chamber.
3. Close the lever firmly.

4.3 Brewing Coffee

The Gran Lattissima offers three coffee selections: Ristretto, Espresso, and Lungo.

1. Place your desired cup under the coffee outlet.
2. Press the button corresponding to your desired coffee selection (Ristretto, Espresso, or Lungo).
3. The machine will automatically brew the coffee and stop when the programmed volume is reached.

4.4 Preparing Milk-Based Beverages

The machine can prepare nine different one-touch milk recipes, including Cappuccino, Latte Macchiato, Flat White, Caffè Latte, Hot Foam, and Hot Milk.

GRAN LATTISSIMA

COFFEE SHOP RECIPES AT A FINGER TOUCH

6 MILK RECIPES

cappuccino, latte macchiato, flat white, caffè latte, hot foam and hot milk

AT THE TOUCH OF BUTTON

SEMI-AUTOMATIC RINSING FUNCTION



Close-up of the machine's control panel, illustrating the dedicated buttons for different coffee and milk-based beverages like Cappuccino, Latte Macchiato, and Espresso.

1. Fill the milk carafe with fresh milk up to the desired level.
2. Insert a Nespresso capsule into the machine.
3. Place your cup under the coffee and milk outlets.
4. Press the button for your chosen milk recipe (e.g., Cappuccino, Latte Macchiato).
5. The machine will automatically prepare the beverage, frothing the milk and brewing the coffee in sequence.



An illustration demonstrating the different coffee and milk recipes the machine can prepare, including Latte Macchiato (160ml), Caffè Latte (220ml), Cappuccino (100ml or 85ml), Flat White (125ml), Espresso (40ml), and Lungo (110ml), each with a corresponding Nespresso capsule.



A close-up of a freshly brewed Nespresso coffee, highlighting the rich crema, next to a used Nespresso capsule, demonstrating the quality of the beverage output.

5. Cleaning and Maintenance

Regular cleaning and maintenance ensure the longevity of your machine and the quality of your coffee.

5.1 Daily Cleaning

- **Milk System:** After each milk preparation, the machine features an automatic rinsing system. Ensure this cycle completes. The milk carafe components are also dishwasher safe for thorough cleaning.
- **Drip Tray and Capsule Container:** Empty and rinse the drip tray and used capsule container daily.
- **Water Tank:** Rinse the water tank and refill with fresh water daily.

5.2 Descaling Procedure

The machine will alert you when descaling is required. Descaling removes mineral deposits that can affect machine performance and coffee taste.

1. Refer to the full descaling instructions provided in the separate descaling kit or on the Nespresso website.
2. Use only Nespresso descaling solution.
3. Follow the on-screen prompts or indicator lights during the descaling process.

6. Troubleshooting

If you encounter issues with your Gran Lattissima, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
No coffee flow	Water tank empty, machine not descaled, capsule blocked.	Fill water tank, perform descaling, check capsule insertion.
Milk not frothing correctly	Milk carafe dirty, milk type unsuitable, milk level too low.	Clean milk carafe thoroughly, use cold fresh milk (dairy or plant-based suitable for frothing), ensure sufficient milk.
Descaling alert light is on	Machine requires descaling.	Perform the descaling procedure as outlined in Section 5.2.
Machine not turning on	No power, power cord not connected.	Check power outlet and ensure power cord is securely plugged in.


If the problem persists, please contact Nespresso customer support.

7. Specifications

Technical details for the Nespresso De'Longhi Gran Lattissima EN640.B coffee maker.

Feature	Detail
Brand	Nespresso (Manufacturer: De'Longhi)
Model Name	Gran Lattissima
Model Number	EN640B
Color	Sophisticated Black
Product Dimensions (D x W x H)	27.6 cm x 36.7 cm x 20.3 cm
Item Weight	5 kg 200 g
Pressure	19 Bar
Voltage	240 Volts
Power	1400W

Feature	Detail
Coffee Input Type	Capsule
Operation Mode	Fully Automatic
Special Feature	Programmable

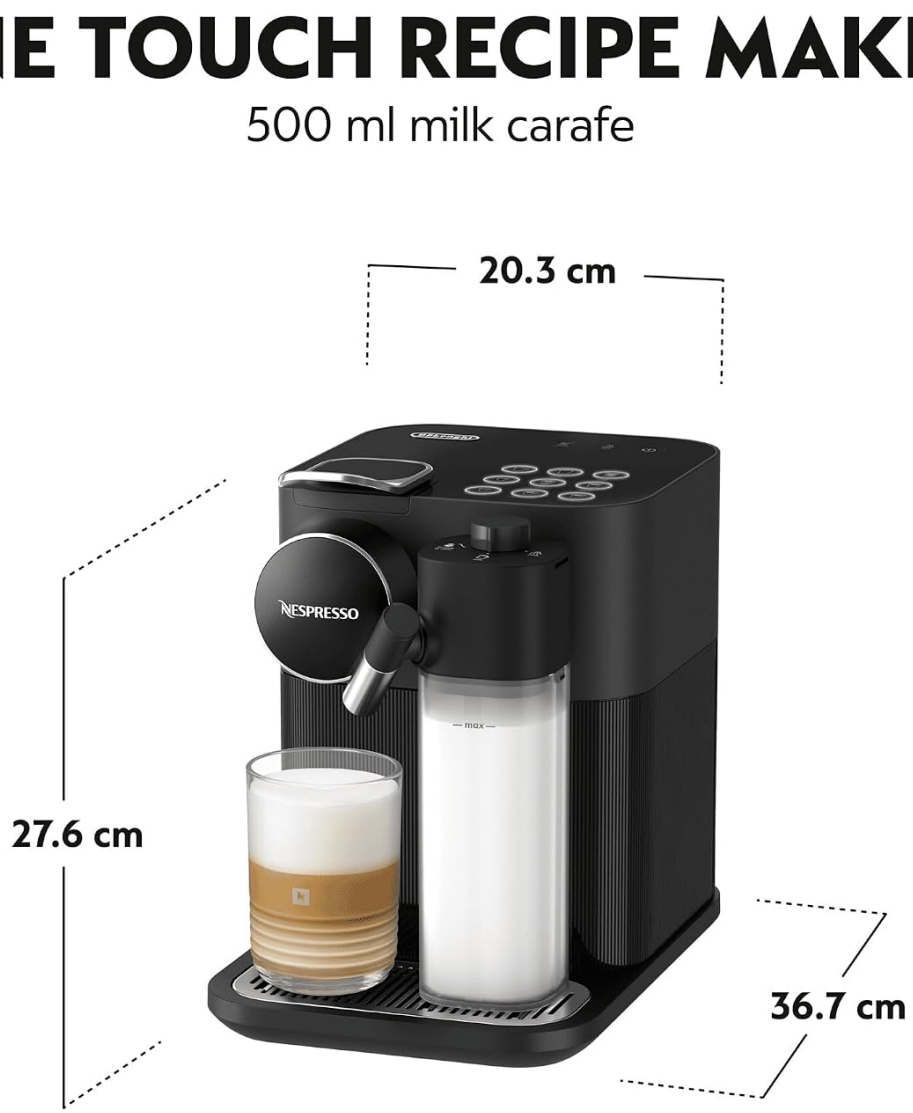

The Gran Lattissima machine with its key dimensions: 20.3 cm depth, 36.7 cm width, and 27.6 cm height, emphasizing its compact design for various kitchen spaces.

8. Warranty and Support

8.1 Warranty Information

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Extended warranty options may also be available from your retailer.

8.2 Customer Support

For further assistance, technical support, or to order accessories and descaling kits, please visit the official Nespresso website or contact Nespresso customer service directly. Contact details can typically be found on the Nespresso website or in your product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question