Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GYMAX CA-GM1369

GYMAX Oversize Folding Lounge Chair User Manual

Model: CA-GM1369

1. Introduction

Thank you for choosing the GYMAX Oversize Folding Lounge Chair. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new lounge chair. Please read this manual thoroughly before use and retain it for future reference.

2. Product Overview

The GYMAX Lounge Chair is designed for comfort and portability, suitable for various outdoor and indoor settings. It features an extra-wide and high design, an adjustable backrest, and a robust construction for enhanced durability and weight capacity.



Figure 2.1: GYMAX Lounge Chair showcasing its 27-inch width, 16-inch height, and 440 lbs weight capacity.



Figure 2.2: The lounge chair positioned on a patio, demonstrating its suitability for outdoor relaxation.

3. Features

- **Extra Wide & High Design:** Measuring 27 inches wide and 16 inches high, providing ample space and ease of use.
- **Fully Customized Comfort:** Features a 4-level backrest adjustment and 2 footrest positions, along with a removable pillow for versatile relaxation.
- **Heavy Duty Construction:** Constructed with anti-rust steel and wear-resistant fabric, supporting up to 440 lbs. Non-slip feet ensure stability.
- **Lightweight & Portable:** Weighing only 15.5 lbs, with a triple folding design for easy storage and transport.
- **Multifunctional Use:** Ideal for various settings including beaches, camping, poolside, backyard, or even office napping.



Figure 3.1: Visual comparison highlighting the heightened (16 inches) and widened (27.5 inches) design of the GYMAX lounge chair for improved comfort and distance from ground/water.



Figure 3.2: Details on the stable U-shaped steel frame providing 440 lbs capacity, and durable fabric properties including waterproof surface, wear & tear resistance, comfortable skin touch, and excellent ventilation.

4. Specifications

Attribute	Detail
Brand	GYMAX
Model Name	Oversize Lounge Chair
Model Number	CA-GM1369
Color	Grey
Product Dimensions (L x W x H)	74"D x 27"W x 16"H

Attribute	Detail
Seat Height	16 Inches
Maximum Weight Recommendation	440 Pounds
Item Weight	15.5 pounds
Back Style	Solid Back
Reclining Position Count	4
Included Components	Oversize Lounge Chair, Removable Pillow
Form Factor	Foldable
Indoor/Outdoor Usage	Outdoor, Indoor
Product Care Instructions	Wipe Clean
Country of Origin	China

5. Setup Instructions

The GYMAX Lounge Chair is designed for quick and easy setup. Follow these steps to unfold and prepare your chair for use:

1. **Unpack:** Carefully remove the lounge chair from its packaging.
2. **Unfold the Frame:** Place the folded chair on a flat, stable surface. Gently pull the two main sections of the chair apart until the frame fully extends.
3. **Engage Legs:** Ensure all three sets of U-shaped legs are fully extended and locked into their open position. The chair should stand firmly on its own.
4. **Adjust Backrest (Initial):** Before sitting, adjust the backrest to your desired initial position by lifting the backrest slightly and engaging the support bar into one of the four available notches.
5. **Attach Pillow:** If desired, attach the removable pillow to the top of the backrest for added head and neck support.



Figure 5.1: Illustration of the lounge chair's lightweight and compact design, showing the steps for folding and unfolding for easy storage and transport.



Figure 5.2: Detailed view of the sturdy triangular frame, non-slip feet for extra stability, elastic ropes securing the fabric, and the removable headrest.

6. Operating Instructions

Your GYMAX Lounge Chair offers adjustable comfort for various activities.

6.1 Adjusting the Backrest

The backrest can be adjusted to 4 different levels to suit your preference for sitting, reclining, or lying flat.

1. **To Recline:** While standing beside the chair, lift the backrest slightly to disengage the support bar from its current notch. Gently push the backrest down to the desired angle, ensuring the support bar securely locks into one of the lower notches.
2. **To Sit Up:** While standing beside the chair, lift the backrest slightly to disengage the support bar. Pull the backrest upwards to the desired angle, ensuring the support bar securely locks into one of the higher notches.
3. **Important Note:** Do not attempt to adjust the backrest while you are lying on the lounge chair. Always adjust the

backrest before or after sitting on the chair to prevent injury or damage to the mechanism.



Figure 6.1: Illustration showing the four adjustable backrest levels and two footrest positions, allowing for customized comfort.

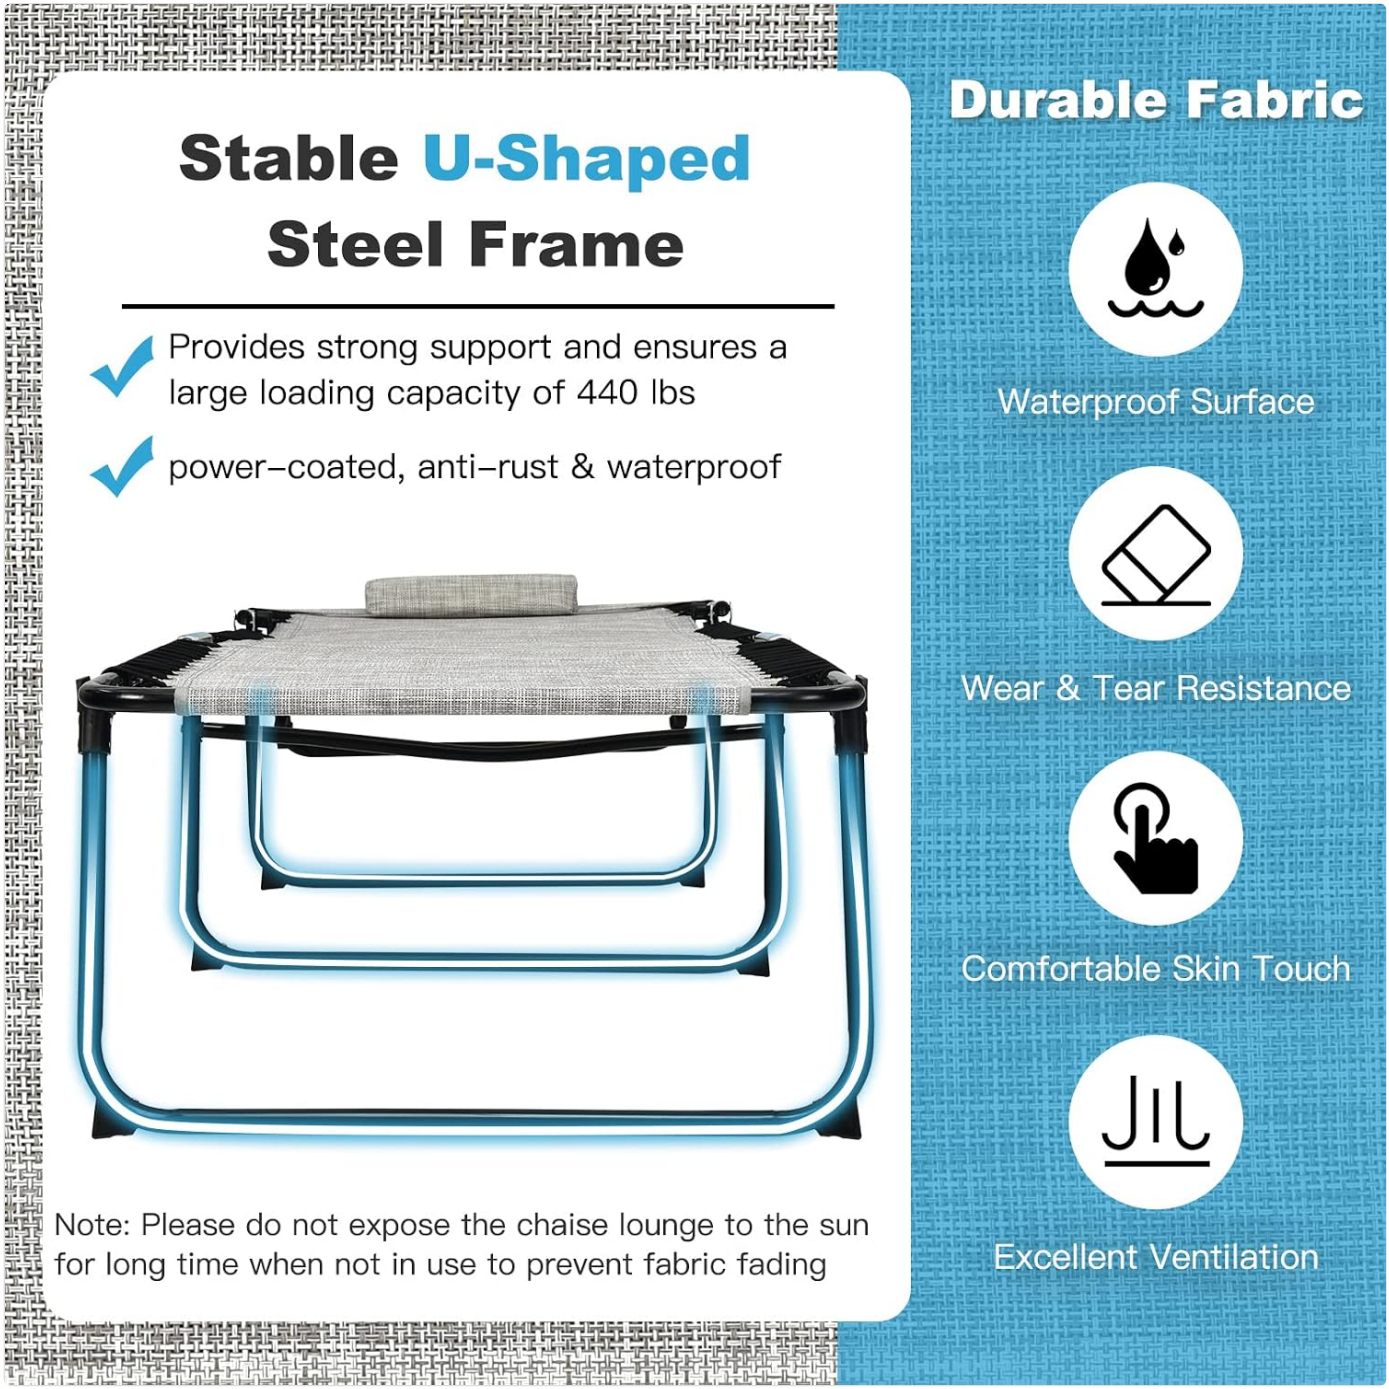


Figure 6.2: Close-up of the backrest adjustment mechanism, highlighting the numbered positions (1-4) for precise angle selection.

6.2 Folding for Storage

To fold the chair for compact storage or transport:

1. Ensure the backrest is in its fully upright or flat position.
2. Lift the chair slightly and bring the two main sections together, allowing the frame to collapse.
3. Fold the leg sections inwards until the chair is in its compact, triple-folded state.
4. Secure any locking mechanisms if present to prevent accidental unfolding.



Figure 6.3: The lounge chair in its compact, folded state, ready for storage or transport.

7. Maintenance

Proper care will extend the life of your GYMAX Lounge Chair.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn stains, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the chair is completely dry before folding and storing to prevent mildew or rust.
- **Sun Exposure:** Do not expose the lounge chair to direct sunlight for extended periods when not in use to prevent fabric fading and material degradation.
- **Storage:** Store the patio chaise lounge in a dry, sheltered condition when not in use, especially during off-seasons or inclement weather, to ensure longer usage.
- **Inspection:** Periodically inspect all bolts, screws, and elastic ropes to ensure they are tight and secure. Tighten as necessary.

8. Troubleshooting

This section addresses common issues you might encounter with your lounge chair.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Legs not fully extended or locked; uneven surface.	Ensure all leg sections are fully extended and locked into place. Move the chair to a flat, level surface.
Backrest adjustment is difficult or stuck.	Attempting to adjust while seated; mechanism obstructed; wear on pins/support bar.	Always adjust the backrest when not seated. Check for any debris or obstructions in the adjustment mechanism. If pins or support bar appear bent or damaged, contact customer support.
Fabric appears loose or sagging.	Elastic ropes stretched or damaged.	Inspect the elastic ropes for signs of wear or breakage. While not typically user-replaceable, contact customer support for advice.
Chair does not fold compactly.	Legs or backrest not fully collapsed.	Ensure the backrest is fully flat and all leg sections are folded inwards completely.

9. Warranty and Support

While specific warranty details are not provided in this manual, GYMAX products are typically covered by a manufacturer's warranty against defects in materials and workmanship. For any questions, concerns, or to report issues with your GYMAX Lounge Chair, please contact the manufacturer or the seller from whom you purchased the product. You can often find contact information on the product packaging or by visiting the official GYMAX store page on the retailer's website. For purchases made on Amazon, you can visit the GYMAX Store on Amazon.

© 2025 GYMAX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B2WZRWHH

More documents and user manuals: **https://manuals.plus/**