Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WOPET FT30

WOPET FT30 Automatic Pet Feeder User Manual

Model: FT30
Brand: WOPET

1. Introduction

Thank you for choosing the WOPET FT30 Automatic Pet Feeder. This device is designed to provide a convenient and reliable feeding solution for your cats and small dogs, ensuring they receive their meals on time, every time. With programmable meal schedules, portion control, and a personalized voice recorder, the FT30 helps maintain your pet's healthy eating habits even when you are away.
This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your new pet feeder. Please read it thoroughly before use to ensure optimal performance and safety.

2. Product Features

- **Scheduled Meal Times:** Program up to 6 meals daily with 1 to 8 portions per meal (15g per portion) to customize your pet's diet.
- **User Friendly & Power Saving:** Features an easy-to-read LED display and a security lock function to prevent accidental program changes. The feeder automatically locks after 20 seconds of inactivity. (*Note: Long press the SET BUTTON for 3 seconds to unlock.*)
- **Keep Freshness:** Equipped with a desiccant bag and a built-in twist-lock lid to maintain food freshness and prevent pets from accessing food prematurely. A viewable food tank window allows easy monitoring of food levels.
- **Dual Power Supply:** Operates via wired adapter or 3 alkaline D batteries (not included) as a backup, ensuring continuous feeding during power outages.
- **10s Personalized Meal Call:** Record a 10-second voice message to call your pets to eat, providing comfort and familiarity.
- **Easy to Clean:** Detachable components including the top lid, food tank, turnplate, and food bowl for convenient and hygienic cleaning.
- **Capacity:** The food dispenser can hold up to 3 liters (approximately 12.7 cups) of dry food, suitable for cats and small to medium-sized dogs.



Image: The WOPET FT30 Automatic Pet Feeder, showing its sleek design and the accompanying food bowl filled with kibble.



Image: An infographic highlighting key features: up to 6 meals per day, up to 8 portions per meal, 3L food tank, and kibble size compatibility (2-15mm).

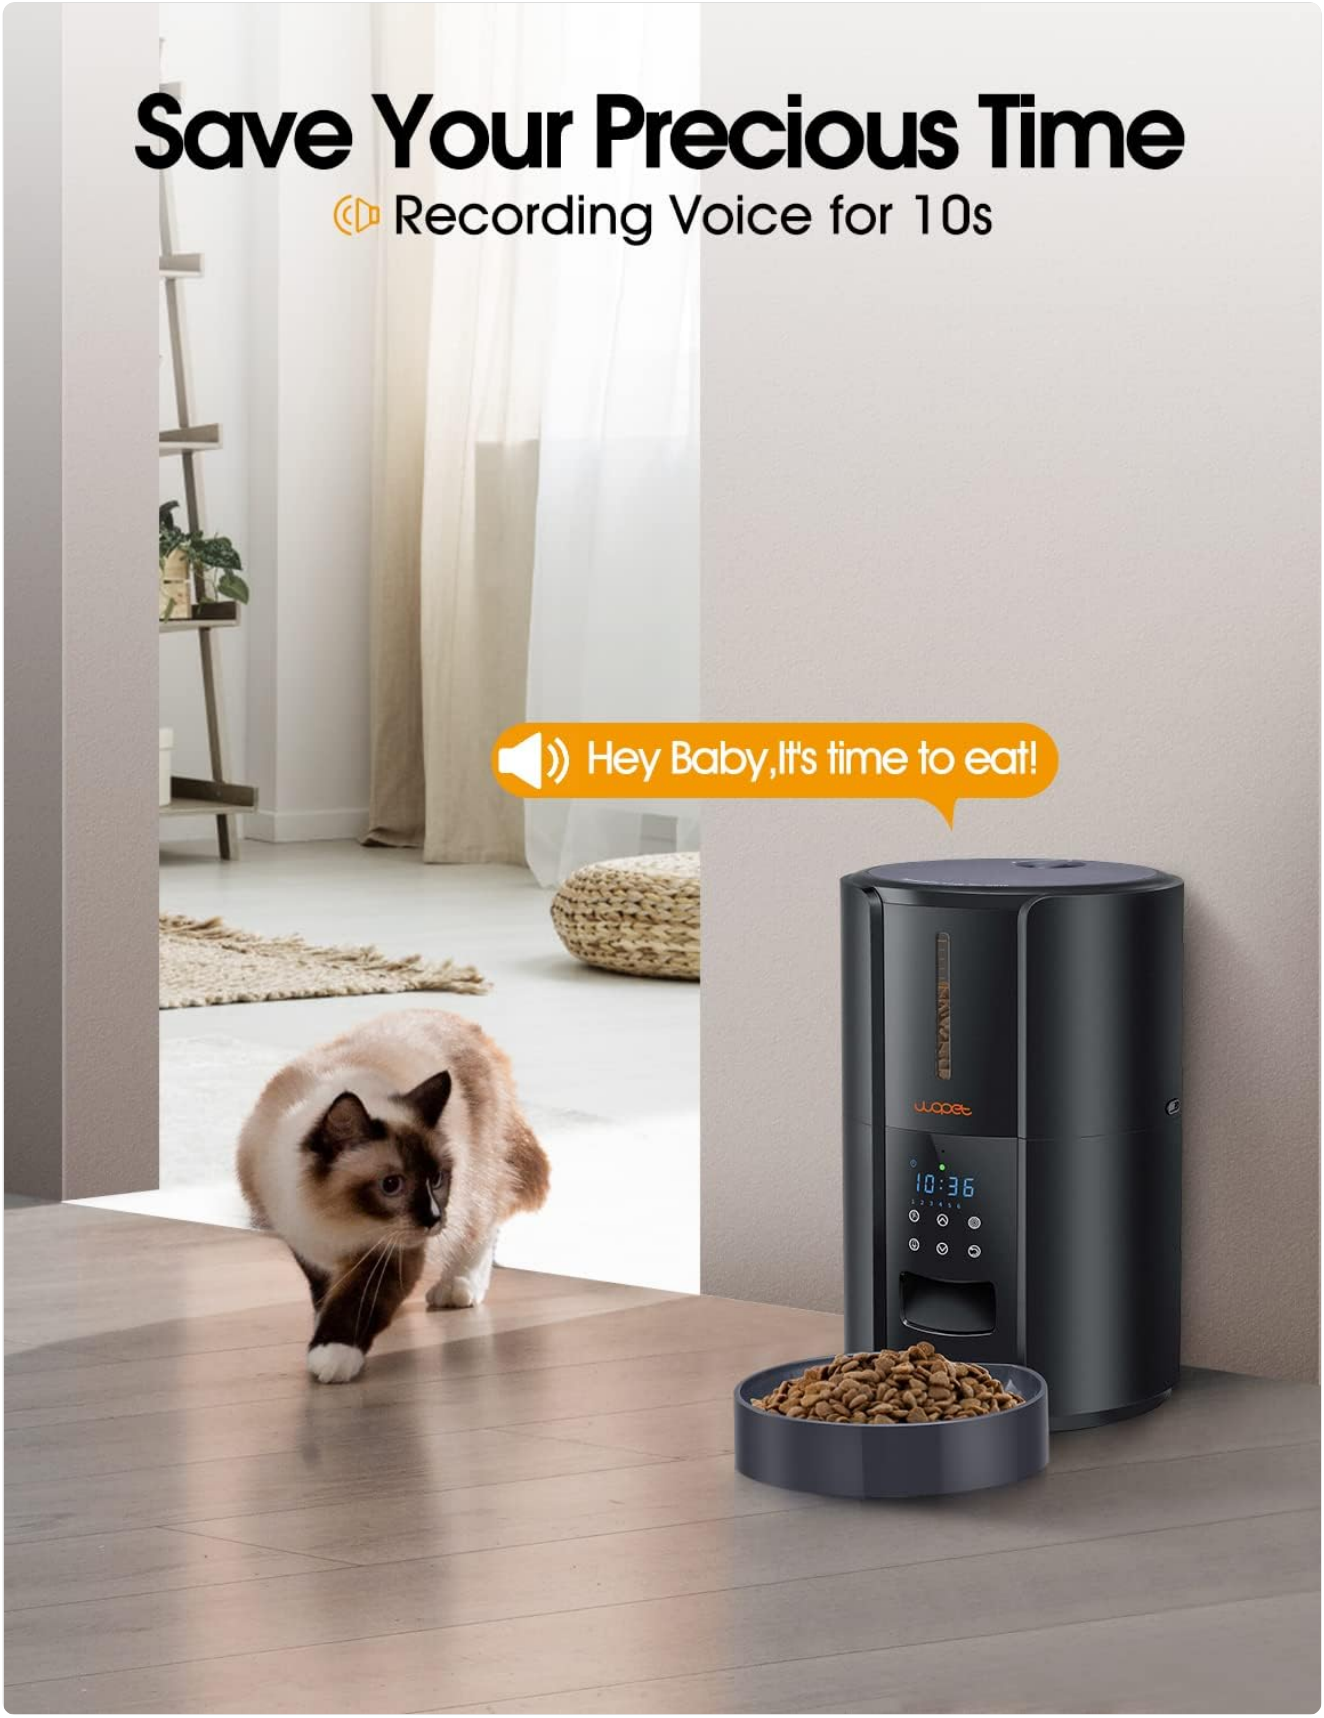


Image: A cat approaching the feeder, illustrating the 10-second voice recording feature that can call pets to their meal.



Image: A detailed diagram showing the internal components for safe food storage, including the secure twist-lock lid, desiccant box, patent rotor design, and damp-proof sealing port.



Image: A view of the feeder's base, illustrating the dual power supply option with slots for three D batteries (not included) and the 5V power adapter input.

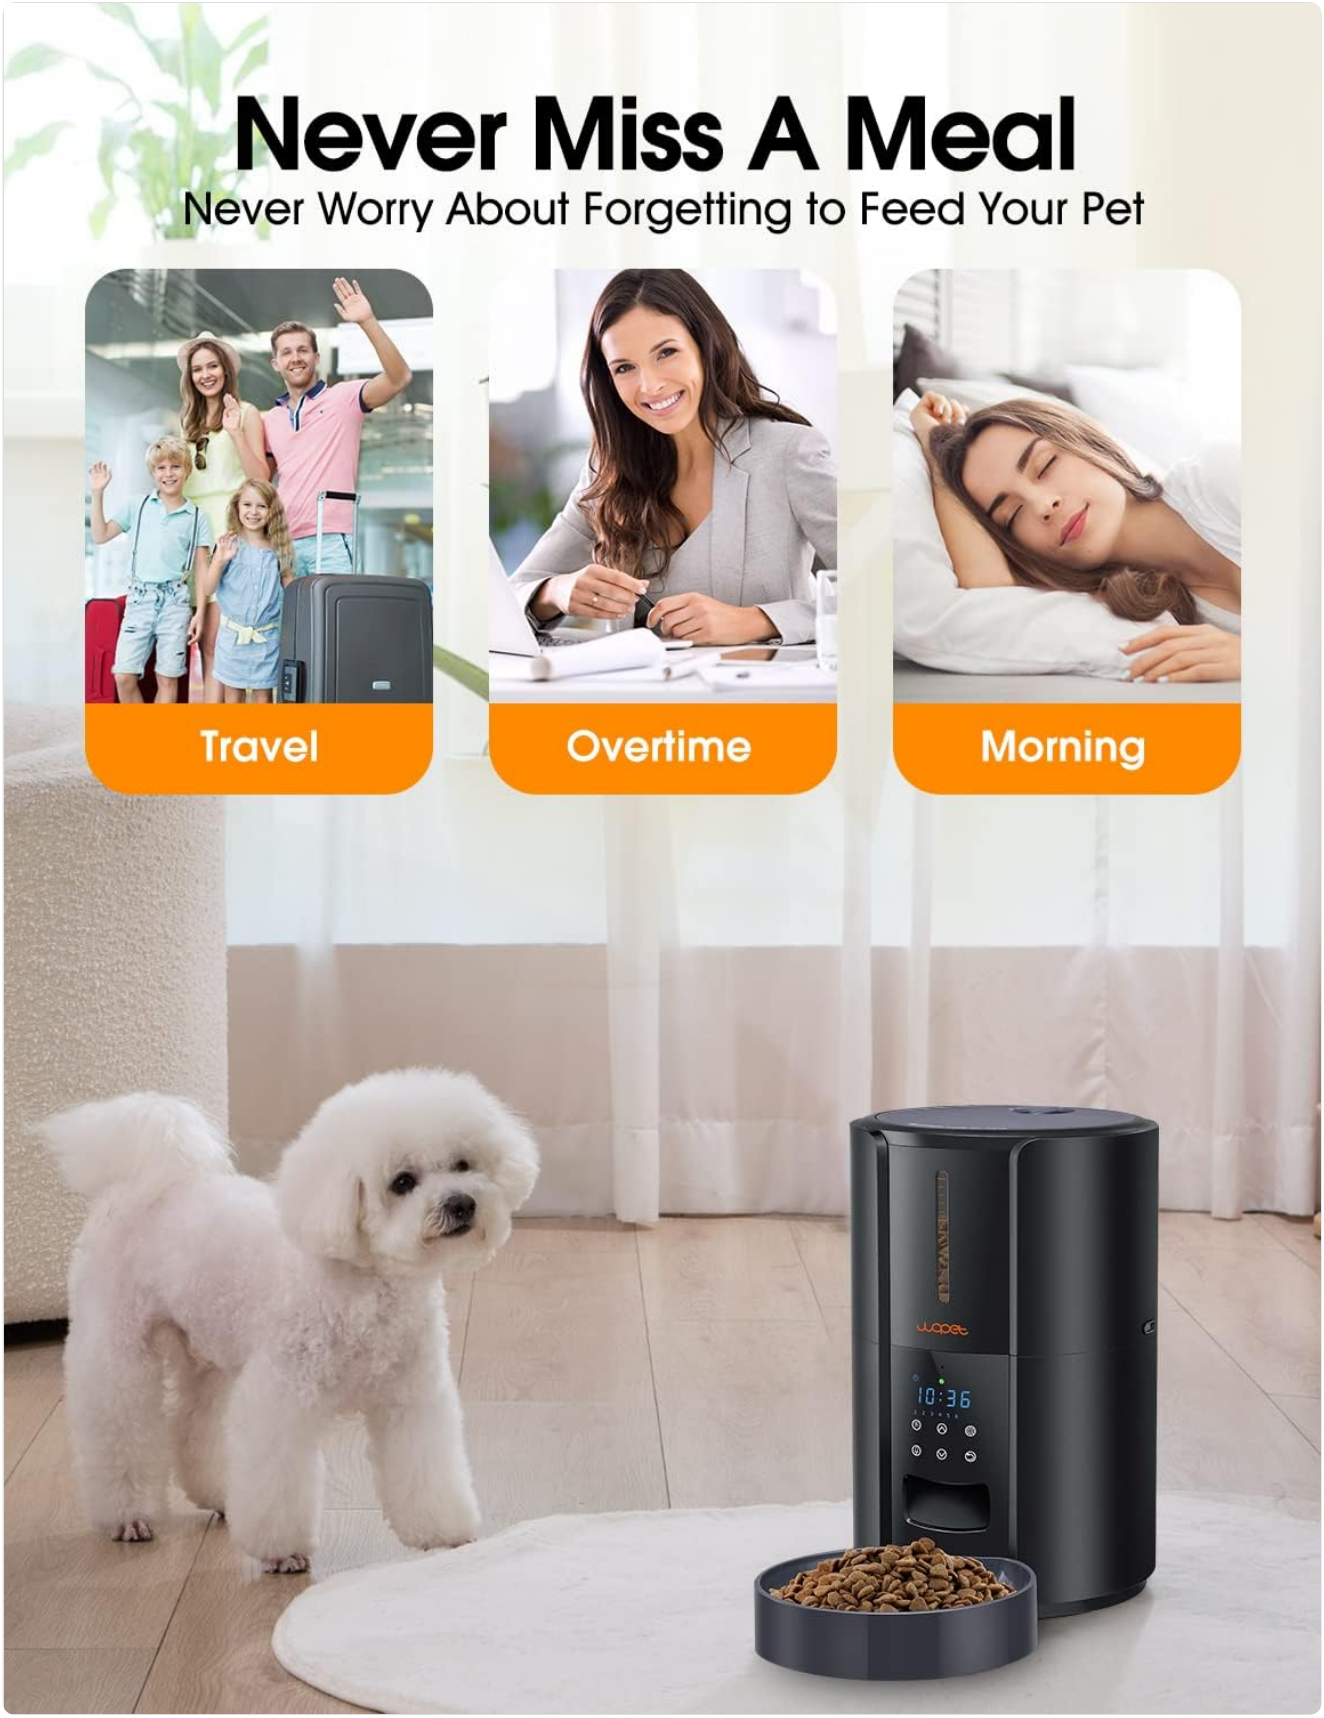


Image: A collage depicting various scenarios (travel, overtime, morning) where the automatic feeder ensures pets never miss a meal, with a dog happily eating from the feeder.

3. Setup Guide

3.1 Package Contents

Before you begin, please ensure all items are present:

- WOPET FT30 Automatic Pet Feeder Unit
- Food Bowl
- Power Adapter
- Desiccant Bag (pre-installed or separate)

3.2 Assembly

1. Place the feeder unit on a flat, stable surface.
2. Attach the food bowl securely to the dispensing outlet at the bottom front of the feeder.
3. If not already installed, insert the desiccant bag into its designated compartment under the top lid.

3.3 Power Supply

The FT30 feeder supports dual power supply options:

- **AC Adapter:** Connect the provided power adapter to the feeder's power input port (located at the bottom rear) and plug it into a standard wall outlet.
- **D Batteries (Backup):** For backup power during outages, insert 3 alkaline D batteries (not included) into the battery compartment at the bottom of the feeder. Ensure correct polarity.

It is recommended to use both power sources for uninterrupted operation.

3.4 Filling the Food Tank

1. Open the top lid by twisting it counter-clockwise to unlock.
2. Pour dry pet food into the tank. Ensure the kibble size is between 2-15mm to prevent jamming.
3. Close the lid by twisting it clockwise until it locks securely. This helps maintain freshness and prevents pets from accessing food.

4. Operating Instructions

The WOPET FT30 features an intuitive control panel with an LED display and several buttons. The feeder automatically locks after 20 seconds of inactivity. To unlock, press and hold the 'SET' button for 3 seconds.

4.1 Control Panel Overview

Button	Function
SET	Enter/Exit programming mode; Unlock (long press)
UP (▲)	Increase value; Navigate up
DOWN (▼)	Decrease value; Navigate down
REC (Microphone)	Record/Play voice message
MANUAL (Paw Print)	Dispense one portion manually

4.2 Setting Current Time

1. Ensure the feeder is unlocked.
2. Press the **SET** button once. The hour digit will flash.

3. Use the **UP** or **DOWN** buttons to adjust the hour.
4. Press **SET** again to move to the minute digit. Adjust with **UP** or **DOWN**.
5. Press **SET** to confirm and exit time setting mode.

4.3 Programming Meal Times and Portions

The feeder allows setting up to 6 meals per day.

1. Ensure the feeder is unlocked.
2. Press the **SET** button repeatedly until 'M1' (Meal 1) appears on the display.
3. Press **SET** again. The hour for Meal 1 will flash. Use **UP** or **DOWN** to set the desired hour.
4. Press **SET** to move to the minute. Use **UP** or **DOWN** to set the desired minute.
5. Press **SET** to move to portion size. 'P-01' will flash. Use **UP** or **DOWN** to select the number of portions (1-8). Each portion is approximately 15g.
6. Repeat steps 3-5 for additional meals (M2, M3, M4, M5, M6) as needed. If you do not wish to set a meal, simply skip it by pressing **SET** until the next meal number appears or until you exit programming mode.
7. After setting all desired meals, press **SET** until the current time is displayed to exit programming mode.

4.4 Recording a Voice Message

You can record a 10-second voice message that will play at each scheduled meal time.

1. Ensure the feeder is unlocked.
2. Press and hold the **REC (Microphone)** button. The display will show a recording indicator.
3. Speak clearly into the microphone located on the front panel. You have up to 10 seconds.
4. Release the **REC** button to stop recording.
5. To play back your recording, briefly press the **REC** button.

4.5 Manual Feeding

To dispense a single portion of food immediately:

- Ensure the feeder is unlocked.
- Briefly press the **MANUAL (Paw Print)** button. One portion of food will be dispensed into the bowl.

5. Maintenance

Regular cleaning and maintenance will ensure the longevity and hygienic operation of your WOPET FT30 feeder.

5.1 Cleaning Instructions

The top lid, food tank, turnplate, and food bowl are all detachable for easy cleaning.

1. Unplug the feeder from the power outlet and remove any batteries.
2. Empty any remaining food from the tank and bowl.
3. Detach the top lid, food tank, turnplate, and food bowl.
4. Wash these detachable parts with mild soap and water. Rinse thoroughly.
5. Allow all parts to air dry completely before reassembling. Ensure no moisture remains, especially in the food tank, to prevent mold or food spoilage.
6. Wipe the main feeder unit (non-detachable parts) with a clean, damp cloth. Do not submerge the main unit in

water.

7. Reassemble all parts once dry.



Image: Illustration of the detachable components (food tank, turnplate, food bowl) being cleaned with water, emphasizing the ease of maintenance.

5.2 Desiccant Bag Replacement

The desiccant bag helps absorb moisture to keep food fresh. It should be replaced periodically, typically every 1-3 months depending on humidity levels.

1. Open the top lid of the feeder.
2. Locate the desiccant box/compartment.
3. Remove the old desiccant bag and dispose of it.
4. Insert a new desiccant bag (available from pet supply stores or WOPET).
5. Close the top lid securely.



Image: A desiccant bag being placed into its dedicated compartment under the feeder's lid, crucial for maintaining food freshness.

6. Troubleshooting

If you encounter issues with your WOPET FT30 feeder, please refer to the following common problems and

solutions:

Problem	Possible Cause & Solution
Feeder not dispensing food.	• **Low Food Level:** Check the food tank window and refill if necessary. • **Food Jam:** Ensure kibble size is within 2-15mm. Clear any blockages in the dispensing mechanism. • **Power Issue:** Check AC adapter connection or replace D batteries. • **Feeder Locked:** Long press the SET button for 3 seconds to unlock.
Incorrect portion size dispensed.	• **Incorrect Setting:** Re-program the portion size for the specific meal. • **Kibble Shape/Density:** Different kibble shapes and densities can affect dispensed volume. Adjust portion settings as needed after observing initial dispenses.
Scheduled meals not dispensing.	• **Incorrect Time Setting:** Verify the current time and meal schedule are set correctly. • **Power Interruption:** Check power supply. If using batteries, ensure they are not depleted. • **Feeder Locked:** Ensure the feeder is unlocked before scheduled dispense times.
Voice recording not playing or unclear.	• **Recording Error:** Re-record the message, ensuring you speak clearly and within the 10-second limit. • **Microphone Blocked:** Ensure the microphone area is clean and unobstructed.
Display is blank or unresponsive.	• **No Power:** Check AC adapter connection and D batteries. • **System Glitch:** Try unplugging the feeder and removing batteries for a few minutes, then reconnect.

If the problem persists after trying these solutions, please contact WOPET customer support for further assistance.

7. Specifications

Feature	Detail
Model	FT30
Brand	WOPET
Material	Plastic
Color	Black/Grey
Food Tank Capacity	3 Liters (approx. 12.7 cups)
Portion Size	Approx. 15g per portion
Meals Per Day	1-6 meals

Feature	Detail
Portions Per Meal	1-8 portions
Kibble Size	2-15mm (dry food only)
Power Supply	5V DC Adapter (included), 3 x D Batteries (not included)
Item Weight	3.45 pounds
Package Dimensions	12.48 x 8.31 x 7.64 inches
Care Instructions	Hand Wash Only (detachable parts)

8. Warranty and Support

WOPET stands behind the quality of its products. For warranty information, technical support, or any questions not covered in this manual, please refer to the official WOPET website or contact their customer service directly. You may also find additional resources and FAQs on the product's Amazon listing page.
A PDF version of the user manual is available for download:WOPET FT30 User Manual (PDF)

© 2023 WOPET. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B38PFFL9

More documents and user manuals: **https://manuals.plus/**