ELECTCOM PRO ELC-225

ELECTCOM PRO DVD Player ELC-225

Instruction Manual

Introduction

The ELECTCOM PRO ELC-225 DVD Player is designed to provide an immersive viewing and listening experience with its ability to up-convert DVD video to 1080p HD and deliver clear, engaging audio with Dolby Digital surround sound. This versatile player supports multiple DVD and CD formats, including DVD, DVD-R/+R, DVD-/+RW, CD, CD-R/RW, VCD, and SVCD. It also features a convenient USB port for playing MP3, AVI, WMA, and JPEG files directly from a flash drive. Its user-friendly design makes it simple to operate for all users.

What's in the Box

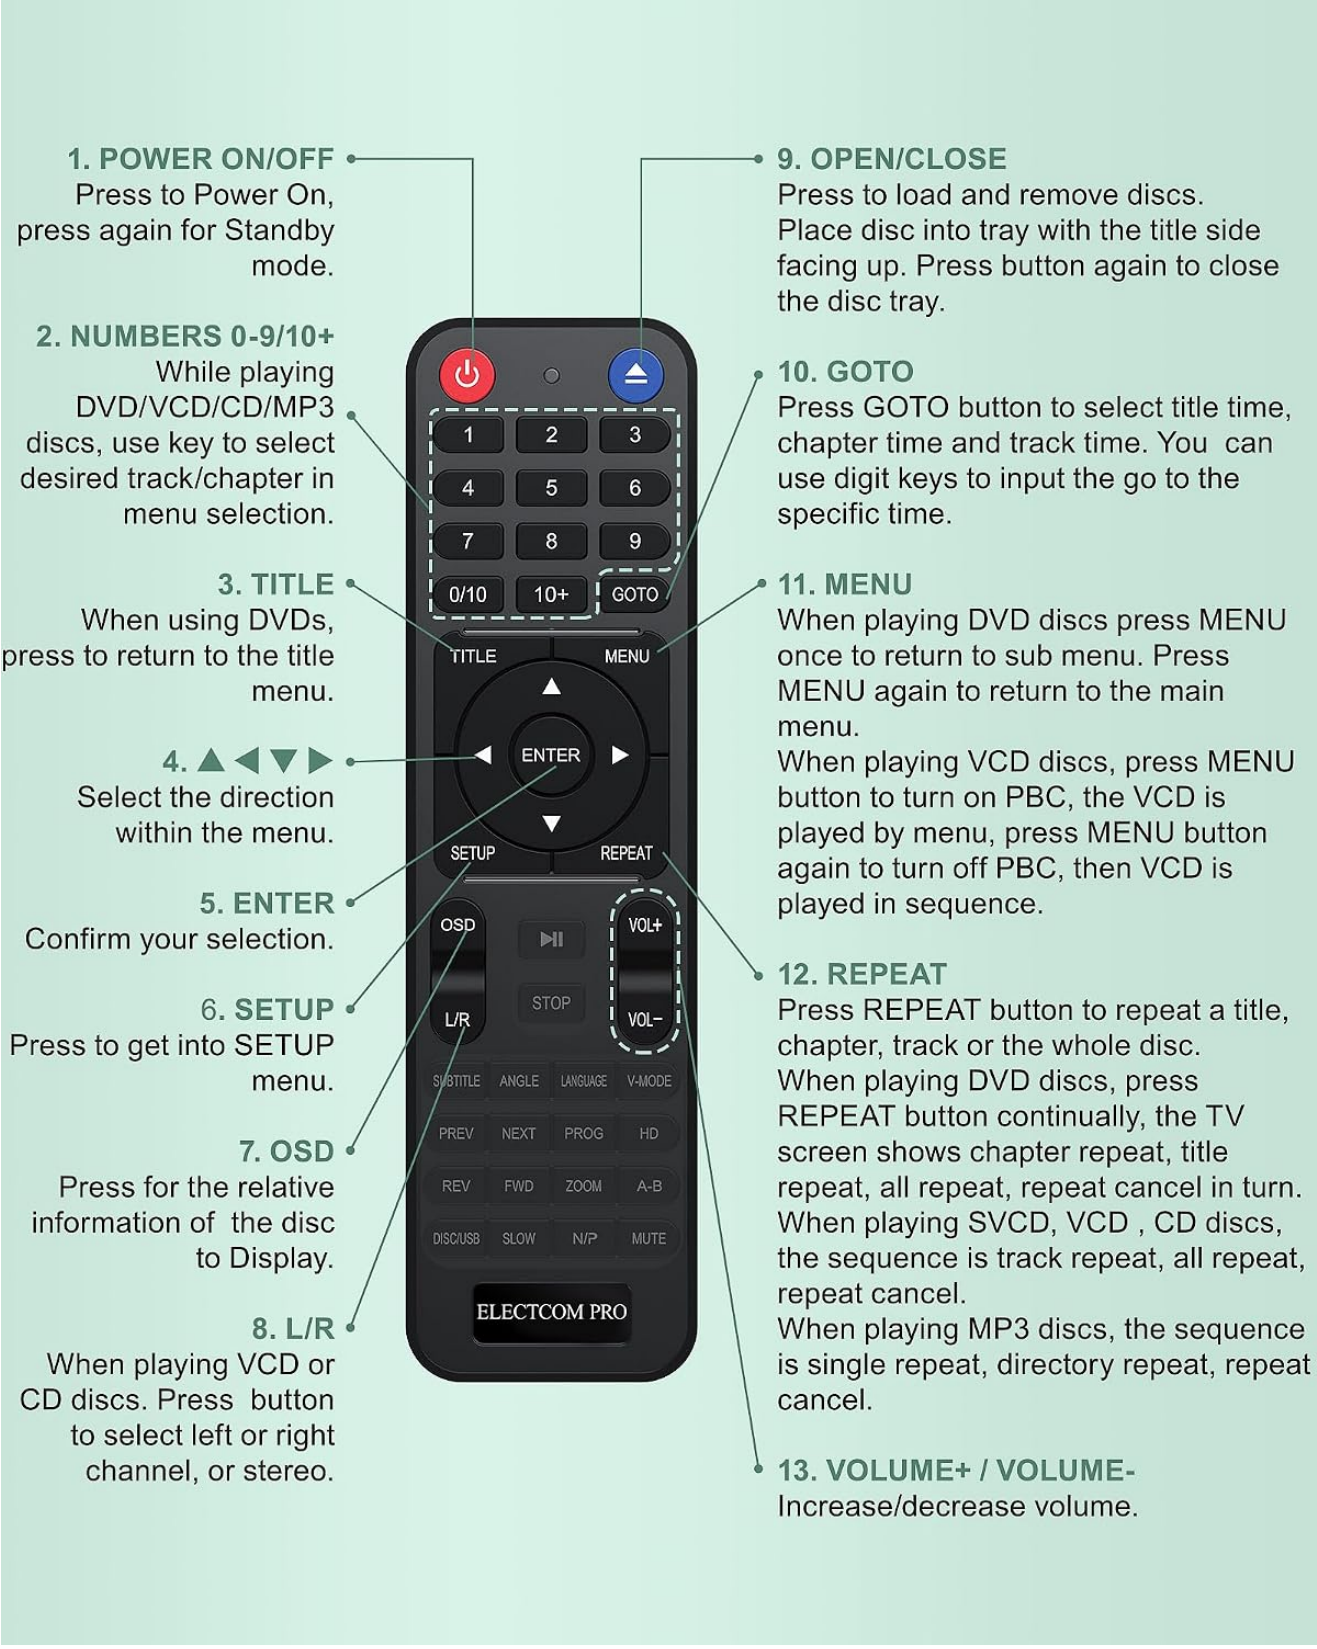


Image: The ELECTCOM PRO DVD Player, remote control, HDMI cable, RCA cables, and user manual are included in the box.

- ELECTCOM PRO DVD Player ELC-225
- Remote Control
- HDMI Cable
- RCA Cables
- User Manual

Setup

Connecting to Your TV

The ELECTCOM PRO DVD Player offers multiple connection options for compatibility with various display devices.



Image: The back panel of the DVD player highlighting HDMI and RCA output ports for multi-connection.

- **HDMI Connection (Recommended for Smart TVs/Projectors/Monitors):** Connect one end of the provided HDMI cable to the 'HD OUT' port on the back of the DVD player and the other end to an HDMI input port on your TV or display.
- **RCA Connection (For Older TVs/Speakers/Sound Bars/Amplifiers):** Connect the red, white, and yellow RCA cables to the corresponding 'AUDIO OUT' (red for right audio, white for left audio) and 'VIDEO OUT' (yellow for video) ports on the back of the DVD player. Connect the other ends to the matching input ports on your TV or audio system.

Powering On

After connecting the necessary cables, plug the DVD player's power cord into a standard electrical outlet. Press the

'POWER' button on the front panel of the DVD player or on the remote control to turn the unit on.

Product Overview Video

Video: A brief overview of the ELECTCOM PRO DVD Player, demonstrating its features and ease of use.

Operating Instructions

Loading and Playing Discs

To load a disc, press the 'OPEN/CLOSE' button on the front panel or remote control. Place the disc gently onto the disc tray with the label side facing up. Press 'OPEN/CLOSE' again to close the tray. The player will begin reading the disc automatically.



Image: The ELECTCOM PRO DVD Player with a DVD being inserted, demonstrating the disc loading process.

USB Playback

Insert a USB flash drive into the USB port on the front of the DVD player. Use the remote control to navigate to the USB input mode. You can then browse and play supported media files (MP3, AVI, WMA, JPEG) stored on your USB drive.

Remote Control Functions

The remote control provides full functionality for operating your DVD player. Ensure batteries are inserted correctly (2 x AAA, not included).



Images: Detailed diagrams of the remote control, illustrating the layout and numbering of each button for easy reference.

Remote Control Button Descriptions

No.	Function	Description
1	POWER ON/OFF	Press to Power On, press again for Standby mode.
2	NUMBERS 0-9/10+	While playing DVD/VCD/CD/MP3 discs, use key to select desired track/chapter in menu selection.
3	TITLE	When using DVDs, press to return to the title menu.
4	Directional Arrows	Select the direction within the menu.
5	ENTER	Confirm your selection.
6	SETUP	Press to get into Setup menu.
7	OSD	Press for the relative information of the disc to Display.
8	L/R	When playing VCD or CD discs. Press button to select left or right channel, or stereo.
9	OPEN/CLOSE	Press to load and remove discs. Place disc into tray with the title side facing up. Press button again to close the disc tray.

No.	Function	Description
10	GOTO	Press GOTO button to select title time, chapter time and track time. You can use digit keys to input the go to the specific time.
11	MENU	When playing DVD discs press MENU once to return to sub menu. Press MENU again to return to the main menu. When playing VCD discs, press MENU button to turn on PBC, the VCD is played by menu, press MENU button again to turn off PBC, then VCD is played in sequence.
12	REPEAT	Press REPEAT button to repeat a title, chapter, track or the whole disc. When playing DVD discs, press REPEAT button continually, the TV screen shows chapter repeat, title repeat, all repeat, repeat cancel in turn. When playing SVCD, VCD, CD discs, the sequence is track repeat, all repeat, repeat cancel. When playing MP3 discs, the sequence is single repeat, directory repeat, repeat cancel.
13	VOLUME+/-	Increase/decrease volume.
14	PLAY/PAUSE	Press once to pause, press again to play.
15	STOP	Press to stop media. Press the Play/Pause button to resume.
16	SUBTITLE	When playing the DVD discs with multi-subtitles, press SUBTITLE continually to get to the language you desire.
17	ANGLE	Change angle in DVD mode.
18	PREV (PREVIOUS, |<<)	In DVD mode, press to go to previous chapter. With SVCD, VCD, CD, MP3 discs, press to go to previous track.
19	NEXT (NEXT, >>|)	In DVD mode, press to go to next chapter. With SVCD, VCD, CD, MP3 discs, press to go to next track.
20	REV	Press this button for quick rewind search.
21	FWD	Press this button for quick forward search.
22	DISC/USB	Press this button to switch the play between DISC and USB.
23	SLOW	Press to select slow speed playing.
24	LANGUAGE	When playing DVD with more than one audio stream, press LANGUAGE to select what you desired.
25	CD RIPPING	Press the button to use the CD ripping function.
26	PROG	If the disc is with 2 or more tracks, chapters or titles, set up the playing order as your reference. Press this button to enter program menu. Press digit key to input the number of the track, title or chapter. If the programmed tracks are over ten press 10+ to go on programming. (Maximum 16 programmable items) use the up / down / left / right key to move the cursor to the PLAY. Press ENTER to start Program play.
27	HD	Press the button to choose the following resolution levels from the HDMI output.
28	A-B	Press to repeat certain sections. Press button on start point (A) and the end point (B) to select section. Cancel by pressing button a third time.

No.	Function	Description
29	ZOOM	Press to Zoom in, press again to zoom out. Use arrow keys to move picture.
30	MUTE	Mute the sound during playing.
31	N/P	Press to switch the TV system between NTSC and PAL.

Maintenance

To ensure the longevity and optimal performance of your ELECTCOM PRO DVD Player, follow these maintenance guidelines:

- **Cleaning the Unit:** Use a soft, dry cloth to wipe the exterior of the player. Do not use liquid cleaners or aerosol sprays, as they may damage the finish or internal components.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of dust, fingerprints, and scratches. Use a soft, lint-free cloth to wipe discs from the center outwards.
- **Ventilation:** Ensure the player is placed in a well-ventilated area. Do not block any ventilation openings on the unit.
- **Storage:** When not in use for extended periods, unplug the player and store it in a cool, dry place.

Troubleshooting

If you encounter issues with your DVD player, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cord not connected; Power outlet not active.	Ensure the power cord is securely plugged into the player and a working electrical outlet.
No Picture	Incorrect video cable connection; Incorrect TV input selected.	Check HDMI or RCA cable connections. Select the correct input source (e.g., HDMI 1, AV) on your TV.
No Sound	Incorrect audio cable connection; TV/audio system volume too low or muted.	Verify RCA audio cable connections. Increase volume on your TV/audio system and ensure it is not muted.
Disc Error / No Disc / ERR DISC	Disc is dirty, scratched, or incompatible format; Disc inserted incorrectly.	Clean the disc with a soft cloth. Try a different disc. Ensure the disc is inserted correctly with the label side facing up. Verify the disc format is supported (DVD, CD, VCD, SVCD).

Problem	Possible Cause	Solution
Remote Control Not Working	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace batteries with new ones, ensuring correct polarity. Remove any obstructions between the remote and the player's sensor.
Player Freezes During Playback	Disc issue; Temporary software glitch.	Try cleaning the disc or using a different one. Power off the player, wait a few seconds, then power it back on.

Specifications

Feature	Detail
Product Dimensions	1 x 11 x 3 inches
Item Weight	1 pounds (16 ounces)
Model Number	ELC-225
Brand	ELECTCOM PRO
Media Type Supported	CD, DVD (DVD, DVD-R/+R, DVD-/+RW, CD, CD-R/RW, VCD, SVCD)
Special Feature	Region Free
Resolution	1920x1080 (1080p Upscaling)
Connector Type	HDMI, RCA
Connectivity Technology	HDMI
Color	Black
Controller Type	Remote Control
Manufacturer	ELECTCOM PRO
Country of Origin	China
First Available Date	May 30, 2022

Warranty and Support

This product is typically covered by a standard return policy, which allows for returns or replacements within 30 days

of purchase. For specific warranty details, please refer to the documentation provided with your purchase or contact the retailer.

For technical support, troubleshooting assistance beyond this manual, or inquiries regarding your product, please contact ELECTCOM PRO customer service through their official website or the contact information provided with your purchase.

© 2024 ELECTCOM PRO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question