Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Pyle PLTLD24

PYLE 23.6" 1080p ELED RV Television User Manual

Model: PLTLD24 | Brand: Pyle

Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Pyle 23.6" 1080p ELED RV Television. Designed for versatility, this flat screen monitor features a full HD display, built-in multimedia disk combo, and multiple input/output interfaces, making it suitable for various applications including RVs and home use. Please read this manual thoroughly before using the product to ensure proper and safe operation.



Image: The Pyle 23.6" ELED RV Television, showcasing its sleek design, included remote control, and power adapter. A DVD disc is also visible, highlighting the built-in multimedia capabilities.



Image: The Pyle RV Television screen displaying a vibrant image, illustrating its capability for a more expansive spectrum of colors and realistic picture quality.

Safety Information

Always observe the following safety precautions to prevent electric shock, fire, or damage to the unit.

- Do not expose the unit to rain or moisture.
- Do not open the cabinet. Refer all servicing to qualified personnel.
- Ensure proper ventilation. Do not block ventilation openings.
- Use only the power adapter supplied with the unit.
- Protect the power cord from being walked on or pinched.
- Clean only with a dry cloth.
- Unplug the unit during lightning storms or when unused for long periods.

What's in the Box

Verify that all components are present before proceeding with installation.

- 23.6" ELED RV Digital TV
- Full Function Remote Control
- 2 x 'AAA' Batteries (for remote control)
- Power Adapter (100/240V, 50/60Hz)
- Removable Base Stands



Image: A visual representation of the items included in the product packaging, such as the television unit, remote control, power supply, and various cables.

Product Overview

Front and Side Features

The front of the television features the 23.6-inch ELED display. The side panel includes essential control buttons and the slot-in DVD player.



Image: The Pyle RV Television with its full-function remote control. An inset shows the side profile of the TV, highlighting the slot for the built-in DVD player.

Side Panel Button Controls

The side panel provides convenient access to basic TV functions.

PLAY/PAUSE: Play/pause disc playing.

EJECT: Eject disc.

VOL+/VOL-: Adjust the volume. Use to move left/right in the OSD menu screen. VOL+ button can be used to skip forward to next menu.

CH+/CH-: Press to scan through channels. Use to move down/up in the OSD menu screen.

MENU: Press to display the OSD menu, Press again to exit the menu.

SOURCE: Press to select the input source.

POWER: Turn on/off the TV set.



Image: A detailed view of the television's side panel, clearly labeling the functions of each button: Play/Pause, Eject, Volume Up/Down, Channel Up/Down, Menu, Source, and Power.

Back Inputs/Outputs Interface

The rear panel provides various connectivity options for external devices.

- **Input Interfaces:** HDMI, CVBS (Composite Video Broadcast Signal), RCA (L/R) Audio, VGA/PC, PC Audio, RF (Antenna)
- **Output Interfaces:** Coax (Digital) Audio, Headphones, Line out (Analogue) Audio
- **USB Port:** For multimedia playback.

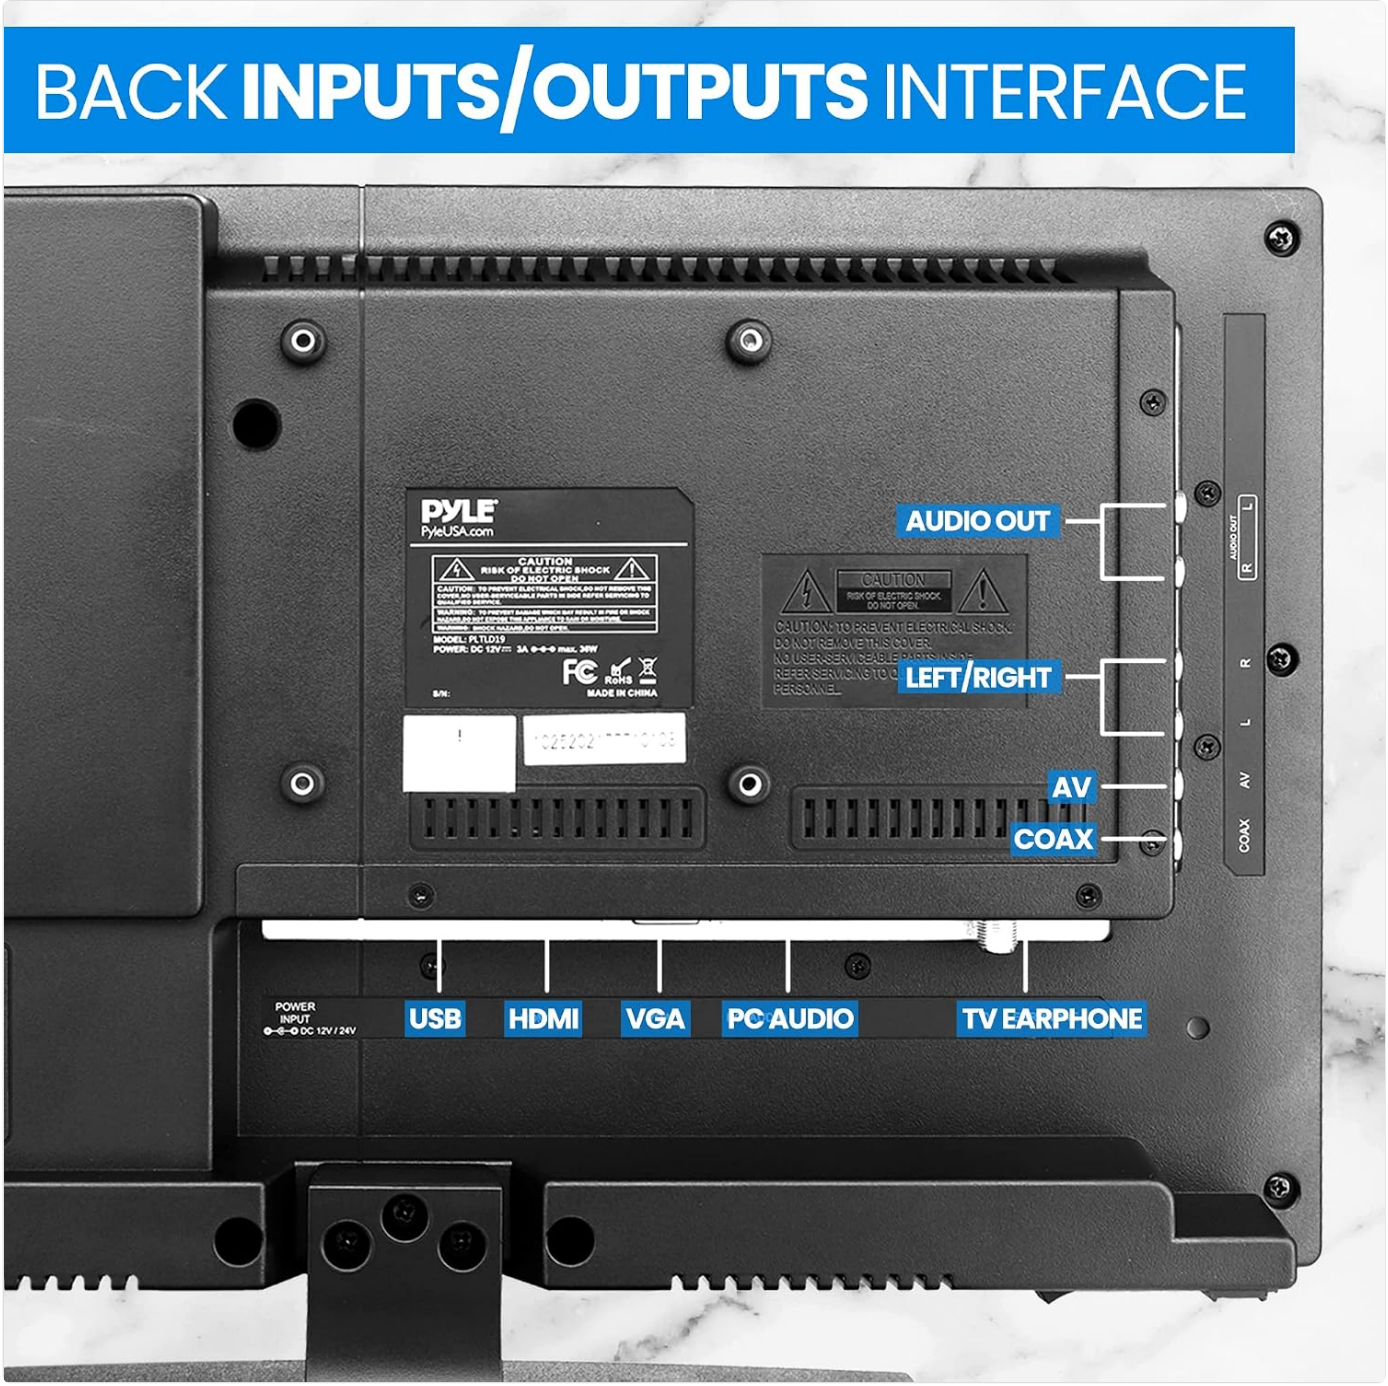


Image: The back panel of the Pyle RV Television, with labels indicating the various input and output ports including USB, HDMI, VGA, PC Audio, TV Earphone, Audio Out, Left/Right RCA, AV, and Coax.

Setup

Attaching the Base Stand

If you plan to place the TV on a flat surface, attach the included base stands. Align the stand with the slots on the bottom of the TV and secure with screws if provided.

Wall Mounting

The television features universal VESA mounting compatibility (100mm x 100mm) for wall mounting. Ensure you use a compatible VESA mount (sold separately) and follow the mount manufacturer's instructions for safe installation. The removable base stand facilitates wall mounting.



Image: A person is shown in the process of installing the Pyle RV Television onto a wall mount, demonstrating the ease of wall-mounting this unit.

Connecting Power

Connect the provided power adapter to the DC input port on the TV and then plug the adapter into a suitable power outlet (100-240V, 50/60Hz). This TV also supports 12V/24V car adapter for RV use.

Connecting External Devices

Use the appropriate input ports (HDMI, CVBS, VGA, RF) on the back of the TV to connect external devices such as DVD players, gaming consoles, or antennas. For PC connectivity, use the VGA port and PC Audio input.

Operating

Power On/Off

Press the **POWER** button on the remote control or the side panel to turn the TV on or off.

Input Source Selection

Press the **SOURCE** button on the remote or side panel to cycle through available input sources (HDMI, AV, VGA, TV, Media).

Menu Navigation

Press the **MENU** button to access the On-Screen Display (OSD) menu. Use the arrow buttons on the remote or CH+/CH- and VOL+/VOL- buttons on the side panel to navigate, and **ENTER** or **SOURCE** to confirm selections.

Built-in DVD Player

Insert a DVD disc into the slot on the side of the TV. The TV will automatically switch to DVD mode. Use the remote control for playback functions (Play, Pause, Stop, Skip, Eject).



Image: A hand is shown inserting a DVD disc into the integrated slot-in DVD player located on the side of the television unit.

Special Features

- **V-Chip:** Allows parental control over programming based on content ratings.
- **Closed Caption:** Displays on-screen text of the audio portion of a program.
- **Sleep Timer:** Sets the TV to automatically turn off after a specified period.
- **Display Modes:** Selectable multi-viewing display modes including 16:9, 4:3, Zoom, and Cinema.

PC Connectivity

The TV is compatible with both Mac and PC. Connect your computer using a VGA cable for video and a 3.5mm audio cable for sound. Select the VGA input source on the TV.



Image: The Pyle RV Television integrated into a desktop computer setup, demonstrating its compatibility with both Mac and PC systems for use as a monitor.

Maintenance

Proper care ensures the longevity of your television.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of water or a screen cleaner specifically designed for LED displays. Do not spray liquid directly onto the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to clean the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Keep the ventilation openings clear of dust and debris to prevent overheating.
- **Storage:** If storing the TV for an extended period, unplug it and store it in a cool, dry place, ideally in its original packaging.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working	Ensure power cord is securely plugged in; Test outlet with another device.
No picture, but sound is present	Incorrect input source selected; Loose video cable connection	Press SOURCE button to select correct input; Check video cable connections.
No sound, but picture is present	Volume too low or muted; Incorrect audio cable connection	Increase volume or unmute; Check audio cable connections.
Remote control not working	Batteries are dead or incorrectly inserted; Obstruction between remote and TV	Replace batteries, ensure correct polarity; Remove any obstructions.
DVD disc not playing or ejecting	Disc is dirty or damaged; Incorrect disc format; Player malfunction	Clean disc, try another disc; Ensure disc is compatible; Contact support if issue persists.

SPECIFICATIONS

Feature	Detail
Screen Size	23.6 inches (Diagonal)
Display Type	E-LED Backlight
Display Resolution	1920 x 1080 Pixels (Full HD 1080p)
Signal Support	1080p, 1080i, 720p, 480p, 480i
Display Modes	16:9, 4:3, Zoom, Cinema
Viewing Angle	178° Vertical, 178° Horizontal
Speaker Power	(2) 3 Watt, 4Ω
Refresh Rate	60Hz
TV Tuner	ATSC/NTSC
Response Time	6.5ms
Max. Color	16.7M
Contrast	3000:1 (30,000:1 Dynamic)
Brightness	220 cd/m2
VESA Mounting	100mm x 100mm
Power Input	100/240V, 50/60Hz (also 12V/24V compatible)
Power Consumption	36W
Product Dimensions (With Stand)	21.7" x 7.1" x 14.53" -inches (L x W x H)

Feature	Detail
Product Dimensions (Without Stand)	21.7" x 1.8" x 12.85" -inches (L x W x H)
Weight	11.48 lbs.



Image: A diagram illustrating the key dimensions of the Pyle RV Television, including its width, height, and depth, along with its weight.

Warranty and Support

For warranty information and technical support, please refer to the official Pyle website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Official Pyle Website: www.pyleusa.com

You can also find additional support and FAQs on the product's Amazon page:Amazon Product Page

© 2024 Pyle. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B3S8VSX3

More documents and user manuals: **https://manuals.plus/**