Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Wokceer Gold-10FT-G

Wokceer 10x10 FT Adjustable Heavy Duty Backdrop Stand Instruction Manual

Model: Gold-10FT-G

Introduction

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Wokceer 10x10 FT Adjustable Heavy Duty Backdrop Stand. Please read this manual carefully before use to ensure proper setup and safe operation. Keep this manual for future reference.

Package Contents

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact Wokceer customer support.

- L-shaped tubes (for corners)
- L-shaped tubes with screws (for corner connections)
- Short straight tubes (for horizontal and vertical extensions)
- 2 x Rectangular bases



Image: Overview of all included product accessories and components.

Setup Instructions

The Wokceer backdrop stand is designed for easy assembly. It is recommended to have two people for assembly, especially when setting up larger configurations.

1. **Step 1: Lay out Components**
   Unpack all components and lay them out on a clean, flat surface. Identify the L-shaped tubes, straight tubes, and bases.
2. **Step 2: Assemble Base Sections**
   Attach the L-shaped tubes to the rectangular bases. Ensure the screws are tightened securely to provide a firm foundation.
3. **Step 3: Connect Vertical Poles**
   Insert the straight tubes into the vertical sections of the L-shaped tubes attached to the bases. Adjust the height by adding or removing straight tubes as needed.
4. **Step 4: Connect Horizontal Poles**
   Connect the horizontal straight tubes between the two vertical structures. Use the L-shaped tubes with screws to secure the top corners. Tighten all screws to ensure the frame is stable.

5. **Step 5: Final Adjustments**
   Once the frame is assembled, you can adjust the height and width by adding or removing tubes. Ensure all connections are tight before hanging any backdrops.

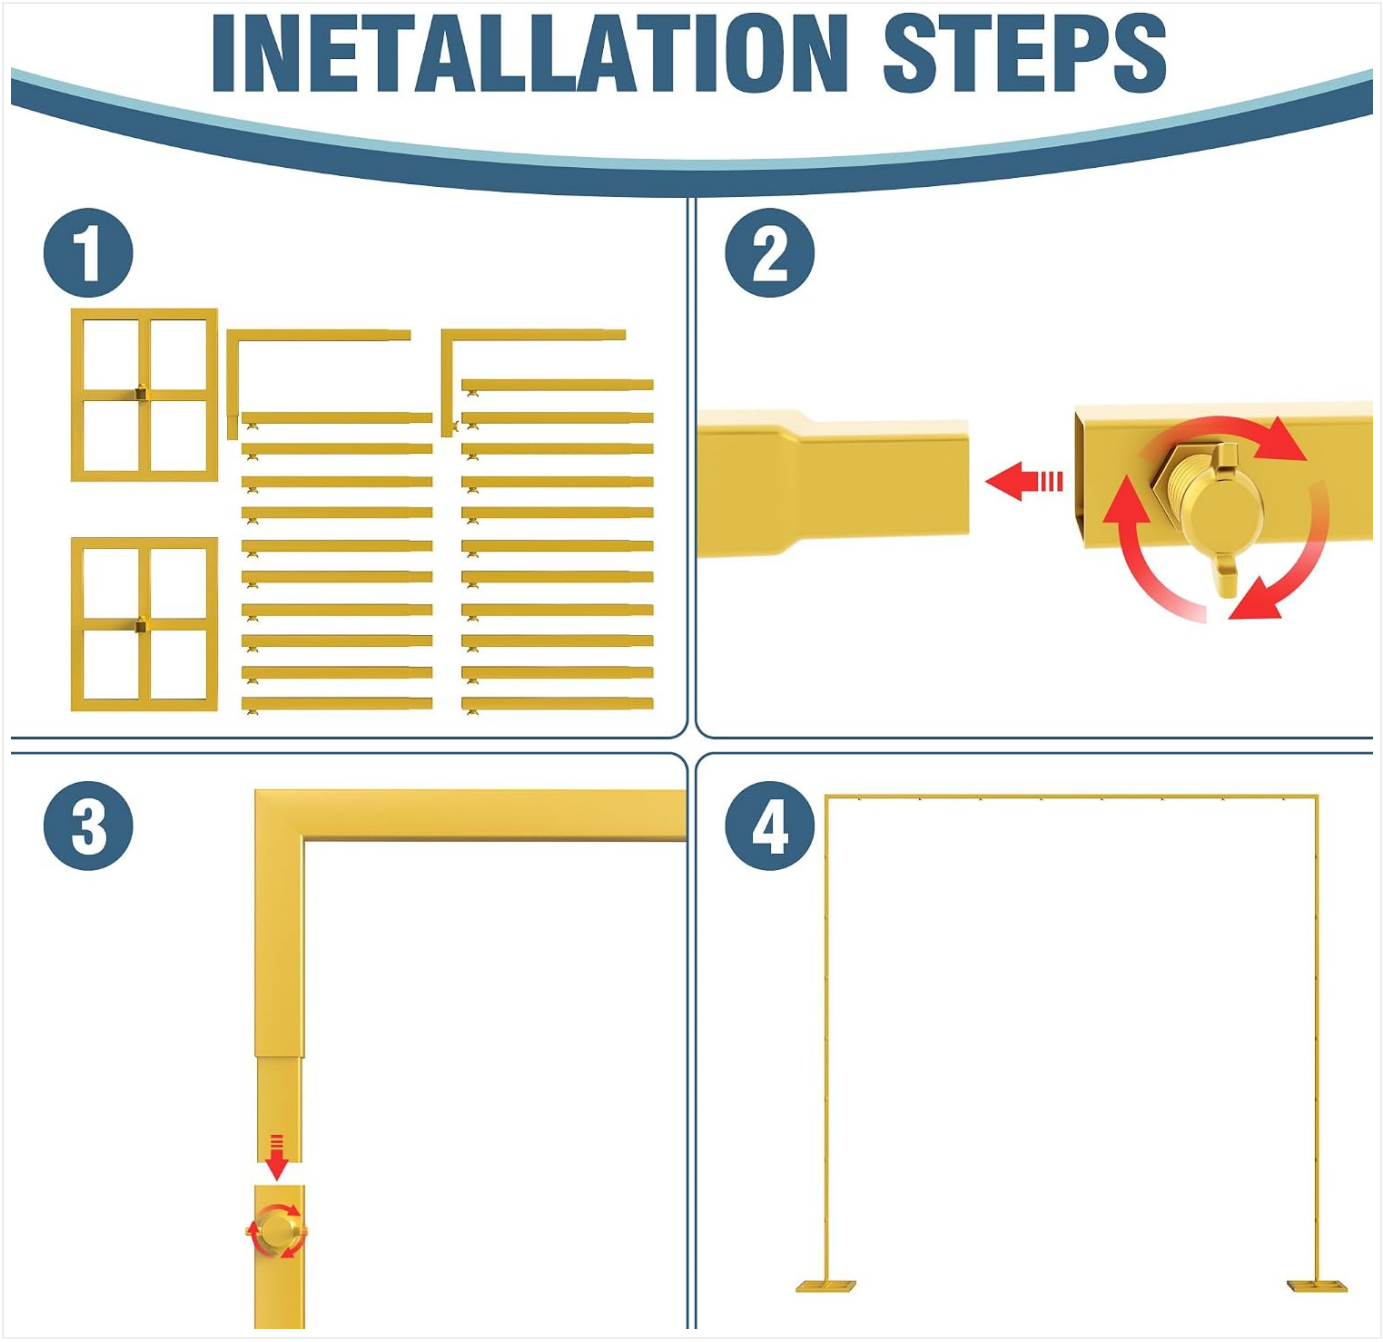


Image: Visual guide illustrating the four main steps for assembling the backdrop stand.

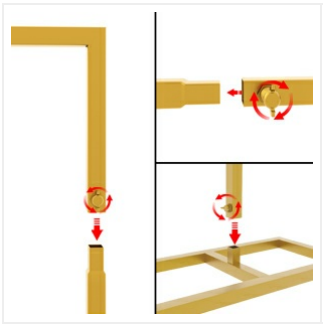


Image: Detail of the screw connection mechanism for securing metal pipes.

Installation Video Guide

For a visual demonstration of the assembly process, please refer to the official installation video:

[redacted]

Video: Official Wokceer installation instructions for the 10FT backdrop stand.

Operating Instructions

The Wokceer backdrop stand offers adjustable dimensions to suit various needs.

Adjusting Height and Width

- The stand can be adjusted from a minimum of 3.3 FT (height) x 6.6 FT (width) up to a maximum of 10 FT (height) x 10 FT (width).
- To adjust, simply add or remove the straight tube sections. Ensure all connection screws are securely tightened after making adjustments.
- For optimal stability, especially at maximum extensions, ensure the bases are placed on a flat, level surface.

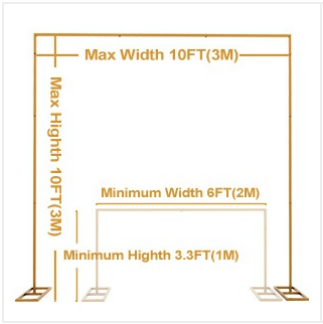


Image: Diagram illustrating the adjustable height and width features of the backdrop stand.

Securing Backdrops

Once the stand is assembled and adjusted to the desired size, you can drape or attach your backdrop material. Ensure the weight of the backdrop is evenly distributed and does not exceed the stand's capacity. For added stability, especially with heavier backdrops or in outdoor settings, consider placing sandbags or other heavy objects on the rectangular bases.

Maintenance

Regular maintenance will prolong the life of your Wokceer backdrop stand.

- **Cleaning:** Wipe down metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the epoxy resin coating.
- **Inspecting Connections:** Periodically check all screws and connections to ensure they remain tight. Loose connections can compromise stability.
- **Storage:** When not in use, disassemble the stand and store it in a dry, cool place to prevent rust or damage. Keeping components organized will facilitate quicker reassembly.

Troubleshooting

If you encounter issues with your backdrop stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is unstable or wobbly.	Loose screws; uneven surface; insufficient weight on bases; excessive backdrop weight.	Ensure all screws are tightened. Place stand on a level surface. Add sandbags or heavy objects to the bases. Reduce backdrop weight if necessary.
Difficulty connecting tubes.	Misalignment; debris in tube ends.	Ensure tubes are aligned correctly before pushing together. Check for and remove any obstructions.
Screws loosen during use.	Vibration; insufficient initial tightening.	Retighten all screws periodically. Consider using thread-locking fluid if persistent.

Specifications

Feature	Detail
Brand	Wokceer
Model Number	Gold-10FT-G
Material	Metal (Epoxy Resin Coated Square Pipe)
Color	Gold
Adjustable Dimensions (H x W)	Min: 3.3 FT x 6.6 FT (1M x 2M) Max: 10 FT x 10 FT (3M x 3M)
Pipe Thickness	1.0mm
Required Assembly	Yes

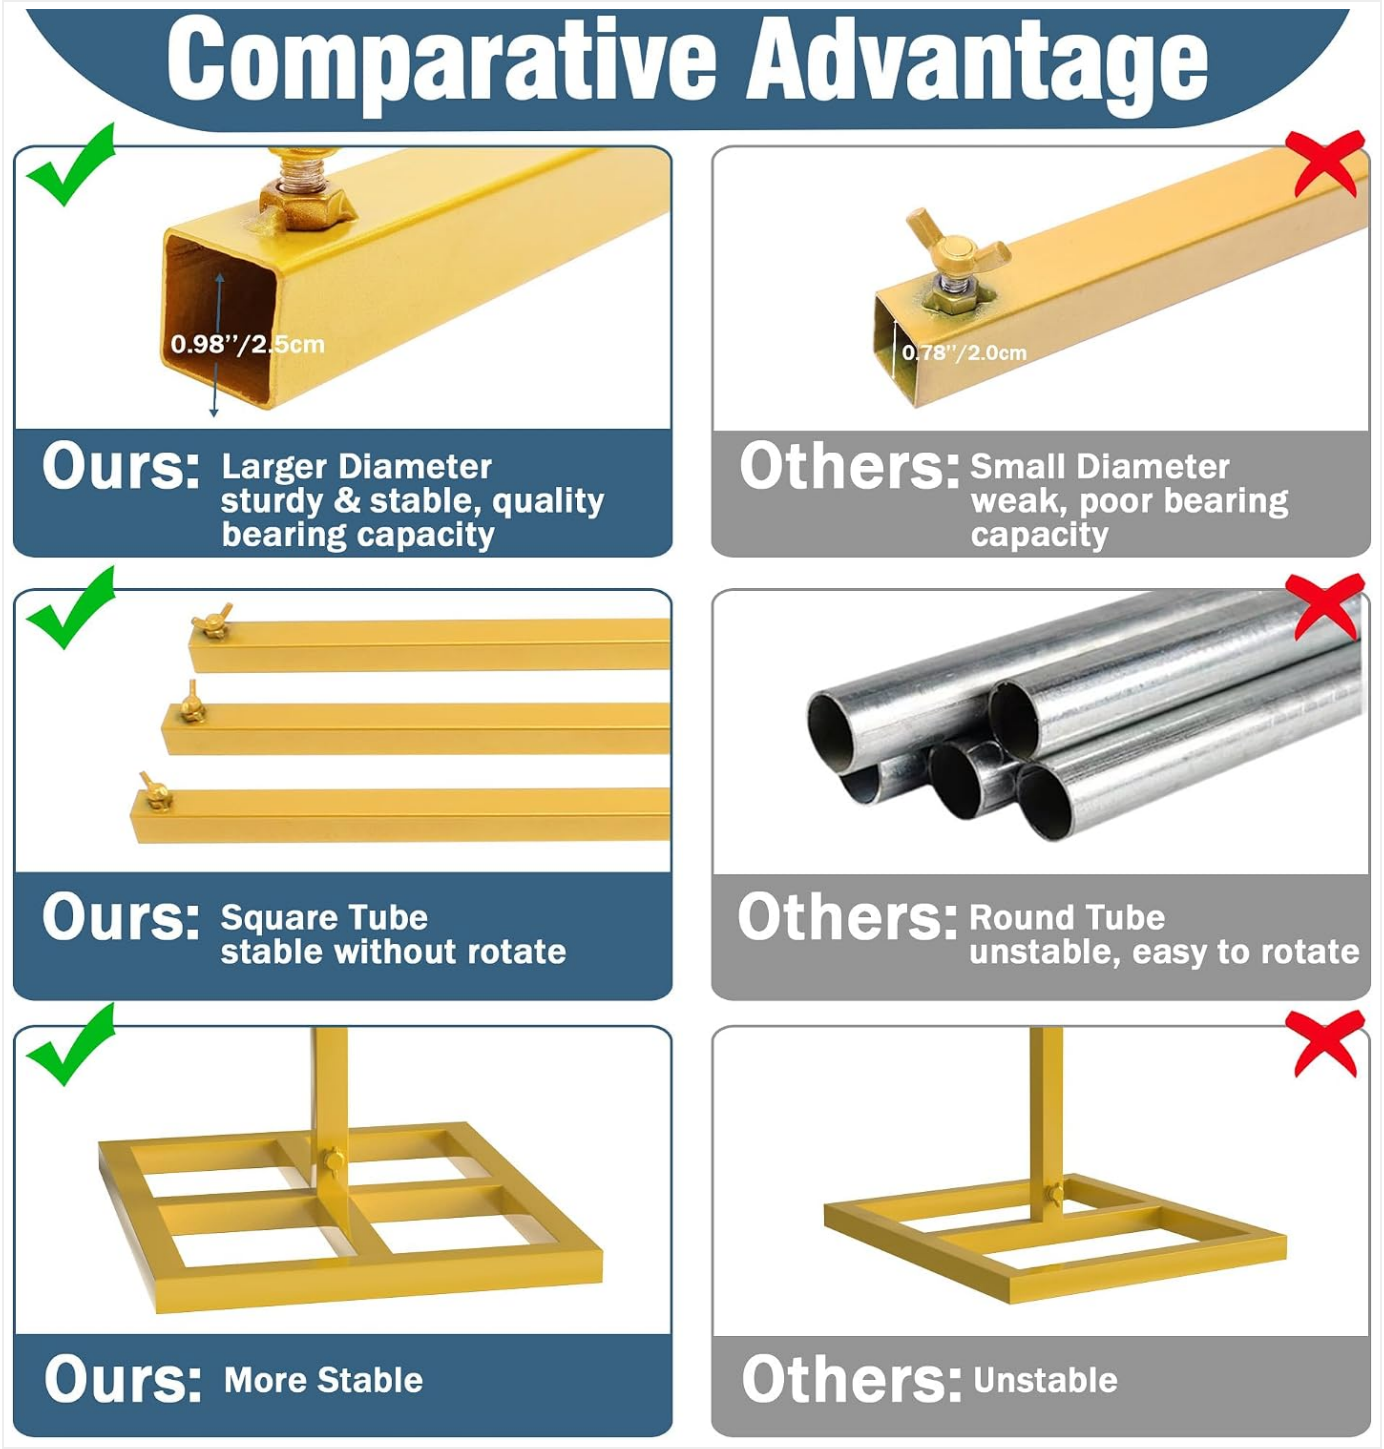


Image: Comparison highlighting the larger diameter, square tube design, and stable base of the Wokceer stand.



Image: Close-up view of the thickened metal pipe, indicating robust construction.

Warranty and Support

For warranty information or technical support, please contact Wokceer customer service. Keep your purchase receipt and model number (Gold-10FT-G) handy when contacting support.
Wokceer is committed to providing quality products. If you experience any issues or have questions not covered in this manual, please reach out to the manufacturer directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B429G4L8

More documents and user manuals: **https://manuals.plus/**