Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FOHERE 8041

FOHERE Electric Kettle Model 8041 User Manual

Your guide to safe and efficient use of your FOHERE Electric Kettle.

Introduction

Thank you for choosing the FOHERE Electric Kettle Model 8041. This appliance is designed to provide precise temperature control for various hot beverages, featuring a durable borosilicate glass body, 304 stainless steel components, and a convenient removable tea infuser. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



Image: The FOHERE Electric Kettle, highlighting its intelligent features like the independent infuser lid, LCD display, concealed heating element, borosilicate glass, BPA-free materials, and 304 stainless steel construction.

Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- The kettle is for household use only.

Setup and First Use

Unpacking

Carefully remove all packaging materials and inspect the kettle for any damage. Ensure all components listed in the 'Included Components' section are present.

Initial Cleaning

Before using your FOHERE Electric Kettle for the first time, it is recommended to perform an initial cleaning to remove any manufacturing residues and enhance flavor:

1. Fill the kettle halfway with water.
2. Add 2 tablespoons of salt.
3. Shake the kettle gently to mix the salt and water.
4. Boil the saltwater mixture.
5. Repeat this process several times.
6. Alternatively, you can rub the inside of the kettle with used tea leaves and then rinse thoroughly with clean water.

Placement

Place the kettle base on a stable, flat, heat-resistant surface away from the edge of the counter. Ensure the power cord is not dangling or in contact with hot surfaces.

Operating Instructions

Filling the Kettle

Open the lid and fill the kettle with fresh cold water. Do not fill below the minimum mark or above the maximum mark (1.7 liters). Ensure the lid is securely closed before operating.

Powering On and Temperature Selection



Image: Detailed view of the FOHERE Electric Kettle's control panel, showing the Mute button, Custom Temp button, Keep Warm button,

LCD display, and the temperature control knob with Start/Cancel button.

Place the kettle onto its power base. The LCD display will illuminate, showing the current water temperature. You can select your desired temperature using the following methods:

- **Preset Programs:** The kettle offers 9 preset brewing programs for various beverages. These include:



Image: Visual representation of the 9 preset temperature programs for different types of tea and coffee: Boil (100°C), Black Tea (96°C), Coffee (95°C), Oolong Tea (90°C), White Tea (85°C), Green Tea (80°C), Delicate (70°C), Warm (58°C), and Formula (45°C).

- **Custom Temperature Control:** For professional brewing, use the temperature control knob to set the desired temperature in 1-degree increments from 40°C to 100°C.

Once the desired temperature is selected, press the **START/CANCEL** button to begin heating. The LCD display will show the real-time temperature as it heats.

Keep Warm Function

The kettle features a 120-minute (2-hour) keep warm function, maintaining the water temperature up to 96°C. There are two ways to activate this function:



Image: Step-by-step guide on how to activate the 2-hour keep warm function (Plan A: Set temp, click Keep Warm, click Start/Cancel. Plan B: Set temp, click Start/Cancel, then click Keep Warm).

- **Plan A (Activate before heating):** Turn the knob to your desired temperature, then click the **KEEP WARM** button, and finally press **START/CANCEL** to begin heating. The kettle will automatically enter keep warm mode once the target temperature is reached.
- **Plan B (Activate after heating starts):** Turn the knob to your desired temperature, then press **START/CANCEL** to begin heating. Once heating has started, click the **KEEP WARM** button. The kettle will enter keep warm mode once the target temperature is reached.

If the kettle is lifted from the base during the keep warm cycle, the heating will pause. It will resume the keep warm function if placed back on the base within 10 minutes.

Mute Function

To silence the kettle's operational tones (e.g., ready beep), press and hold the **MUTE** button for 3 seconds.

Using the Removable Tea Infuser

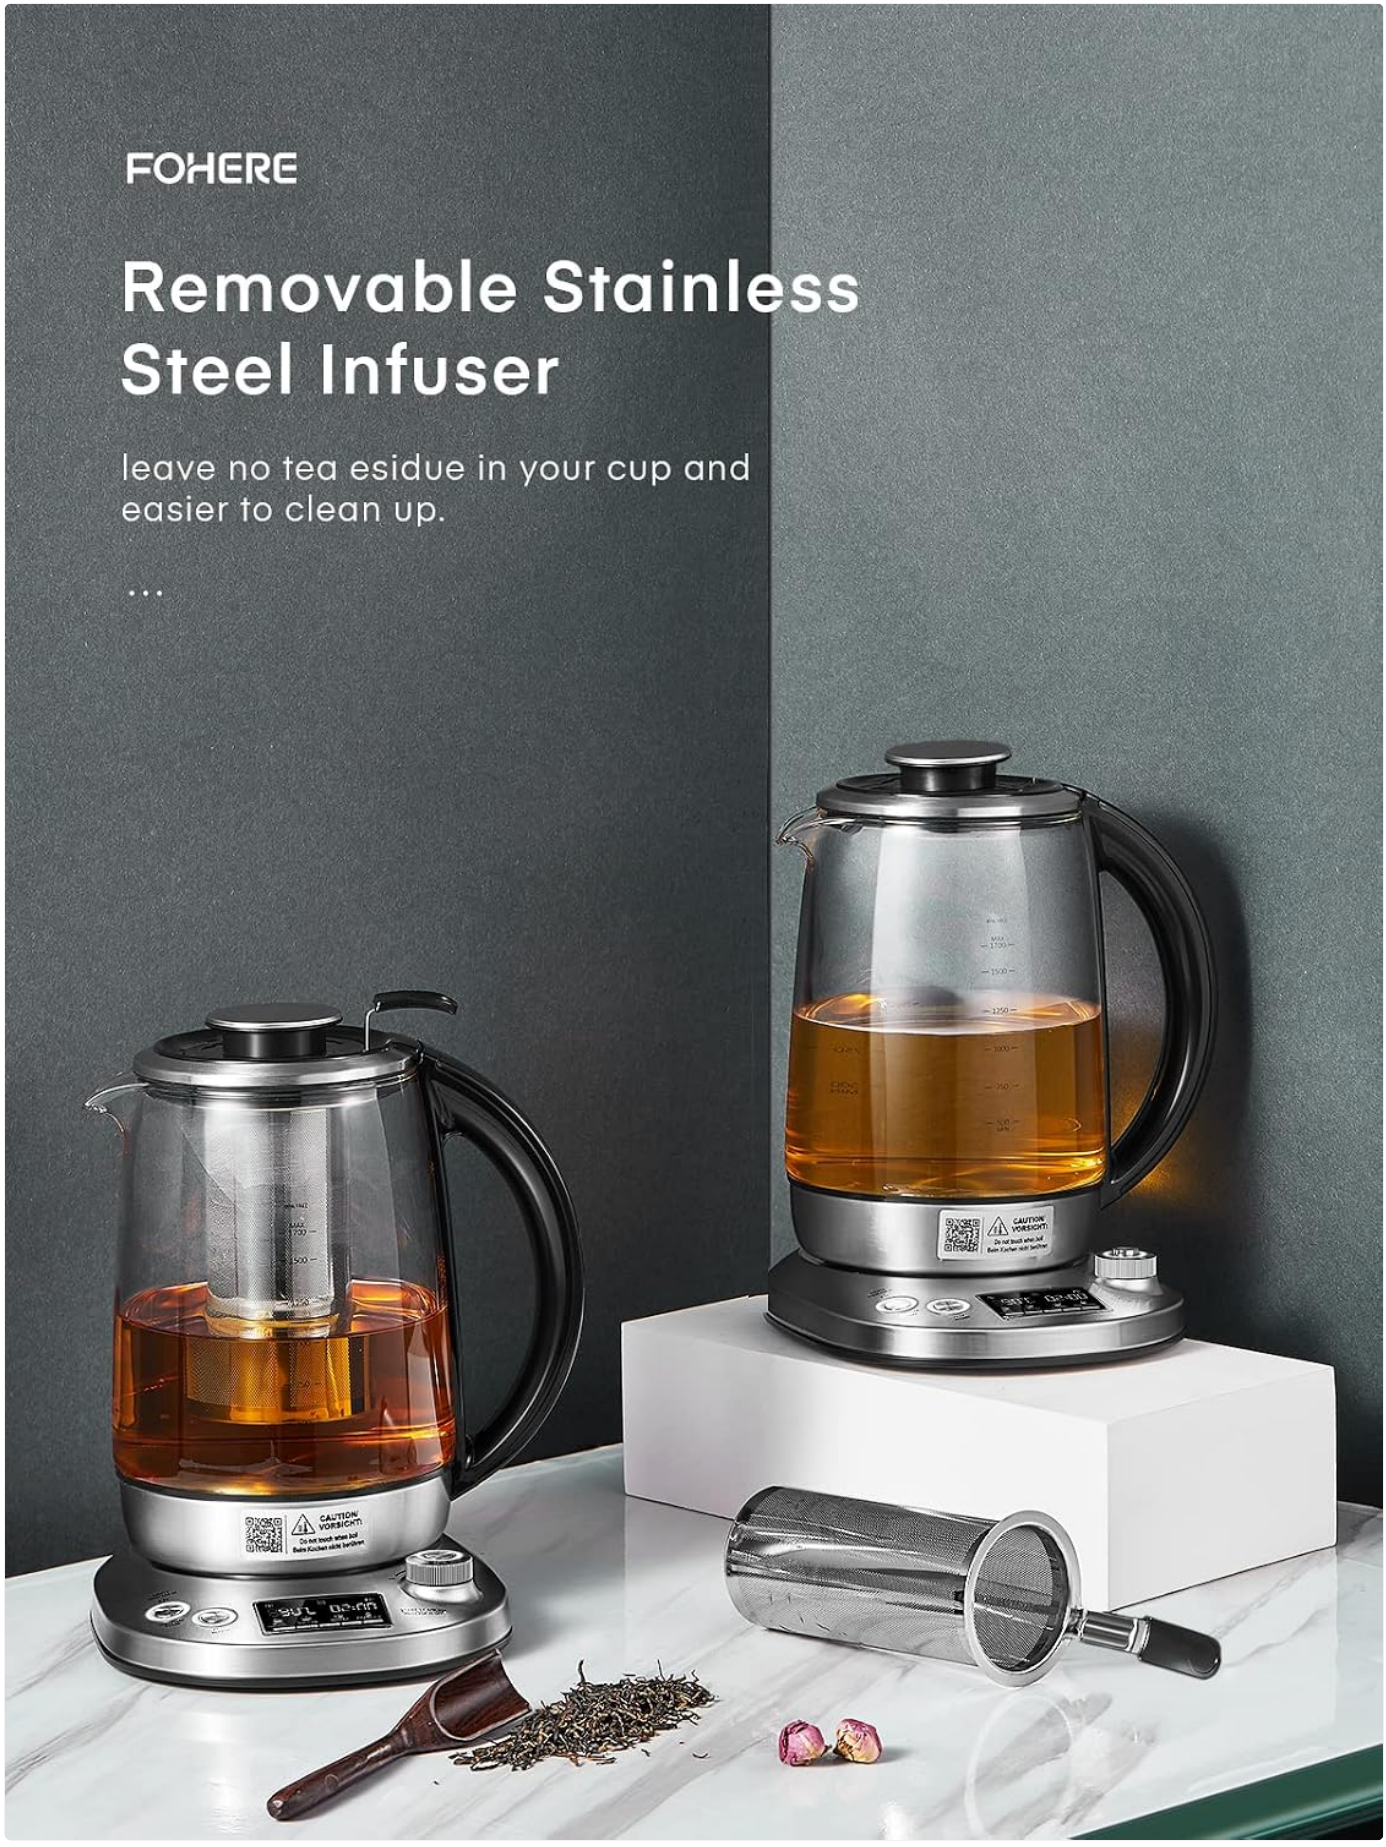


Image: The FOHERE Electric Kettle shown alongside its removable stainless steel tea infuser, emphasizing its ease of use and cleaning.

The integrated tea infuser allows for direct brewing of loose-leaf tea:

1. Remove the infuser from the kettle.
2. Place your desired amount of loose tea leaves into the infuser.

3. Insert the infuser back into the kettle.
4. Fill the kettle with water and select your desired temperature for tea brewing.
5. Once brewing is complete, carefully remove the infuser to separate the tea leaves from the brewed tea.

If you do not wish to brew tea, the infuser can be removed, allowing the kettle to be used solely for heating water for coffee, instant meals, or other purposes.

Care and Maintenance

Cleaning

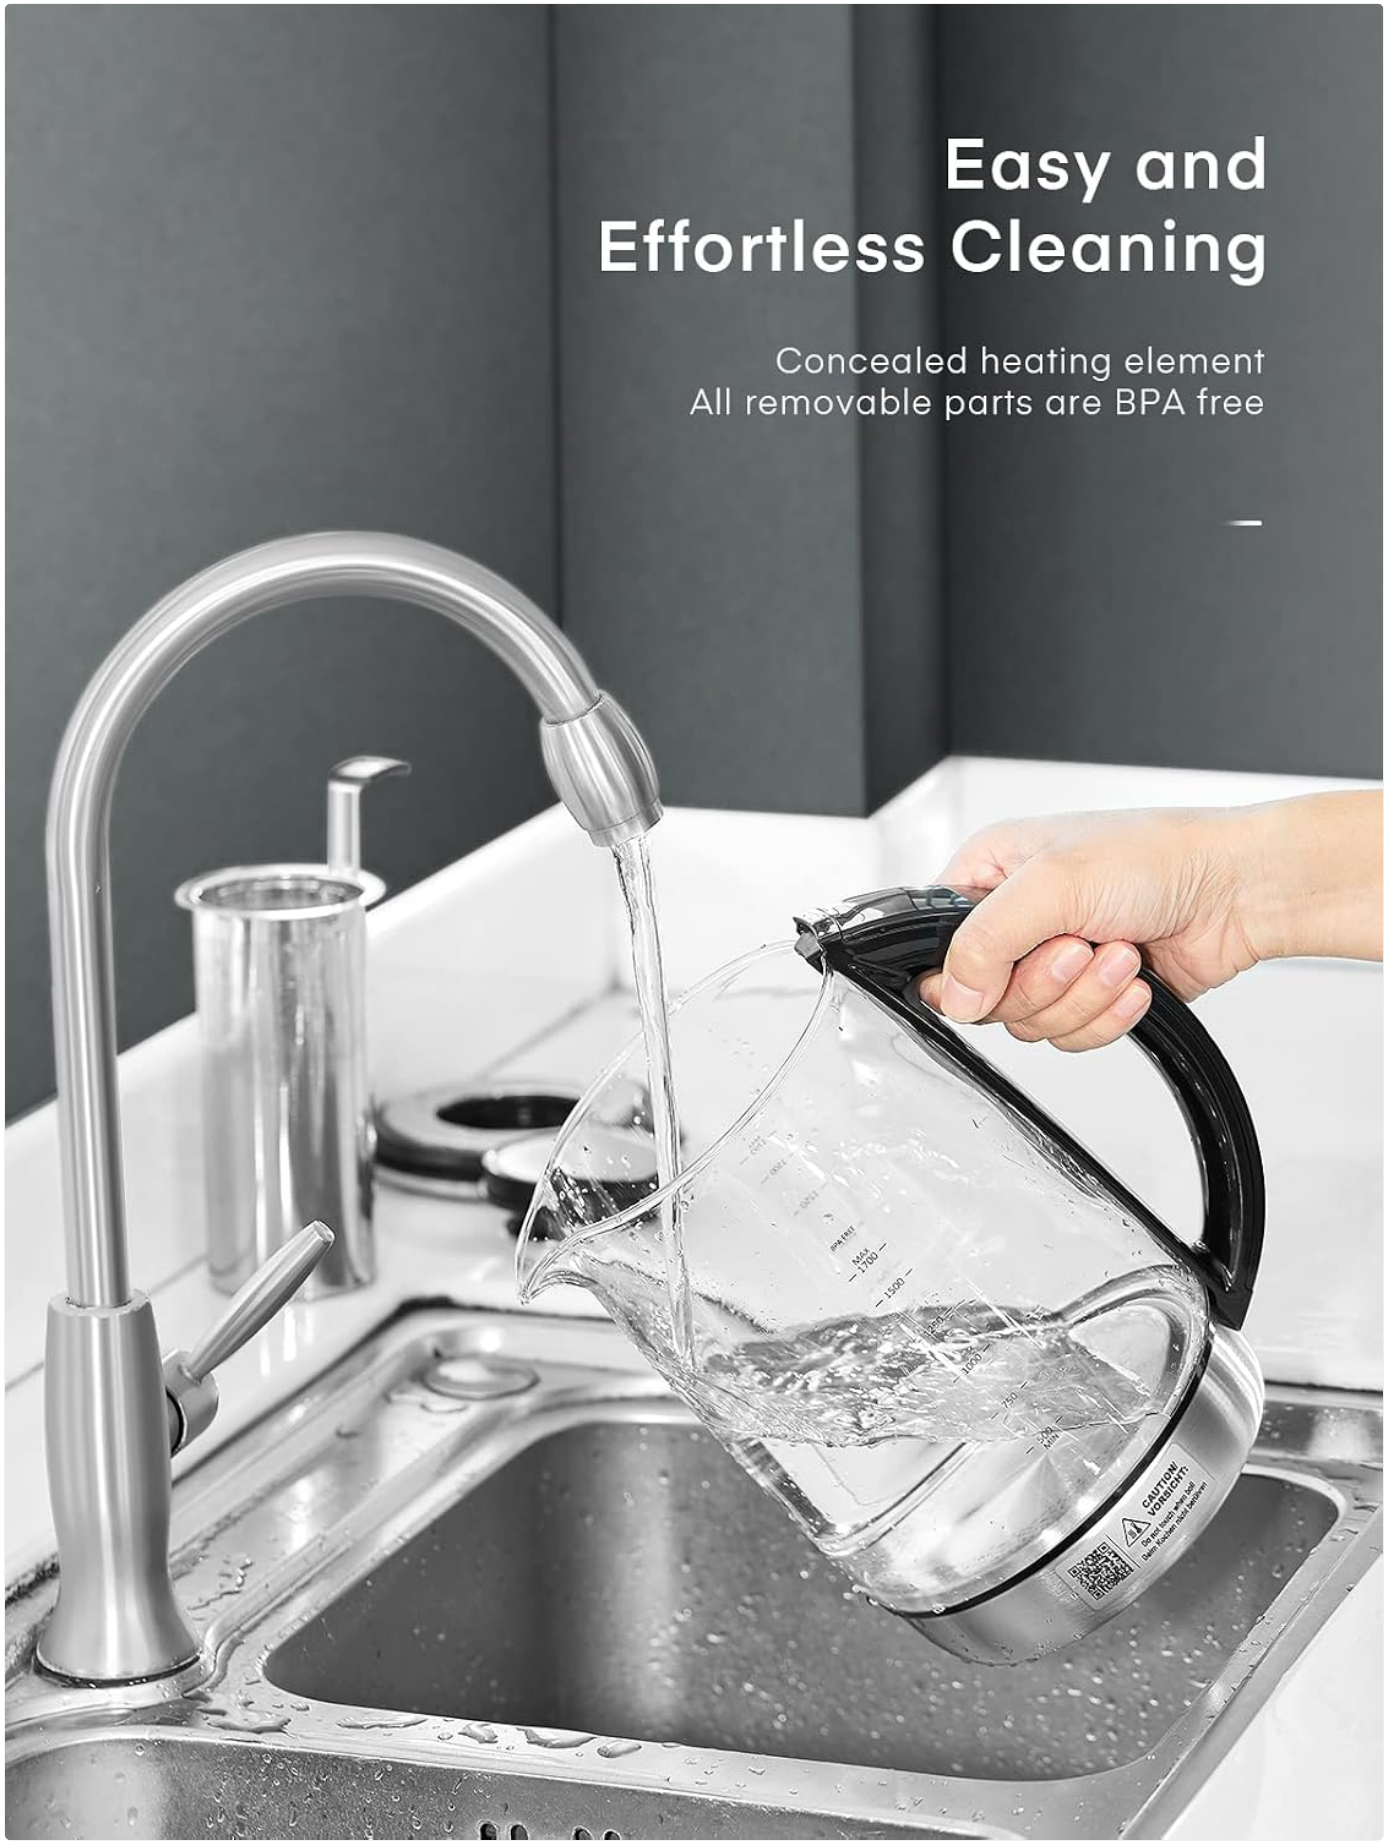


Image: A hand rinsing the FOHERE Electric Kettle under a kitchen faucet, demonstrating its easy and effortless cleaning due to the concealed heating element and removable parts.

Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners

or scouring pads, as they may scratch the surface.

- **Interior:** The kettle's wide opening allows for easy cleaning of the interior. Rinse with clean water.
- **Tea Infuser:** The removable stainless steel infuser can be easily rinsed under running water.

Descaling

Mineral deposits (limescale) can build up inside the kettle over time, especially in hard water areas. Regular descaling is recommended to maintain performance and prolong the life of your kettle. Follow these steps:

1. Fill the kettle with 1 cup of vinegar or lemon juice and 2 cups of water.
2. Boil the mixture and let it stand for 1 hour.
3. Use a cloth to clean and wipe the interior.
4. Rinse the kettle thoroughly with clean water and dry it with a soft, clean cloth.
5. Repeat steps 1-3 if necessary for stubborn deposits.

Material Quality



Image: A detailed view of the FOHERE Electric Kettle's construction, emphasizing the use of BPA-free silicone material, food-grade stainless steel, and premium quality borosilicate glass for safety and durability.

The FOHERE Electric Kettle is constructed from high-quality, food-grade materials, including 304 stainless steel and borosilicate glass, ensuring durability, resistance to scratches and cracks, and preserving the natural taste of your beverages. All materials in contact with water are food-grade and BPA-free.

Troubleshooting

If you encounter any issues with your FOHERE Electric Kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not pressed; kettle not properly seated on base; no water in kettle.	Ensure kettle is plugged into a working outlet. Press START/CANCEL. Ensure kettle is correctly placed on the power base. Add water to the kettle.
Water has an unusual taste.	First use residue; mineral deposits.	Perform initial cleaning as described in 'Setup'. Descale the kettle if mineral deposits are present.
Kettle switches off too soon.	Excessive limescale buildup.	Descale the kettle according to the 'Descaling' instructions.
LCD display is blank or unresponsive.	Power issue; electronic malfunction.	Check power connection. Try unplugging and re-plugging the kettle. If the issue persists, contact customer support.
Kettle is noisy during operation.	Normal boiling sound; limescale buildup.	Some noise is normal during heating. If excessive, descale the kettle.

For problems not listed here, or if solutions do not resolve the issue, please contact FOHERE customer support.

Specifications



Image: The FOHERE Electric Kettle with its approximate dimensions: 27cm (height), 20cm (width), and 20cm (depth).

Feature	Detail
Brand	FOHERE
Model Number	8041 (KEG8041-GS)
Capacity	1.7 Liters
Material	Borosilicate Glass & 304 Stainless Steel

Feature	Detail
Color	Silver
Wattage	2200 Watts
Voltage	230 Volts
Special Features	Automatic Shut-off, 9 Temperature Presets, 1-degree Temperature Control, 2-hour Keep Warm Function, Removable Tea Infuser, LCD Display
Item Dimensions (L x W x H)	27L x 20W x 20H centimeters
Item Weight	1.07 Kilograms
Included Components	1 * Electric Glass Kettle, 1 * Heating Base, 1 * Removable Infuser, 1 * Manual
Country of Origin	China

Warranty and Support

FOHERE is committed to providing high-quality products and customer satisfaction. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance, or any questions regarding your FOHERE Electric Kettle, please contact FOHERE customer service through the retailer where you purchased the product or visit the official FOHERE brand store online:

Visit the FOHERE Brand Store
Connect with FOHERE on Facebook

© 2026 FOHERE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B4D97VZN

More documents and user manuals: **https://manuals.plus/**