Bajaj 490069

Bajaj 25 Litre Convection Microwave Oven User Manual

Model: 490069

Introduction

Thank you for purchasing the Bajaj 25 Litre Convection Microwave Oven. This appliance is designed to provide versatile cooking options, including microwave, grill, and convection functions, along with specialized features like Autocook Menus and Steam Clean Mode. Please read this manual thoroughly before operating the oven to ensure safe and efficient use.



Front view of the Bajaj 25 Litre Convection Microwave Oven, showcasing its black finish and control panel.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. Pay particular attention to the oven door, door seals, and door screen.
- Only qualified service personnel should adjust or repair the oven.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Regularly clean the oven and remove any food deposits.

What's in the Box

Upon unpacking, please verify that all the following components are present and in good condition:

- Oven Glass Tray (1N)
- Turntable Roller (1N)
- Baking Tray (1N)
- Wire Grill Rack (1N)
- Instruction Manual (1N)
- Warranty Card (1N)




The included baking tray, suitable for various cooking functions.

Setup

1. **Unpacking:** Carefully remove the oven and all packing materials from the carton.
2. **Placement:** Place the oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation space: at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on each side.
3. **Power Connection:** Plug the power cord into a standard 230V, 50Hz grounded electrical outlet. Do not use an extension cord.
4. **Turntable Assembly:**
    - Place the turntable roller ring in the depression on the bottom of the oven cavity.
    - Place the glass tray on top of the turntable roller ring, ensuring it is securely seated.



Interior view of the oven, showing the glass turntable and roller ring in place.

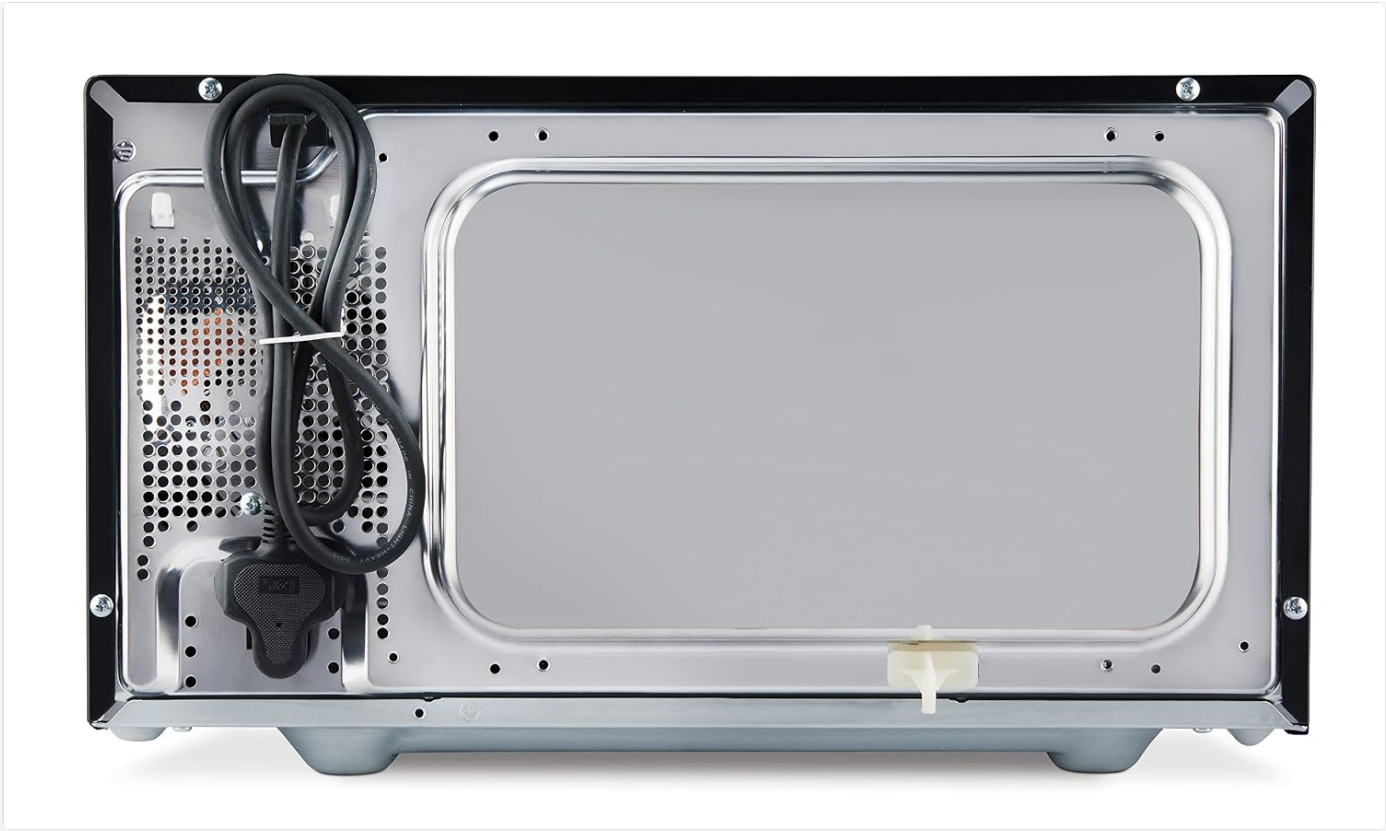

Rear view of the oven, highlighting the ventilation grilles. Ensure these are not obstructed.

Operating Instructions

The Bajaj Convection Microwave Oven features electronic controls and multiple cooking modes.

Control Panel Overview

The control panel includes a digital display, numeric keypad (0-9), and dedicated function buttons for various cooking modes and settings.

- **Quick Start:** Initiates cooking at full power for 30 seconds with each press.
- **Start:** Confirms settings and begins cooking.
- **Stop/Cancel:** Stops cooking, clears settings, or cancels a program.
- **Time/Weight Defrost:** Allows defrosting by time or by weight.
- **Power:** Adjusts microwave power levels.
- **Timer:** Sets cooking time.
- **Autocook Menus:** Accesses 207 pre-programmed cooking options.
- **Nutri-Pro Feature:** Enhances nutrient retention during cooking.

Cooking Modes

1. Microwave Cooking

Ideal for reheating and cooking various foods quickly.

1. Place food in a microwave-safe container on the glass tray.
2. Close the oven door.
3. Press the "Microwave" button (if available, or select power level).
4. Use the numeric keypad to enter the desired cooking time (up to 99 minutes).

5. Press "Power" repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80%, etc.).
6. Press "Start" to begin cooking.

2. Grill Cooking

For browning and crisping food.

1. Place food on the wire grill rack (if provided) or a suitable grill-safe dish.
2. Close the oven door.
3. Press the "Grill" button.
4. Enter the desired grilling time using the numeric keypad.
5. Press "Start" to begin grilling.

3. Convection Cooking

For baking and roasting, similar to a conventional oven.

1. Place food in a heat-resistant dish.
2. Close the oven door.
3. Press the "Convection" button.
4. Use the numeric keypad to set the desired temperature.
5. Enter the desired cooking time.
6. Press "Start" to begin convection cooking. The oven will preheat to the set temperature before cooking starts.

4. Autocook Menus

The oven features 207 pre-programmed autocook menus for various dishes.

1. Press the "Autocook Menus" button.
2. Use the numeric keypad to select the desired menu number (refer to the recipe chart in the separate recipe book or on the oven door for specific menu codes).
3. Enter the food weight if prompted.
4. Press "Start" to begin.

5. Defrost Function (Time/Weight)

For thawing frozen food.

- **Time Defrost:**
    a. Press "Time/Weight Defrost" once.
    b. Enter the desired defrosting time.
    c. Press "Start".
- **Weight Defrost:**
    a. Press "Time/Weight Defrost" twice.
    b. Enter the weight of the food in grams.
    c. Press "Start".

6. Steam Clean Mode

Helps in loosening food residues for easier cleaning.

1. Place a microwave-safe bowl with water and a few drops of lemon juice inside the oven.

2. Press the "Steam Clean" button.
3. Press "Start". The oven will generate steam to loosen grime.
4. After the cycle, carefully remove the bowl and wipe the interior with a damp cloth.

Maintenance and Cleaning

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior with a damp cloth. For stubborn stains, use the Steam Clean Mode or a mild, non-abrasive cleaner. Do not use harsh detergents or abrasive pads.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Seals:** Keep the door seals and adjacent parts clean. Wipe them regularly with a damp cloth to remove spills and splatters.
- **Glass Tray and Roller Ring:** The glass tray and roller ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave for 5-7 minutes. Wipe the interior clean.
- **Ventilation:** Ensure the ventilation openings on the back and sides of the oven are not blocked.

Troubleshooting

If you encounter any issues with your oven, please refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven does not start	• Power cord not plugged in. • Door not closed properly. • Fuse blown or circuit breaker tripped.	• Plug into electrical outlet. • Close door securely. • Replace fuse or reset circuit breaker.
Food not cooking evenly	• Food not stirred or turned. • Incorrect power level or cooking time.	• Stir or turn food halfway through cooking. • Adjust power level and cooking time as needed.
Light not working	• Bulb is loose or burnt out.	• Contact customer service for bulb replacement.
Oven smells bad	• Food residue inside.	• Clean the oven interior thoroughly, use Steam Clean Mode.

Specifications

Feature	Detail
Brand	Bajaj
Model	490069
Capacity	25 Litres

Feature	Detail
Oven Cooking Mode	Convection
Microwave Output Power	900W
Microwave Wattage	1500W
Grill Wattage	1000W
Convection Wattage	2000W
Voltage	230V, 50Hz
Control Type	Electronic
Cooking Levels	10
Autocook Menus	207
Special Features	Timer, Defrost, Nutri-Pro, Steam Clean Mode
Material	Chassic: MS zinc passivated/galvanized(SGCD), Inner: Stainless Steel
Color	Black
Item Weight	15 kg 800 g
Dimensions (LxWxH)	30 x 38 x 28 Centimeters



Diagram showing the approximate dimensions of the Bajaj 25 Litre Convection Microwave Oven.

Warranty and Support

Your Bajaj 25 Litre Convection Microwave Oven comes with a**1-year warranty on the product** from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.
For technical assistance, service requests, or any queries regarding your product, please contact Bajaj customer care:

- **Phone:** 02241280000
- **Email:** consumercare@bajajelectricals.com
- **Manufacturer:** Bajaj Electricals Ltd, 45/47, Veer Nariman Road, Mumbai 400001

For more information, you may also visit the official Bajaj website or the Bajaj Store on Amazon.

© 2024 Bajaj Electricals Ltd. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question