Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Pairtty RC-G008

Universal TV Remote Control Instruction Manual

Brand: Pairtty | Model: RC-G008

1. Introduction

This instruction manual provides comprehensive guidance for setting up and operating your new Pairtty Universal TV Remote Control (Model: RC-G008). This remote is designed to be a universal replacement for a wide range of TV brands, including LG, Samsung, Philips, Panasonic, Sharp, TCL, Vizio, Sony, Sanyo, Insignia, Toshiba, Magnavox, Hisense, JVC, Hitachi, Westinghouse, Vestel, and Seiki Smart TVs.
Its compact and lightweight design ensures comfortable handling, offering a complete set of functions to replace your old or damaged remote control.





Figure 1: Pairtty Universal TV Remote Control. This image shows the full layout of the remote control, highlighting its ergonomic design and comprehensive button arrangement for various TV functions.

2. Safety Information

- Do not mix old batteries with new batteries.
- Do not mix different types of batteries together.
- If the remote control does not work during use, try reinstalling the batteries.
- Replace batteries when the remote control becomes less responsive.
- Batteries are not included with the remote control. Requires 2 AAA batteries.

3. Package Contents

- 1 x Pairtty Universal TV Remote Control (Model: RC-G008)
- 1 x Instruction Manual

4. Setup Instructions

The Pairtty Universal TV Remote Control offers two primary methods for setup to ensure compatibility with your television. Please follow one of the methods below:

Method 1: Set by Code

1. Ensure your TV is turned on.
2. Press and hold the **Power** button and the **Mute** button simultaneously for 3 seconds. The LED indicator on the remote will flash three times and then remain lit, indicating it is in programming mode.
3. Refer to the provided code list in the instruction manual (see Figure 2) to find the 3-digit code for your TV brand.
4. Enter the 3-digit code using the number buttons on the remote.
5. If the code is correct, the LED light will turn off, indicating successful pairing. If the code is incorrect, the LED light will remain lit, and you should try another code from the list for your brand.

Method 2: Brand Search

1. Ensure your TV is turned on.
2. Press and hold the corresponding brand button on the remote (e.g.,**LG**, **Samsung**, **Sony**, etc.) for 5 seconds.
3. The LED indicator on the remote will flash three times, indicating that the setting is complete.

Note: During the setting process, if no key is pressed within 10 seconds, the remote will automatically exit programming mode.

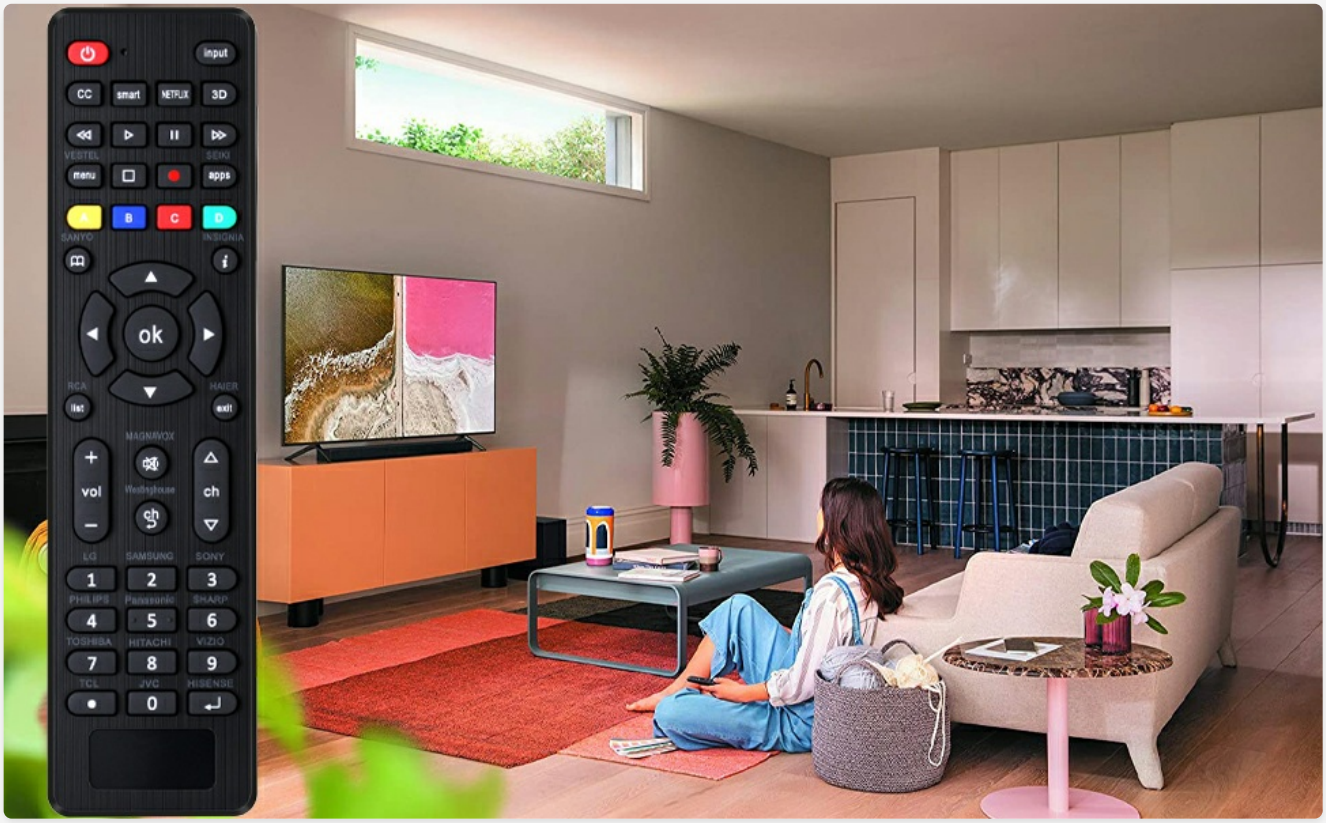


Figure 2: Excerpt from the instruction manual detailing the setup methods and a comprehensive list of TV codes for various brands. This page is essential for manual code entry.

5. Operating Instructions

Once successfully paired, your Pairtty Universal TV Remote Control can operate your television with ease. Below

are common functions:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Volume (+/-) Buttons:** Adjusts the TV's volume level.
- **Channel (CH +/-) Buttons:** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Navigation (Arrow) Buttons & OK:** Used to navigate menus and confirm selections.
- **Smart Button:** Accesses smart TV features or home screen.
- **Netflix Button:** Direct access to the Netflix application.
- **3D Button:** Activates or deactivates 3D mode (if supported by your TV).
- **Apps Button:** Opens the TV's application menu.
- **Menu Button:** Displays the TV's main menu.
- **List Button:** Shows a list of channels or inputs.
- **Exit Button:** Exits current menu or application.



Figure 3: The remote control displayed alongside a list of compatible TV brands, emphasizing its broad universal functionality.

6. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance tips:

- Keep the remote clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Protect the remote from extreme temperatures, direct sunlight, and moisture.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. Troubleshooting

If you encounter issues with your Pairtty Universal TV Remote Control, please refer to the following common solutions:

Problem	Possible Cause / Solution
Remote not working or unresponsive.	◦ Check if batteries are inserted correctly with correct polarity. ◦ Replace old or weak batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's IR receiver. ◦ Re-attempt the setup process (Method 1 or 2) to re-pair the remote with your TV.
Some buttons do not function.	◦ The remote might not be fully compatible with all specific functions of your TV model. ◦ Ensure the remote is correctly paired using the appropriate code for your TV brand. Try alternative codes if available.
LED light on remote stays on after code entry.	◦ This indicates an incorrect code was entered. Re-enter the correct 3-digit code from the list.

8. Specifications

Feature	Detail
Product Dimensions	1.97 x 1.97 x 1.97 inches
Item Weight	1.76 ounces
Item Model Number	RC-G008
Batteries Required	2 AAA batteries (not included)
Compatible Devices	Television
Max Number of Supported Devices	1
Color	Black

Feature	Detail
Special Features	Universal, Ergonomic, Lightweight, No Programming Required (for Brand Search)

9. Warranty and Support

Pairtty provides a standard warranty for its products. For any questions, concerns, or if the listed TV brands do not meet your needs, please do not hesitate to contact Pairtty customer support directly. We are committed to ensuring your product user experience is satisfactory and will reply promptly within 24 hours.
For support, please refer to the contact information provided with your purchase or visit the official Pairtty website.

© 2025 Pairtty. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B4R9Y8S2

More documents and user manuals: **https://manuals.plus/**