NOVOJOY NVYQ10S

NOVOJOY 10-Inch Android Tablet User Manual

Model: NVYQ10S

1. Introduction

This user manual provides comprehensive instructions for the operation and maintenance of your NOVOJOY 10-Inch Android Tablet. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.



Figure 1.1: Front and back view of the NOVOJOY 10-Inch Android Tablet, emphasizing its 64GB ROM storage capacity.

2. Package Contents

Please verify that all items are present in the package:

- NOVOJOY 10-Inch Android Tablet
- Charger
- User Manual (this document)

3. Initial Setup

3.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided charger to the tablet's charging port and plug it into a power outlet. The battery indicator on the screen will show charging status.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.
- **To Restart:** From the power-off menu, select "Restart".

3.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your tablet. This includes selecting your language, connecting to a Wi-Fi network, and signing in with your Google account.

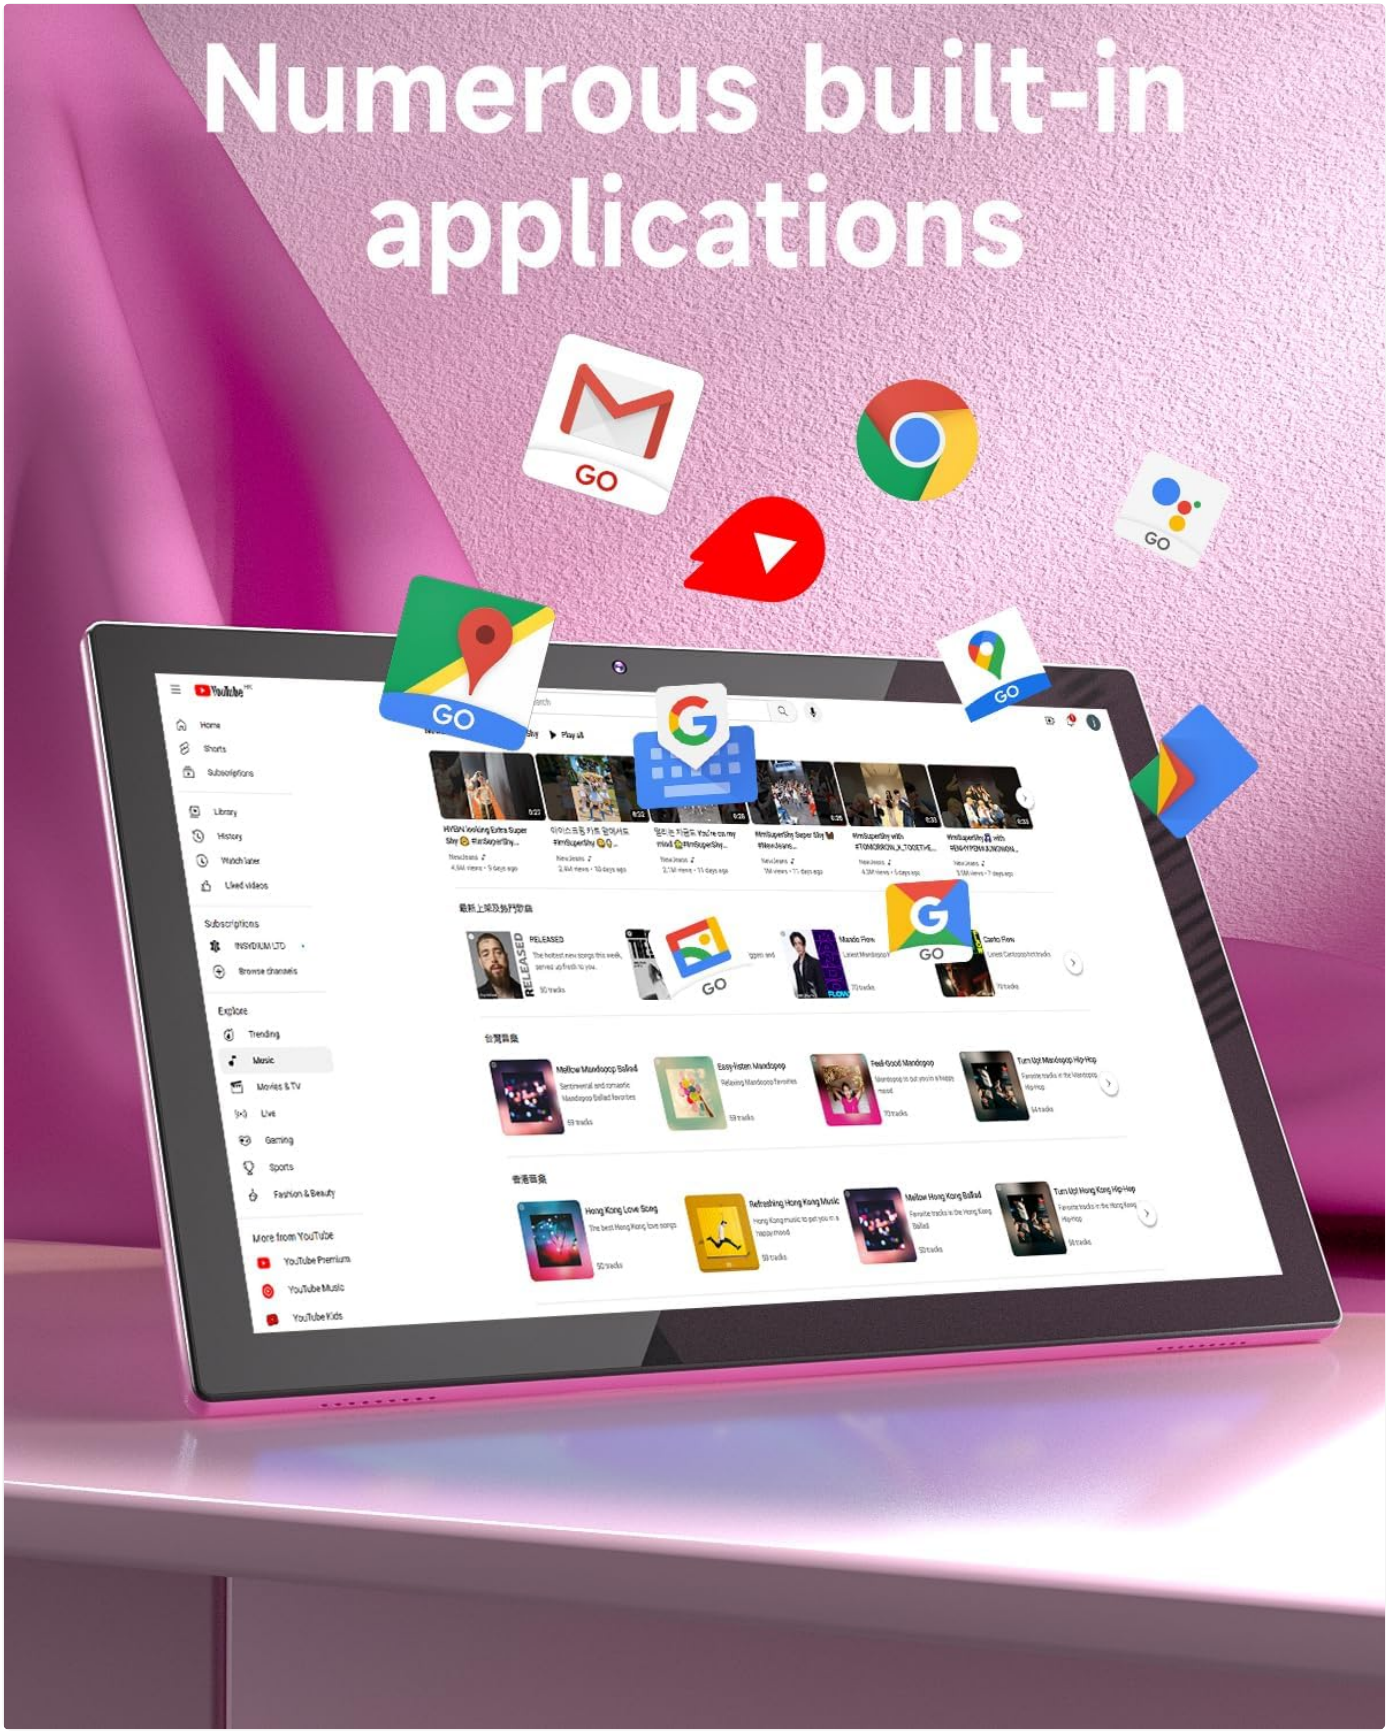


Figure 3.1: The tablet comes with numerous built-in applications, ready for use after initial setup.

4. Operating Instructions

4.1 Navigating the Interface

The tablet operates on Android 11.0. Use touch gestures such as tap, swipe, pinch-to-zoom, and long-press to interact with the interface and applications.

4.2 Wi-Fi Connectivity

To connect to Wi-Fi:

1. Go to *Settings* > *Network & internet* > *Wi-Fi*.
2. Toggle Wi-Fi ON.
3. Select your desired network from the list and enter the password if prompted.

4.3 Camera Usage

The tablet features a 2MP front camera and an 8MP rear camera. Open the Camera application to capture photos and videos.

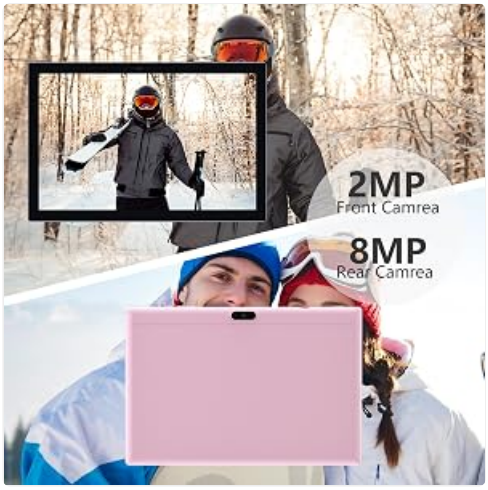


Figure 4.1: The tablet is equipped with dual cameras for various photography needs.

4.4 Storage Management

The tablet has 64GB of internal storage. Storage can be expanded up to 512GB using a microSD card (not included).



Figure 4.2: High-speed large-capacity memory details for the tablet.

5. Maintenance

5.1 Battery Care

The tablet features a 6000mAh battery, providing up to 8 hours of usage. To prolong battery life:

- Avoid extreme temperatures.

- Do not let the battery fully discharge frequently.
- Use only the provided charger.



Figure 5.1: The tablet offers long-lasting battery life for extended use.

5.2 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

6. Troubleshooting

Problem	Possible Solution
Tablet does not turn on.	Ensure the tablet is charged. Connect the charger and wait a few minutes before attempting to power on again.

Problem	Possible Solution
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your router. Forget the network and reconnect.
Applications are running slow.	Close unnecessary background applications. Clear app caches. Consider a factory reset if issues persist (backup data first).
Screen is unresponsive.	Restart the tablet. If unresponsive, press and hold the power button for 10-15 seconds to force a shutdown, then power on again.

7. Specifications

Feature	Detail
Brand	NOVOJOY
Model Name	NVYQ10S
Operating System	Android 11.0
Screen Size	10 Inches
Screen Resolution	1280 x 800 pixels
Processor	1.5 GHz Quad Core
RAM	2GB
Flash Memory Size (ROM)	64 GB
Expandable Storage	Up to 512GB (microSD)
Rear Webcam Resolution	8 MP
Front Webcam Resolution	2 MP
Battery Capacity	6000mAh
Average Battery Life	Up to 8 hours
Wireless Type	802.11ax (Wi-Fi), Bluetooth
Item Weight	1 pounds
Product Dimensions	10 x 7 x 1 inches
Color	Pink

8. Warranty and Support

NOVOJOY offers a **1-year after-sales service** for this product. If you encounter any issues or have questions regarding your tablet, please contact the seller on Amazon. We aim to provide a response within 24 hours.
For further assistance, please refer to the product listing on Amazon or visit the NOVOJOY brand store.

© 2024 NOVOJOY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question