Hurley WT8HRPMBL

Hurley Beach Tent Instruction Manual

Model: WT8HRPMBL | Brand: Hurley

Introduction

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Hurley Beach Tent. Please read this guide thoroughly before using the product to ensure safe and efficient use.

The Hurley Beach Tent is designed for outdoor use, offering protection from the sun with its UV-coated fabric and providing a comfortable shelter with features like roll-up windows for ventilation and interior storage pockets.

Key Features:

- Dimensions: 95 inches (L) x 51 inches (W) x 52 inches (H)
- Auto-Hub One-Pull Set Up mechanism for quick assembly
- Three roll-up windows for adjustable ventilation and privacy
- Integrated sand pockets for enhanced stability
- UV coating for sun protection
- Interior storage pockets for small items
- Lightweight and portable design with included carry bag and 4-piece stake kit

Safety Information

Adhering to these safety guidelines is crucial for preventing injury and damage to the product.

- Avoid prolonged exposure to direct sunlight, as this can degrade fabric over time.
- Exercise caution when opening or closing the roll-up windows to prevent pinching or damage.
- Always anchor the tent securely using the provided stakes and filling the sand pockets to prevent it from being carried away by wind.
- Be careful when operating the Auto-Hub One-Pull setup mechanism to avoid injury from moving parts.
- Do not use the tent in severe weather conditions, including strong winds, heavy rain, or lightning.
- Keep all flame and heat sources away from the tent fabric.

Setup Instructions

Follow these steps for quick and easy assembly of your beach tent.

1. Unpacking and Preparation


1. Remove the tent from its carry bag.
2. Lay the tent flat on a clear, level surface, ensuring there are no obstructions.



The Hurley Beach Tent packed in its grey carry bag, ready for transport.

2. Expanding the Tent (Auto-Hub One-Pull)

3. Locate the central Auto-Hub mechanism at the top of the tent frame.
4. Grasp the pull cord or handle associated with the Auto-Hub.
5. With a firm, steady motion, pull the cord upwards until the tent frame fully expands and locks into place. You should hear a click as the mechanism engages.

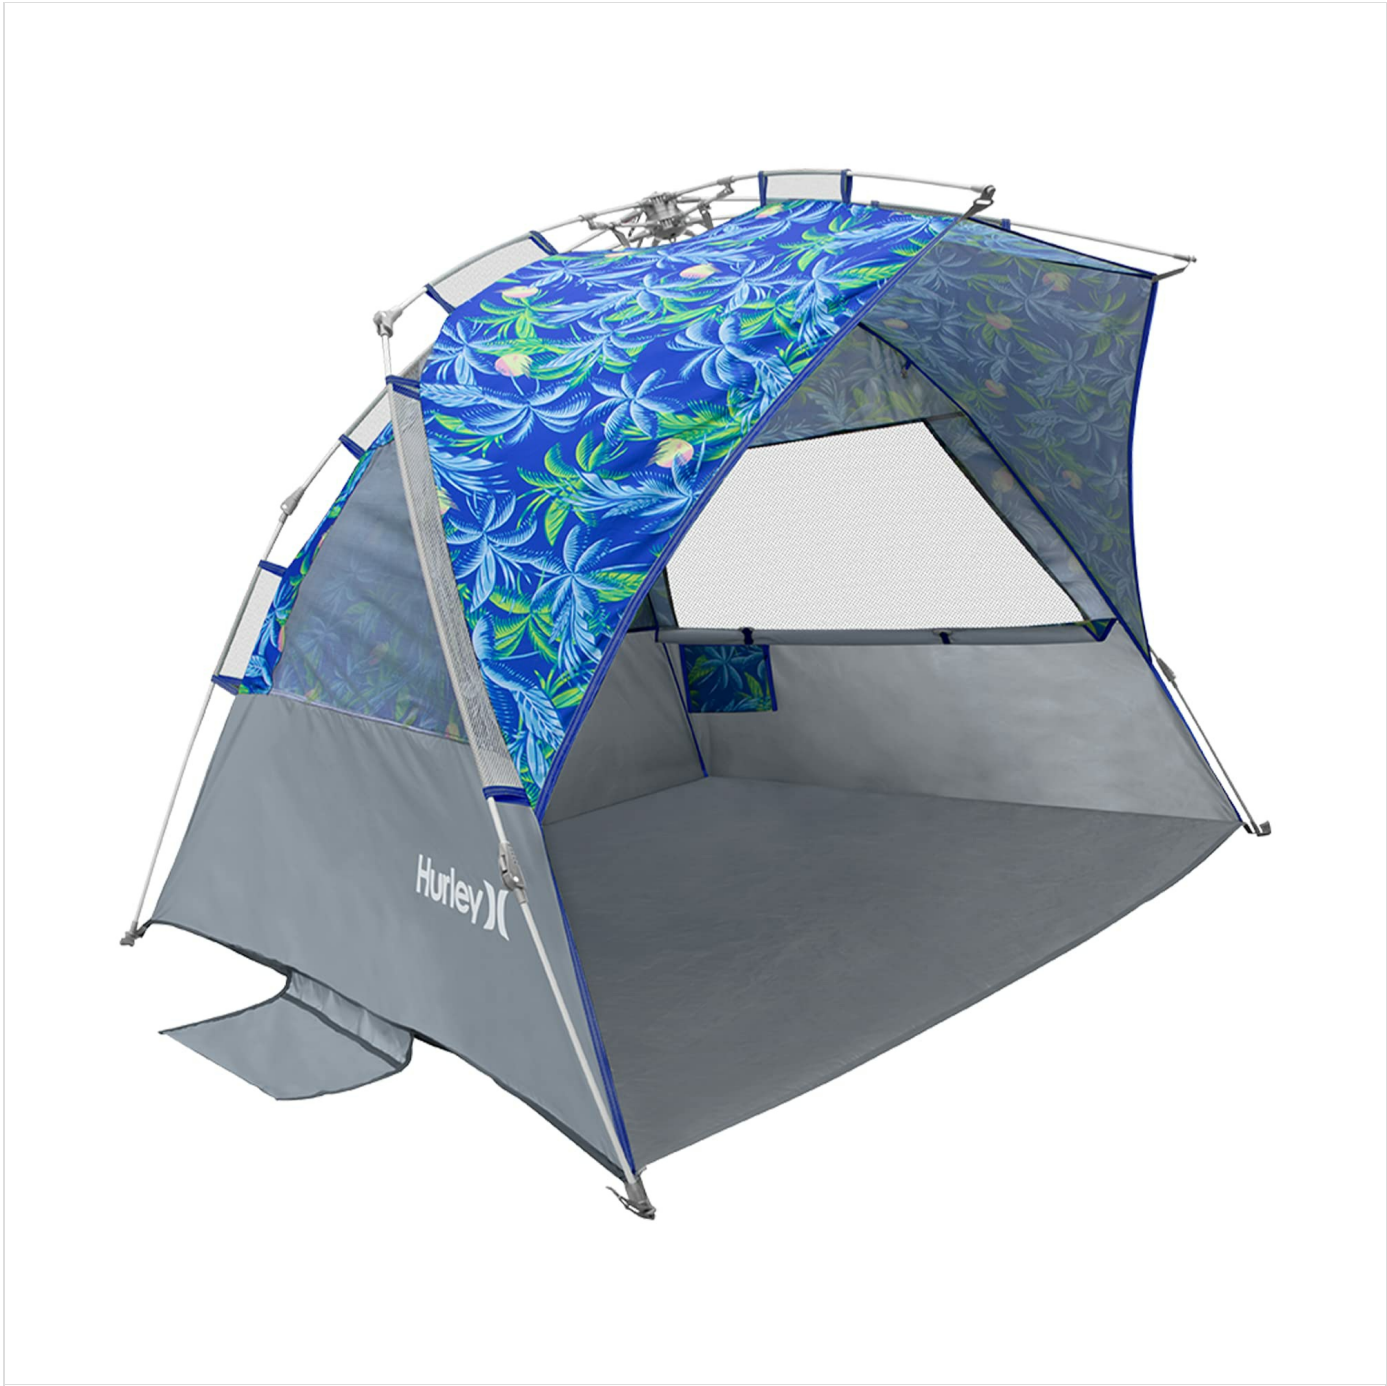

The Hurley Beach Tent in an initial setup phase, demonstrating the frame structure.

3. Anchoring the Tent

6. Locate the sand pockets at the base of the tent. Fill these pockets with sand or other heavy material to provide initial stability.
7. Use the provided 4-piece stake kit to secure the tent to the ground. Insert stakes through the loops at the tent's corners and push them firmly into the ground at an angle.
8. Ensure all anchoring points are secure, especially in windy conditions.



The Hurley Beach Tent fully assembled and ready for use, showing its spacious interior.

Operating Instructions

Maximize your comfort and protection with these operational tips.

1. Adjusting Ventilation and Privacy (Roll-Up Windows)

- The tent features three roll-up windows. To open, unfasten the toggles or ties holding the window panel down.
- Roll the window panel upwards and secure it with the attached loops and toggles to allow airflow.
- To close for privacy or sun protection, unfasten the rolled-up panel and let it down, then secure it at the bottom.



Side view of the tent with a mesh window rolled up, providing ventilation.



Side view of the tent with a solid window panel closed, offering privacy and sun protection.

2. Using Interior Storage Pockets

- Utilize the interior storage pockets to keep small items like phones, keys, or sunscreen organized and easily accessible.
- Avoid placing sharp or excessively heavy objects in the pockets to prevent damage.



Close-up of the interior storage pockets, demonstrating their use for small personal items.

Maintenance

Proper care will extend the life of your Hurley Beach Tent.

- **Cleaning:** After each use, especially at the beach, shake out any sand or debris. If necessary, wipe down the fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners.
- **Drying:** Ensure the tent is completely dry before packing it away to prevent mildew and odor. Air dry in a shaded area if possible.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the frame, fabric, and stakes for any signs of wear or damage. Repair minor issues promptly to prevent further deterioration.

Troubleshooting

Common issues and their solutions.

Problem	Possible Cause	Solution
Tent is unstable or blows away easily.	Insufficient anchoring; strong winds.	Ensure sand pockets are fully filled and stakes are securely driven into the ground. Consider additional anchoring in very windy conditions. Do not use in severe weather.

Problem	Possible Cause	Solution
Auto-Hub mechanism is difficult to expand or retract.	Mechanism is stiff or obstructed.	Apply gentle, even pressure. Check for any fabric or debris obstructing the joints. Do not force the mechanism.
Water leakage during light rain.	Water resistance limits exceeded; minor seam issue.	The tent is water-resistant, not waterproof. Avoid heavy rain. For minor leaks, consider applying a seam sealer (not included).
Difficulty packing the tent back into the carry bag.	Tent not folded compactly enough.	Ensure the tent is completely deflated and folded as tightly as possible. Follow the reverse steps of setup for collapsing the frame.

Specifications

Detailed technical specifications for the Hurley Beach Tent.

Brand: Hurley

Model Number: WT8HRPMBL

Material: Polyester (fabric), Alloy Steel (frame/poles)

Color: Palm Blue

Item Weight: 5.5 Pounds

Dimensions (L x W x H): 95" x 51" x 52"

Max Ceiling Height: 52 Inches

UV Protection: Yes (UV Coating)

Water Resistance Level: Water Resistant

Closure Type: Roll Up (windows)

Included Components: Shelter, 4-Piece Stake Kit, Carry Bag

Required Assembly: Yes

UPC: 098556674394

Warranty and Support

Manufacturer's Warranty:

This Hurley Beach Tent (Model WT8HRPMBL) is covered by a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, warranty claims, or inquiries regarding your Hurley Beach Tent, please contact Hurley customer support through their official website or the retailer where the product was purchased. You may need to provide your model number (WT8HRPMBL) and proof of purchase.

For more information, visit the official Hurley Store on Amazon.

© 2023 Hurley. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question