YUYTE YUYTEy47dgs0prt1076

YUYTE Electric Shoe Shine Kit User Manual

Model: YUYTEy47dgs0prt1076

1. Introduction

Thank you for choosing the YUYTE Electric Shoe Shine Kit. This portable, wireless device is designed to provide efficient and convenient care for various leather products, including shoes, sofas, handbags, and car seats. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Safety Information

- Keep the device out of reach of children.
- Do not immerse the main unit in water or any other liquid.
- Use only the specified battery type (2 x AA batteries). Ensure correct polarity when inserting batteries.
- Remove batteries if the device will not be used for an extended period.
- Avoid applying excessive pressure during operation, as this may stall the motor or damage the surface being cleaned.
- Do not use on wet surfaces or with excessive liquid polishes that could seep into the device.

3. Package Contents

Verify that all items are present in your package:

- 1 x Host (Main Unit)
- 4 x Replaceable Brush Heads (Dust, Oil, Polishing, Brightening)

4. Setup

4.1 Battery Installation

1. Locate the battery compartment cover on the handle of the main unit.

2. Slide or unclip the cover to open the compartment.
3. Insert 2 x AA batteries, ensuring the correct positive (+) and negative (-) polarity as indicated inside the compartment.
4. Close the battery compartment cover securely.



Figure 1: Battery compartment and brush attachment point.

4.2 Attaching Brush Heads

1. Select the appropriate brush head for your task (Dust, Oil, Polishing, or Brightening).
2. Align the brush head with the spindle on the main unit.
3. Gently push and twist the brush head onto the spindle until it clicks securely into place.
4. To remove a brush head, pull it gently while twisting.



Figure 2: Main unit with various brush heads.

5. Operation

5.1 Powering On/Off and Speed Selection

The device features a back switch button for power and speed control:

- **OFF:** Device is powered off.
- **LOW:** Activates the motor at a lower speed for delicate tasks or initial application.
- **HIGH:** Activates the motor at a higher speed for more intensive cleaning or polishing.



Figure 3: Power switch with speed settings.

5.2 Using the Brush Heads

The kit includes four specialized brush heads for comprehensive leather care:

1. **Dust Removal Brush:** Made of superfine fiber, this brush is used to easily remove dust and loose dirt from the surface of shoes or other leather items before applying any products.
2. **Oil Brush:** Constructed with durable, high-quality mesh cotton, this brush is designed for applying shoe polish or leather conditioner evenly onto the surface.
3. **Polishing Brush:** After applying polish or conditioner, use this brush to buff the surface, enhancing shine and making the leather appear more lustrous.
4. **Brightening Brush:** Used for a final, second shine after initial cleaning and polishing to maintain a clean and bright appearance on the leather surface.



Figure 4: The four multifunctional brush heads.

5.3 General Usage Steps

1. Ensure the leather item is dry and free from large debris.
2. Attach the **Dust Removal Brush**. Turn the device to LOW or HIGH and gently brush the entire surface to remove dust.
3. Remove the Dust Removal Brush and attach the **Oil Brush**. Apply a small amount of shoe polish or leather conditioner directly to the brush or the leather surface. Turn the device on and spread the product evenly.
4. Remove the Oil Brush and attach the **Polishing Brush**. Turn the device on and buff the surface until the desired shine is achieved.
5. For an extra bright finish, remove the Polishing Brush and attach the **Brightening Brush**. Perform a final buffing

pass.

6. After use, turn the device to OFF.

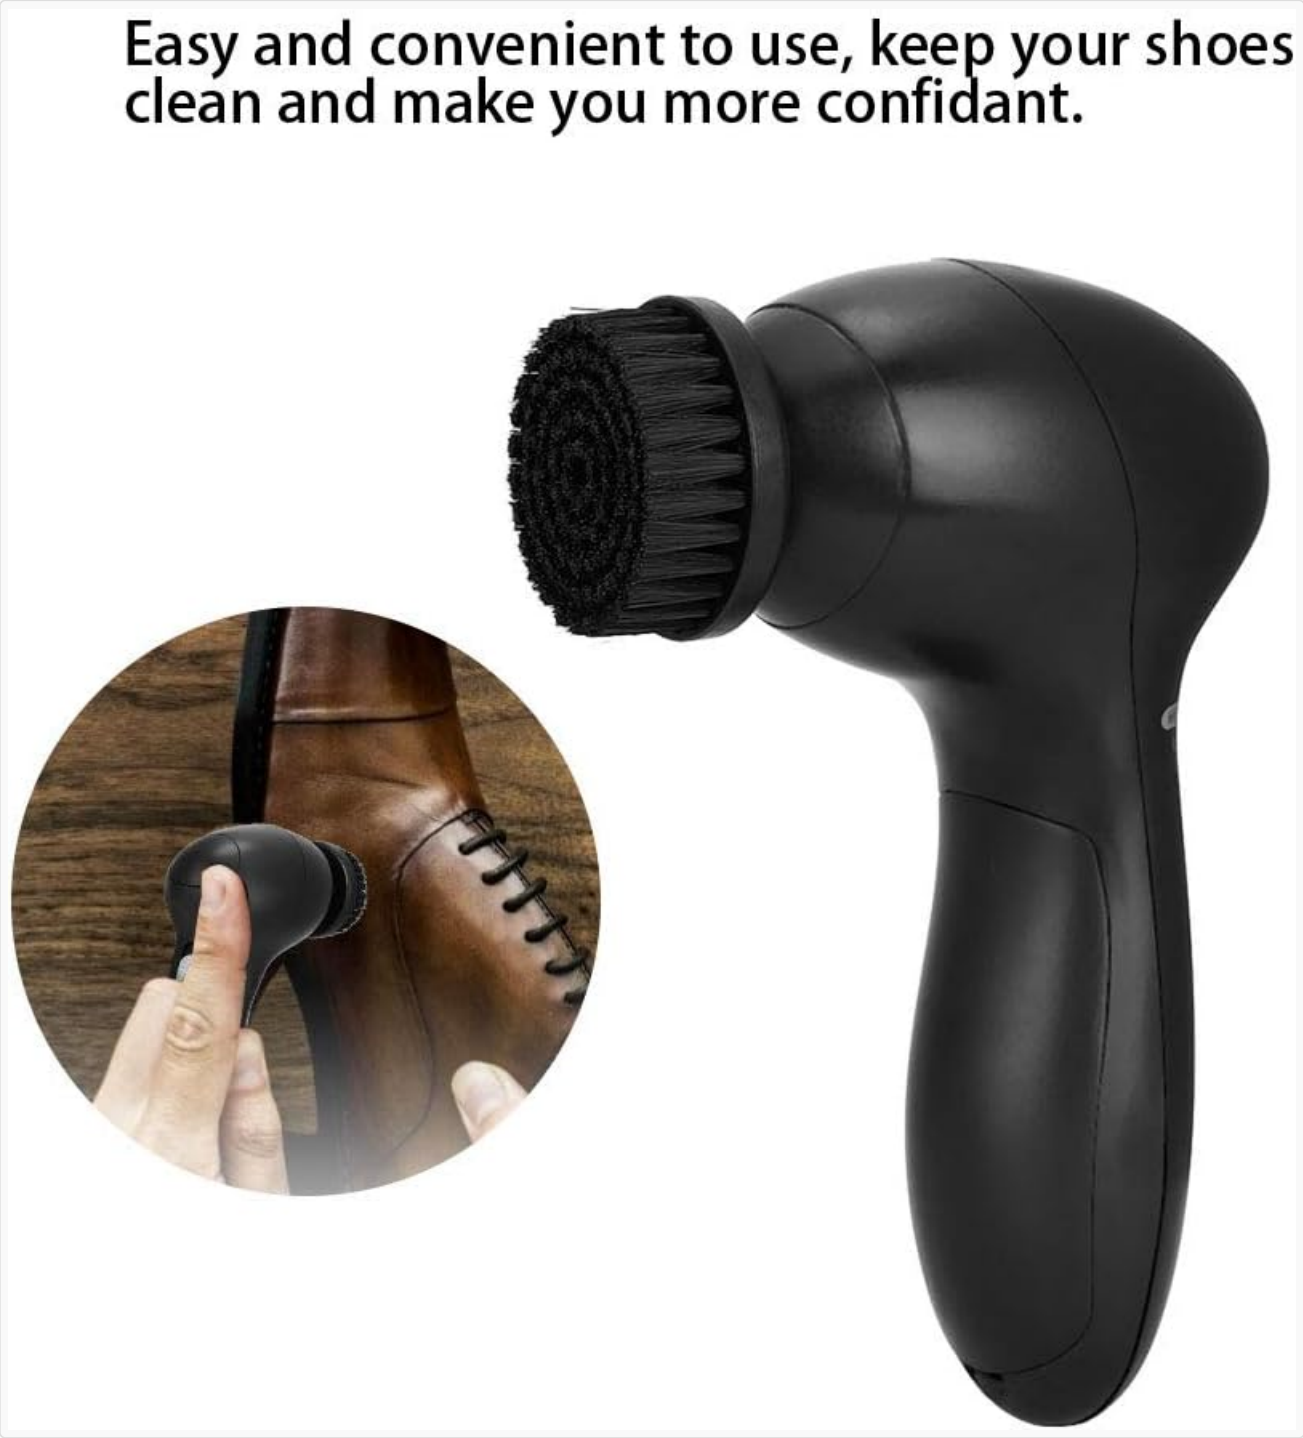


Figure 5: Electric shoe shine kit in use on a leather shoe.

6. Maintenance

6.1 Cleaning the Device

- Ensure the device is turned OFF before cleaning.
- Wipe the main unit with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.

6.2 Cleaning Brush Heads

- Remove the brush heads from the main unit.

- The brush heads can be gently cleaned with a damp cloth or mild soap and water. Rinse thoroughly and allow them to air dry completely before reattaching or storing.
- Regular cleaning of brush heads helps maintain their effectiveness and prolongs their lifespan.

6.3 Storage

- Store the kit in a cool, dry place away from direct sunlight and moisture.
- If storing for an extended period, remove the AA batteries from the main unit to prevent leakage.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly inserted.	Replace with new AA batteries, ensuring correct polarity.
Brush head stops spinning during use.	Excessive pressure applied. / Batteries are low.	Reduce pressure. / Replace batteries.
Brush head is loose or falls off.	Brush head not securely attached.	Re-attach the brush head, ensuring it clicks into place.
Poor cleaning/polishing results.	Incorrect brush head used. / Insufficient polish/conditioner. / Brush heads are dirty.	Ensure the correct brush head is used for the task. / Apply appropriate amount of product. / Clean brush heads.

8. Specifications

Feature	Detail
Brand	YUYTE
Model Number	YUYTEy47dgs0prt1076
Power Source	2 x AA Batteries (Not included)
Included Components	1 Host, 4 Brush Heads
Handle Material	Plastic
Special Features	Portable, Wireless, Replaceable Brush Heads
Surface Recommendation	Leather
Item Weight	7.8 ounces (approx. 221g)
Package Dimensions	7.32 x 3.58 x 2.28 inches

9. Warranty and Support

For warranty information or technical support, please refer to the retailer's policy or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

© 2023 YUYTE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question