Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Beurer MP52

Beurer MP52 Electric Nail Drill User Manual

Model: MP52 | Brand: Beurer

1. Introduction

This manual provides essential information for the safe and effective operation of your Beurer MP52 Electric Nail Drill. Please read all instructions carefully before first use and retain this manual for future reference.



Figure 1: Beurer MP52 Electric Nail Drill and included attachments.

2. Safety Information

Always observe the following safety precautions:

- Do not use the device if it is damaged or not functioning correctly.
- Keep out of reach of children.
- Avoid contact with water or other liquids.
- Do not apply excessive pressure during use to prevent injury or damage to the device.
- Unplug the device when not in use or before cleaning.
- This device is intended for personal use only.

3. Package Contents

Verify that all items are present in your package:

- 1 x Beurer MP52 Manicure Nail Drill
- 7 x Sapphire and Felt Attachments
- 10 x Sandpaper Attachments
- 1 x USB-C Cable
- 1 x USB Adapter
- 1 x Storage Case
- 1 x Storage Bag
- 1 x Instruction Manual



Figure 2: Included attachments and storage case.

4. Setup

1. **Charging the Device:** Connect the USB-C cable to the nail drill and the USB adapter. Plug the adapter into a power outlet. The indicator lights will show charging status.



Figure 3: Connecting the USB cable for charging.

2. **Attaching the Bits:** Select the desired attachment. Gently push the attachment into the opening at the tip of the nail drill until it clicks securely into place. To remove, pull the attachment straight out.

5. Operating Instructions

The Beurer MP52 is designed for precise and efficient nail care. It features stepless speed control and dual rotation for versatile use.

- **Power On/Off:** Press and hold the power button to turn the device on or off.
- **Adjusting Speed:** Use the '+' and '-' buttons to adjust the rotation speed between 6,000 and 15,000 RPM.



Figure 4: Adjusting the speed of the nail drill.

- **Changing Rotation Direction:** Press the rotation button to switch between clockwise and counter-clockwise rotation. This allows for comfortable use on different angles of the nail.



Figure 5: Dual rotation for versatile use.

- **Application:** Gently guide the chosen attachment over the nail or callus area. Avoid applying excessive pressure, as the device is designed to work effectively with light contact. The non-slip design ensures a secure grip during use.



Figure 6: Proper application technique.

6. Maintenance

- **Cleaning:** After each use, unplug the device. Wipe the main unit with a soft, damp cloth. The attachments can be cleaned with a brush or a damp cloth. Ensure all parts are completely dry before storage.
- **Storage:** Store the nail drill and its attachments in the provided storage case and bag in a cool, dry place, away from direct sunlight and moisture.



Figure 7: Storing the device and accessories.

7. Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully using the provided USB cable and adapter.
Device stops during use or slows down significantly.	Excessive pressure applied; attachment is loose; battery is low.	Reduce pressure; ensure attachment is securely inserted; recharge the device.
Attachments are not effective.	Incorrect attachment for the task; attachment is worn out.	Select the appropriate attachment for the specific nail or skin condition; replace worn attachments.

8. Specifications

- **Model:** MP52
- **Speed:** 6,000 – 15,000 RPM (Revolutions-Per-Minute)
- **Auto Shut-off:** After 20 Minutes of continuous operation
- **Energy Consumption:** 10 W
- **Dimensions:** Approximately 5.6 x 0.8 x 0.7 inches

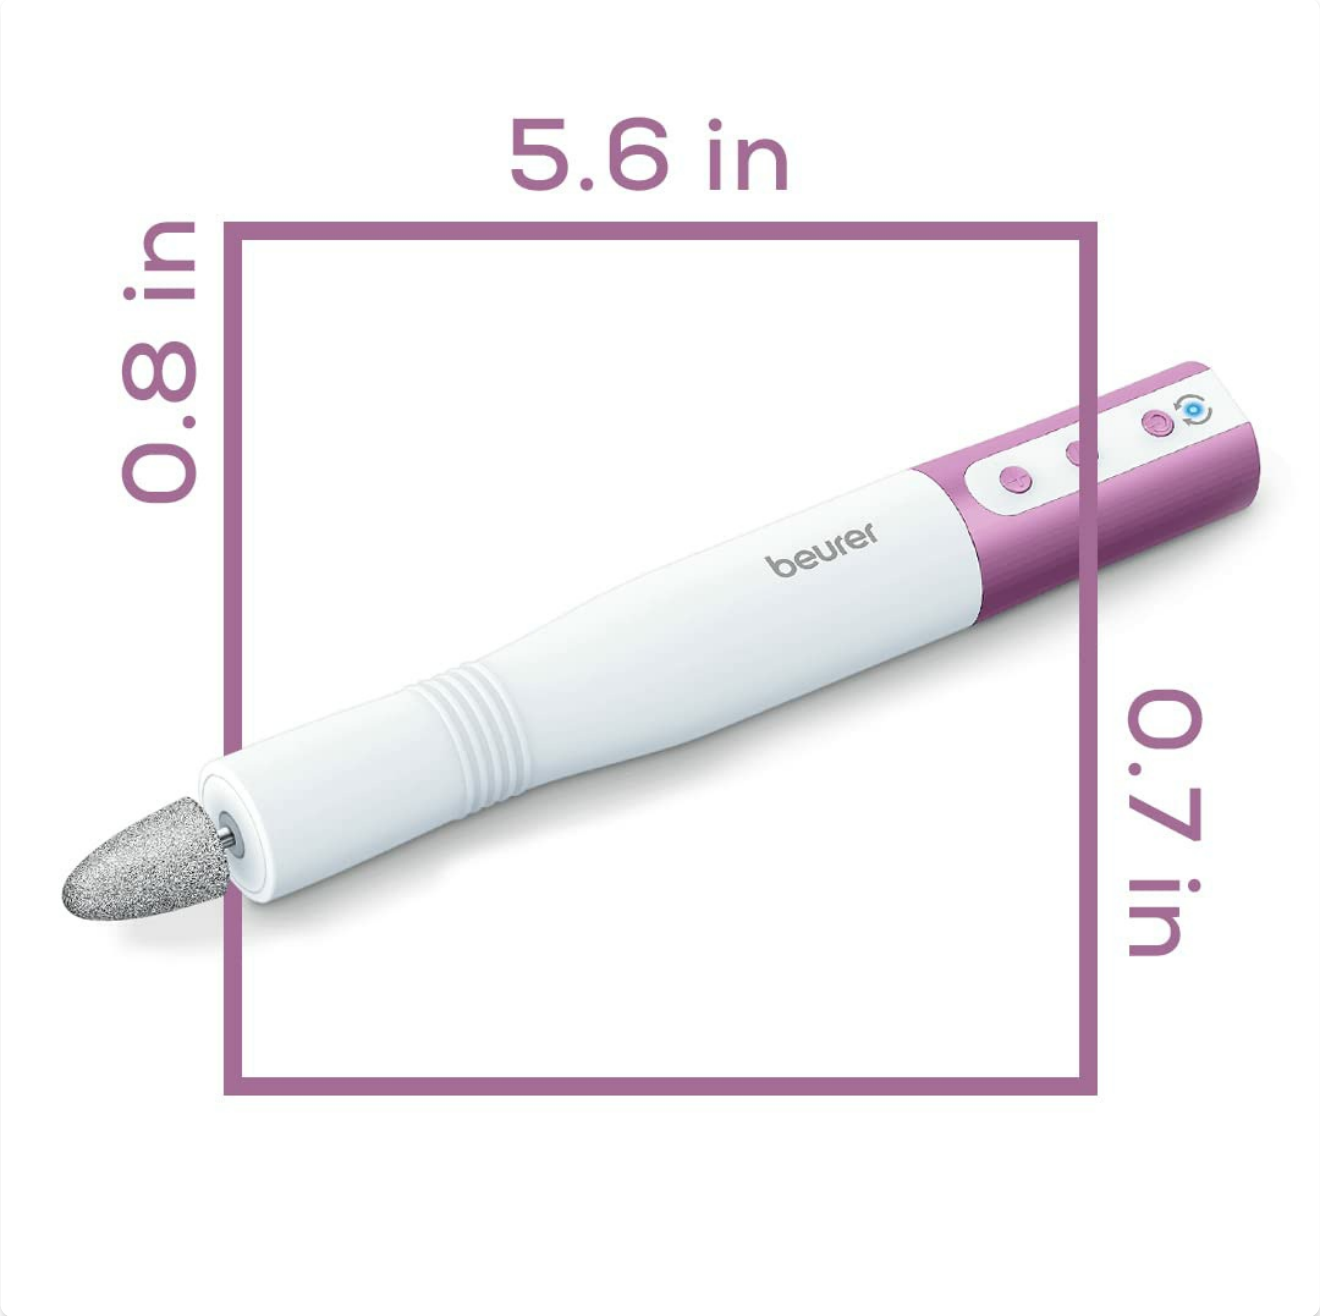


Figure 8: Product dimensions.

- **Weight:** Approximately 1 Pound
- **Power Supply:** USB-C (Cable and Adapter included)

9. Warranty and Support

Beurer products are manufactured with high-quality materials and are thoroughly tested. For warranty information, technical support, or service inquiries, please refer to the contact information provided on the product packaging or visit the official Beurer website. Keep your proof of purchase for warranty claims.

© 2024 Beurer North America LP. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B5LYWN24

More documents and user manuals: **https://manuals.plus/**