Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

onerbl AC/DC Adapter

onerbl AC/DC Adapter Instruction Manual for Hoover BH52230 Cruise Ultra Light Cordless Stick Vacuum

This manual provides essential information for the safe and effective use of your onerbl AC/DC Adapter.

Introduction

This onerbl AC/DC Adapter is designed as a replacement power supply for the Hoover BH52230 Cruise Ultra Light Cordless Stick Vacuum. It provides reliable power for charging your vacuum's 21.6 Volt battery.

Safety Information

Please read and understand all safety instructions before using the adapter.

- **Indoor Use Only:** This adapter is intended for indoor use in dry locations. Do not expose to water or moisture.
- **Voltage Compatibility:** Ensure the wall outlet voltage (AC 100-240V) matches the adapter's input requirements.
- **Overload Protection:** Avoid overloading the power outlet. Connect the adapter to a dedicated outlet if possible.
- **Disconnect When Not in Use:** Unplug the adapter from the power outlet when not in use or during electrical storms.
- **Child Safety:** Keep the adapter out of reach of children.
- **Damage Inspection:** Do not use the adapter if the cord or plug is damaged.



Image showing the AC/DC adapter with its label, indicating input voltage (100-240V AC, 50/60Hz) and a 'CAUTION INDOOR USE ONLY' warning. The cable length is approximately 76 inches (6.3 feet).

Setup

Follow these steps to set up your onerbl AC/DC Adapter:

1. **Unpack the Adapter:** Carefully remove the AC/DC adapter from its packaging.
2. **Inspect for Damage:** Before use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
3. **Connect to Vacuum:** Plug the adapter's output connector into the charging port of your Hoover BH52230 Cruise Ultra Light Cordless Stick Vacuum. Ensure a secure connection.
4. **Connect to Power Outlet:** Insert the adapter's AC plug into a standard wall power outlet (AC 100-240V).



Image depicting the AC/DC adapter plugged into a standard wall outlet, illustrating a typical setup for charging.

Operating Instructions

Once connected, the adapter will begin charging the vacuum's battery. Refer to your Hoover BH52230 vacuum's manual for specific charging indicators and times.

- **Charging Indicator:** Observe the charging indicator on your vacuum cleaner to confirm charging status.
- **Disconnection:** Once the vacuum battery is fully charged, disconnect the adapter from the wall outlet first, then from the vacuum.

Maintenance and Care

Proper care will extend the life of your adapter.

- **Cleaning:** Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly.
- **Cable Care:** Do not bend, twist, or pull the cable excessively. Avoid placing heavy objects on the cable.



Diagram illustrating the internal construction of the adapter cable, showing copper wire conductors and a PVC jacket, highlighting the durable design for longevity.

Troubleshooting

If you encounter issues, refer to the following common problems and solutions:

Adapter Not Charging

- **Check Power Connection:** Ensure the adapter is securely plugged into both the wall outlet and the vacuum cleaner.
- **Verify Power Outlet:** Test the wall outlet with another device to confirm it is functional.
- **Inspect Cable:** Check the adapter cable for any visible damage or kinks.
- **Vacuum Battery:** Refer to your vacuum's manual for battery-specific troubleshooting.

Overheating

- **Disconnect Immediately:** If the adapter feels excessively hot, unplug it from the wall and the vacuum.
- **Ensure Ventilation:** Do not cover the adapter during use. Ensure it is in a well-ventilated area.
- **Contact Support:** If overheating persists, discontinue use and contact customer support.



Graphic illustrating the adapter's built-in safety features, including short-circuit protection, over-voltage protection, and over-current protection, designed to guard electrical safety.

Specifications

Feature	Detail
Brand	onerbl
Input Voltage	AC 100-240V, 50/60Hz
Output Voltage	21.6 Volt (compatible with Hoover BH52230)
Cable Length	Approximately 6.5 feet (78 inches)
Item Weight	8 ounces
Connector Type	Proprietary
Special Features	Over Voltage Protection, Over Heat Protection, Short Circuit Protection
Included Components	1 x Charger



Image displaying the physical dimensions of the AC/DC adapter, measuring approximately 3.1 inches in length, 2.1 inches in width, and 1.2 inches in thickness.



The onerbl AC/DC adapter and its coiled power cable, ready for connection.

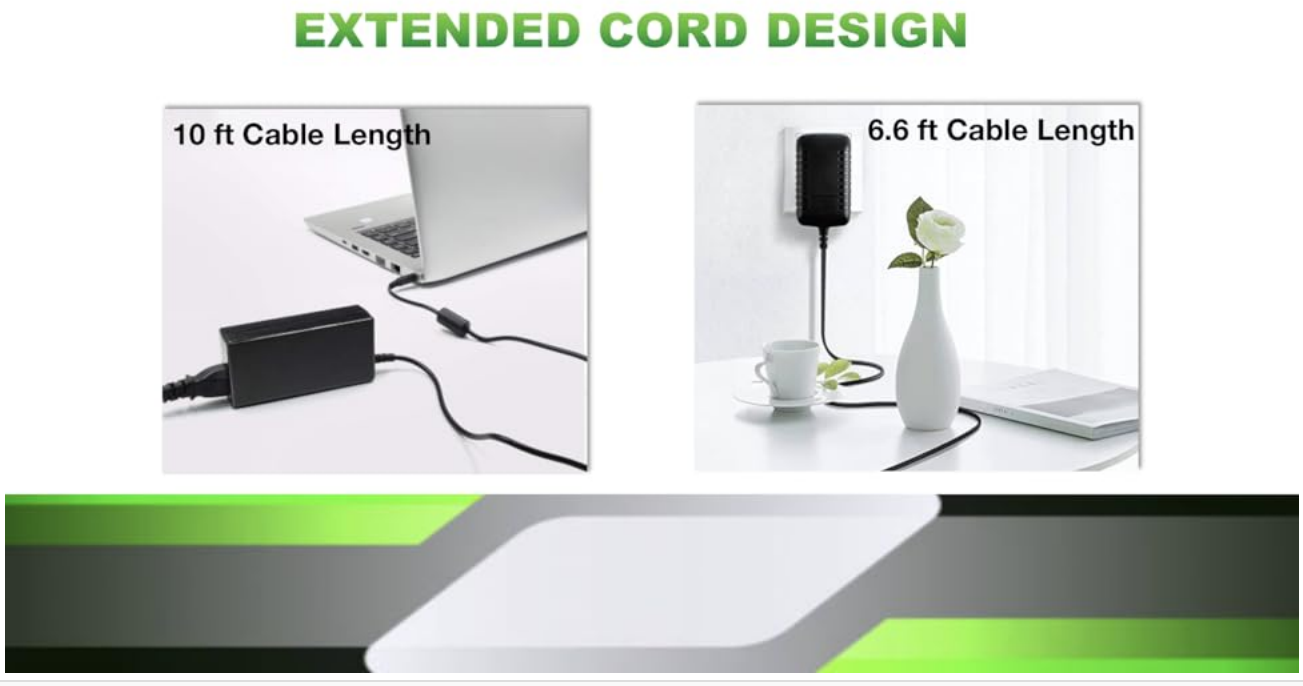


Illustration demonstrating the extended cord design of the adapter, providing flexibility in placement and connection.

Warranty and Support

For warranty information or technical support, please contact the manufacturer, onerbl, through their official channels or the retailer where the product was purchased. Please retain your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B5QRCRCP

More documents and user manuals: **https://manuals.plus/**