Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Colorcool M10

Colorcool 2.8" Full Touch Screen Mp3 Mp4 Player User Manual

Model: M10

Brand: Colorcool

1. Introduction

Thank you for choosing the Colorcool 2.8" Full Touch Screen Mp3 Mp4 Player. This portable digital music player is designed to provide a rich audio and visual experience with its vibrant display, versatile functions, and user-friendly interface. It features Bluetooth 5.0 for wireless connectivity, a built-in speaker, and ample storage for your media library. This manual will guide you through the setup, operation, and maintenance of your new device.

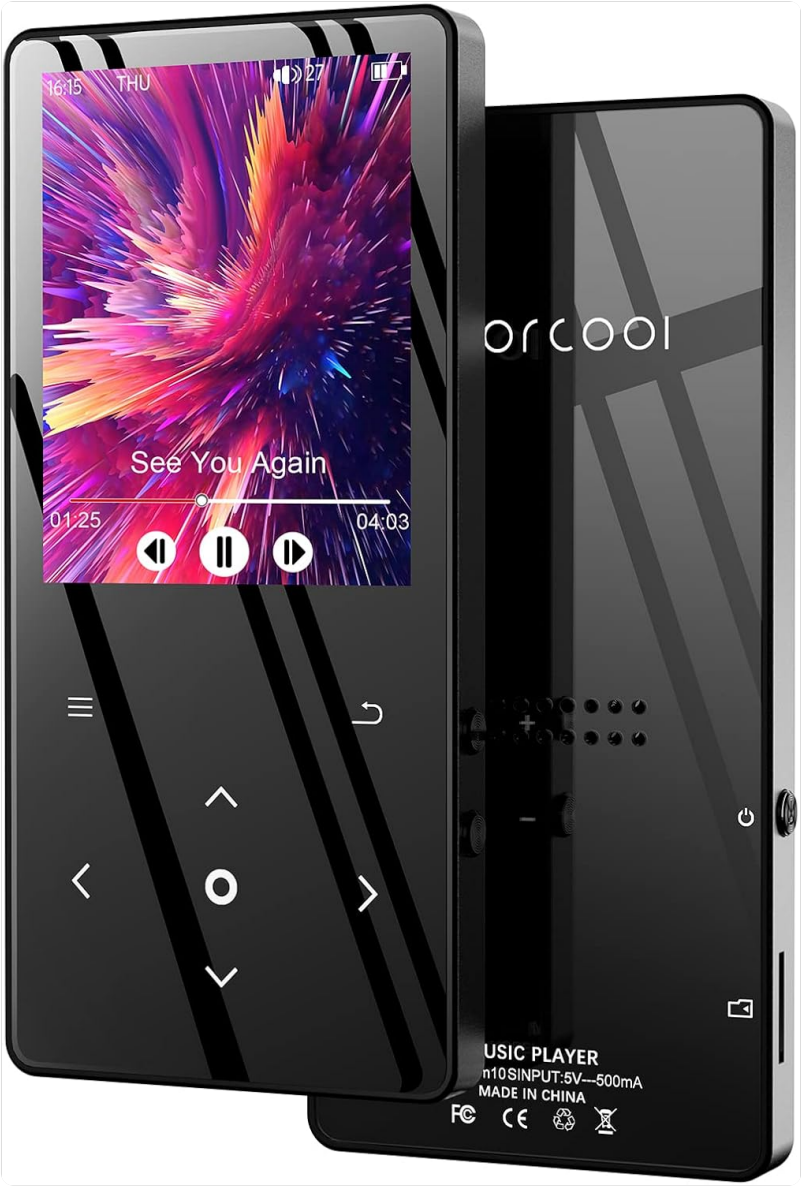


Figure 1.1: Colorcool 2.8" Full Touch Screen Mp3 Mp4 Player

2. Package Contents

Please check the package carefully to ensure all items are present:

- 1 x Colorcool MP3 Player
- 1 x Earphone
- 1 x USB Cable (for charging and data transfer)
- 1 x Audio Cable
- 1 x User Manual



Figure 2.1: Included Accessories

3. Key Features

- **2.8-inch Full Touch Screen:** Provides a clear and intuitive visual experience for navigating menus, viewing e-books, videos, and pictures. Features 7 touch buttons and 3 physical buttons for easy operation.



Figure 3.1: Enhanced Visuals with 2.8-inch Screen

- **Bluetooth 5.0:** Built-in chip ensures faster and more stable Bluetooth connection with reduced power consumption. Compatible with Bluetooth speakers and headsets (Note: Not compatible with cellphones or laptops).



Figure 3.2: Bluetooth 5.0 Technology

- **32GB Internal Memory & 128GB Expandable Storage:** Offers ample space for over 6,000 songs and supports a microSD card up to 128GB for extended memory.



Figure 3.3: Built-in 32GB Memory with Expansion Slot

- **Portable and Lightweight:** Weighing only 95g (0.21 lbs) with dimensions of 118mm×56mm×8.3mm (4.65inch*2.2inch*0.33inch), making it ideal for sports and travel.

- **Multi-functional:** Supports FM radio, recording, picture preview (JPG, BMP, JPEG), video playback (AVI, AMV), calendar, e-book (TXT), alarm clock, and stopwatch.



Figure 3.4: Multi-functional Interface

- **High Sound Quality & Built-in Speaker:** Features a DAC audio decoding chip for high-resolution sound. Supports various audio formats (MP3, WMA, APE, FLAC, WAV, OGG, ACELP). Includes a built-in speaker that can be toggled on/off.



Figure 3.5: Built-in Speaker Design

4. Setup

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

4.2 Turning On/Off

- **To Turn On:** Press and hold the power button located on the side of the device until the screen lights up and the Colorcool logo appears.
- **To Turn Off:** Press and hold the power button until the

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B617HM27

More documents and user manuals: **https://manuals.plus/**