Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

tewei XMSMZCD-1

tewei Wood Beaded Boho Chandelier Light Fixture (Model XMSMZCD-1) User Manual

Semi Flush Mount Ceiling Light for Bedroom, Nursery, Kitchen, Living Room

1. Introduction

Thank you for purchasing the tewei Wood Beaded Boho Chandelier Light Fixture. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before installation and retain them for future reference.



Image 1.1: The tewei Wood Beaded Boho Chandelier Light Fixture in a nursery setting.

2. Safety Information

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or national electrical codes. If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Use only E26 base bulbs, maximum 60W per bulb. Bulbs are NOT included.
- Do not exceed the recommended wattage.
- Ensure the fixture is securely mounted to the ceiling.
- This fixture is designed for indoor use only. It is not water resistant.

3. What's Included

The package includes the following components:

- Wood Beaded Chandelier Fixture
- Mounting Hardware (including wiring nuts and screws)
- Installation Instructions

4. Specifications

Feature	Specification
Brand	tewei
Model Number	XMSMZCD-1
Color	Rustic (Oak White beads)
Material	Metal, Wood
Mounting Type	Semi Flush Mount
Dimensions (L x W x H)	12.6"L x 12.6"W x 8.6"H
Canopy Diameter	4.7 inches
Bulb Base	E26
Number of Light Sources	3
Max Wattage per Bulb	60W (Bulbs NOT included)
Voltage	110 Volts (AC)
Dimmable	Yes (with dimmable bulbs and compatible dimmer switch, not included)
Indoor/Outdoor Usage	Indoor
Item Weight	5.6 Pounds

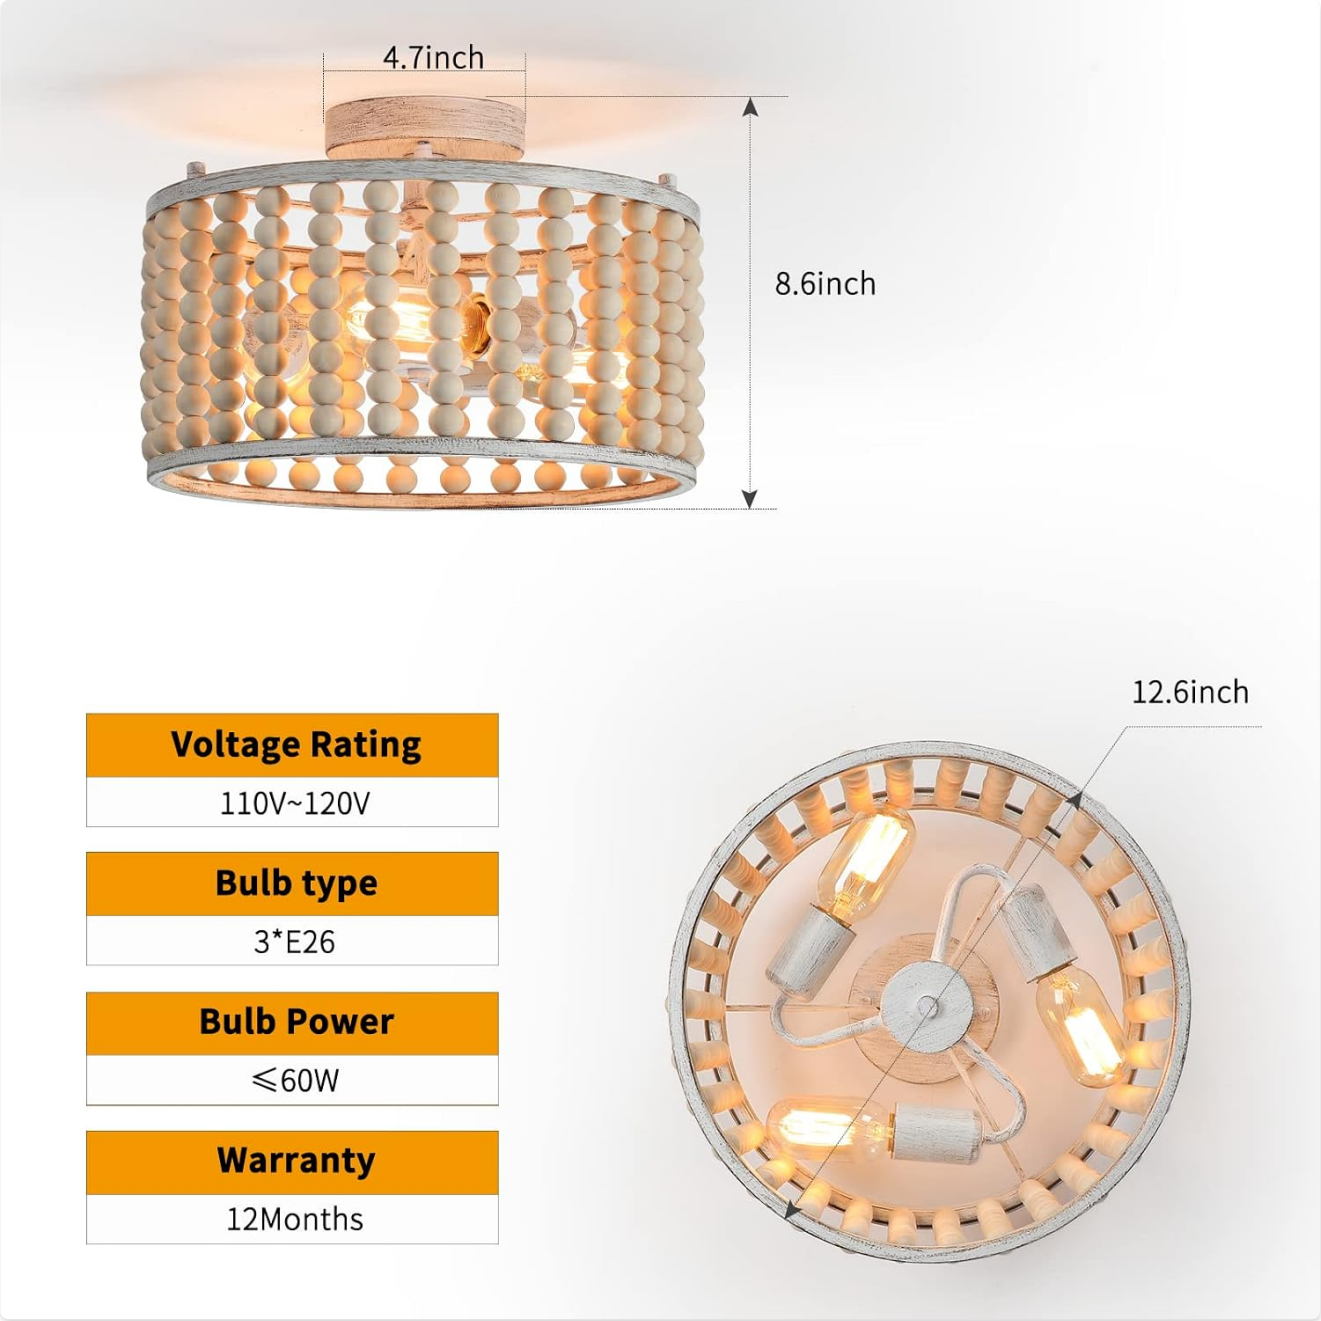


Image 4.1: Product dimensions and bulb specifications.

5. Installation Guide

This light fixture is designed for quick installation. No need to connect individual beads; they are pre-assembled. All necessary mounting hardware is included.

5.1. Pre-Installation

1. **Turn off power:** Before starting, ensure the power to the circuit is turned off at the main fuse box or circuit breaker.
2. **Unpack:** Carefully unpack the fixture and inspect for any damage. Keep all packaging materials until you are satisfied with the product.
3. **Prepare wiring:** If replacing an existing fixture, disconnect and remove the old fixture. Ensure the existing wiring is in good condition.

5.2. Mounting the Fixture

4. Attach the mounting bracket (included) to the junction box in the ceiling using the provided screws.
5. Connect the fixture's wires to the house wires:
    - Connect the black wire from the fixture to the black wire from the junction box (live).
    - Connect the white wire from the fixture to the white wire from the junction box (neutral).
    - Connect the ground wire from the fixture to the ground wire from the junction box.

    Secure connections with wire nuts.
6. Carefully tuck all wires into the junction box.
7. Align the fixture's canopy with the mounting bracket and secure it with the decorative nuts or screws provided.

5.3. Installing Bulbs

8. Screw three E26 base bulbs (max 60W each, not included) into the sockets.
9. **Restore power:** Turn the power back on at the circuit breaker.



Image 5.1: Internal view of the fixture showing E26 sockets and bead arrangement.

5.4. Installation Videos

Video: Tewei 3-Light Semi Flush Mount Ceiling Light Overview

Your browser does not support the video tag.

Description: This video provides a brief overview of the tewei 3-Light Semi Flush Mount Ceiling Light, highlighting its design and features relevant to installation.

Video: Tewei Wood Beaded Boho Chandelier Light Fixture Preview

Your browser does not support the video tag.

Description: A short preview video showcasing the tewei Wood Beaded Boho Chandelier Light Fixture in various settings.

6. Operating Instructions

Once installed and bulbs are in place, operate the light fixture using your standard wall switch. If you have installed dimmable E26 bulbs and a compatible dimmer switch (not included), you can adjust the light intensity.

6.1. Bulb Compatibility

The fixture requires 3 x E26 base bulbs. It is compatible with incandescent, LED, CFL, and halogen bulbs. For dimming functionality, ensure you use dimmable bulbs and a compatible dimmer switch.

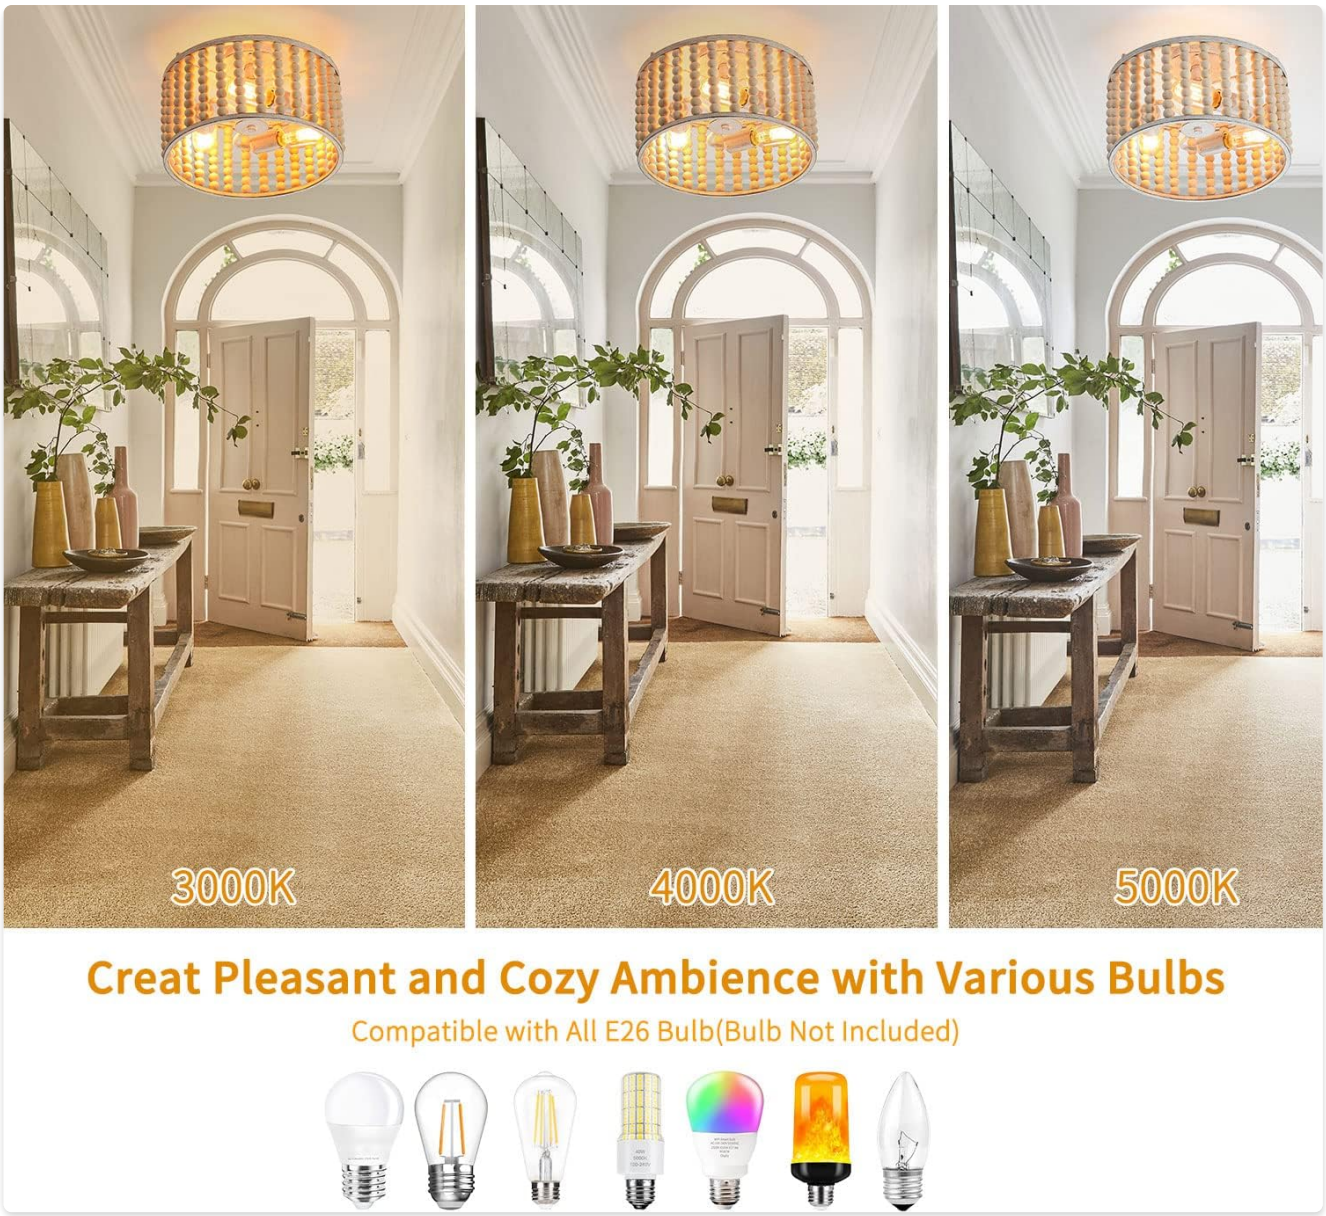


Image 6.1: The chandelier with various bulb color temperatures.

6.2. Light Effect Demonstration

Video: Tewei Boho Ceiling Light Fixture Different Effect

Your browser does not support the video tag.

Description: This video demonstrates the different lighting effects and ambiance created by the tewei Boho Ceiling Light Fixture.

7. Maintenance

To maintain the appearance and functionality of your light fixture, follow these simple guidelines:

- **Cleaning:** Always turn off the power before cleaning. Use a soft, dry cloth to wipe the fixture. Do not use harsh chemicals, abrasive cleaners, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the power is off and bulbs have cooled before replacing them.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

8. Troubleshooting

If you encounter any issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture, loose wiring, faulty bulb.	Check circuit breaker/fuse. Ensure all wiring connections are secure. Replace bulb.
Light flickers	Loose bulb, incompatible dimmer switch, loose wiring.	Tighten bulb. Ensure dimmer switch is compatible with bulbs. Check wiring connections.
Fixture is unstable	Loose mounting hardware.	Ensure mounting bracket and canopy screws are tightened securely.

9. Warranty and Support

The tewei Wood Beaded Boho Chandelier Light Fixture comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.
For any issues or inquiries regarding your tewei light fixture, please contact our customer support team. We are available 24/7 online to offer suggestions and solutions.

10. Contact Information

For support, please refer to the contact details provided with your purchase or visit the official tewei website.

© 2026 tewei. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B6B4V9XT

More documents and user manuals: **https://manuals.plus/**