**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**Roland RP107**

# Roland RP107 Digital Piano Instruction Manual

Model: RP107

## 1. Introduction

The Roland RP107 is a digital piano designed to provide an authentic piano experience in a compact form factor. It features Roland's SuperNATURAL Piano technology for realistic sound and a PHA-4 Standard keyboard for an acoustic grand piano touch. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your RP107 digital piano.

## 2. Setup and Assembly

The Roland RP107 requires assembly. It is recommended to have assistance when placing the keyboard assembly onto the stand due to its weight and size. Ensure all components are present before beginning assembly.

### 2.1 Unpacking

- Carefully remove all components from the packaging.
- Verify that all parts listed in the packing list are included.
- Retain packaging materials for future transport or storage.

### 2.2 Assembly Steps

1. Assemble the piano stand according to the included diagram. Ensure all screws are securely fastened.
2. With assistance, carefully lift the main keyboard unit and place it onto the assembled stand. Align the mounting points and secure with the provided hardware.
3. Connect the pedal unit cable to the designated port on the main keyboard unit.
4. Attach the music rest to the slot on the top panel of the piano.




Figure 1: Fully assembled Roland RP107 Digital Piano. This image shows the complete piano unit with the stand, pedal unit, and music rest in place.

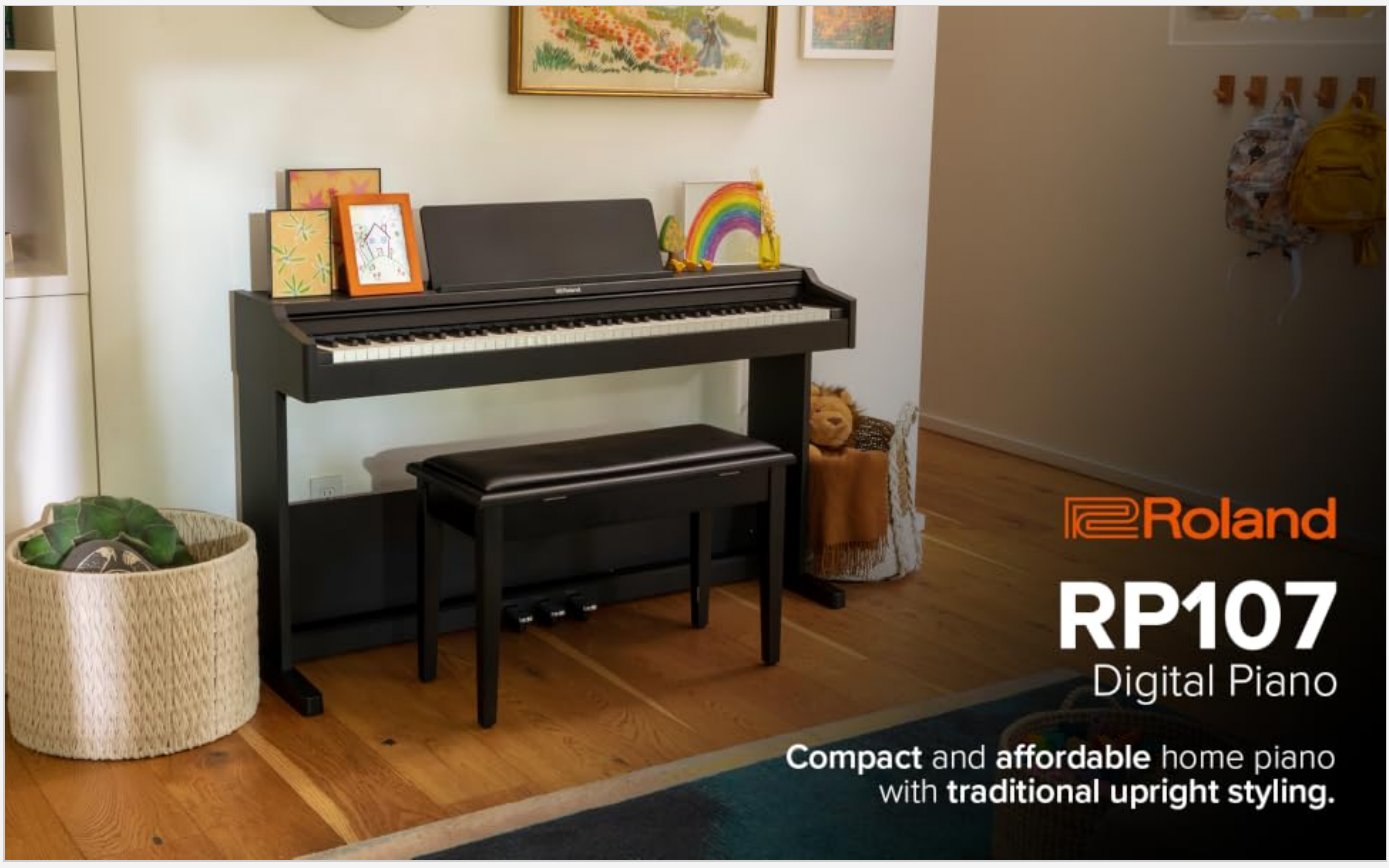


Figure 2: The Roland RP107 Digital Piano integrated into a home environment, showcasing its compact design and traditional styling.

### 2.3 Power Connection

Connect the AC adapter to the DC IN jack on the rear panel of the piano, then plug the adapter into a standard AC outlet. Ensure the power cable is not obstructed or pinched.

## 3. Operating Instructions

### 3.1 Basic Operation

- **Power On/Off:** Press the power button located on the control panel to turn the piano on or off.
- **Volume Control:** Adjust the master volume using the dedicated volume knob.
- **Sound Selection:** Use the instrument selection buttons to choose different piano tones or other instrument sounds.

### 3.2 Key Features

- **SuperNATURAL Piano Technology:** This technology provides a rich, expressive, and authentic acoustic grand piano sound.
- **PHA-4 Standard Keyboard:** The 88-note keyboard offers a realistic touch and response, simulating the feel of an acoustic piano.
- **Pedals:** The integrated pedal unit includes Damper, Soft, and Sostenuto pedals for expressive playing.
- **Polyphony:** The RP107 features 256 notes of polyphony, allowing for complex musical passages without note drop-out.
- **Onboard Speaker System:** The stereo speaker system delivers clear and full sound.
- **Headphones:** Two headphone jacks are provided for private practice or duet playing.

### 3.3 Bluetooth Connectivity

The RP107 supports Bluetooth connectivity for integration with smartphones or tablets. This allows for playing along with audio from mobile devices or using MIDI music applications.

1. Activate Bluetooth on your mobile device.
2. On the RP107, enter Bluetooth pairing mode (refer to the detailed user manual for specific button combinations).
3. Select "Roland RP107" from the list of available devices on your mobile device to pair.



Figure 3: A tablet placed on the music rest, demonstrating the use of digital sheet music or a companion app with the RP107.

### 3.4 Roland Piano App

The companion Roland Piano App enhances the RP107 experience by providing control over features, access to lessons, and other functionalities. Download the app from your device's app store and connect via Bluetooth.



Figure 4: A father and daughter playing the Roland RP107, illustrating its suitability for shared learning and practice.

## 4. Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents.
- **Dust Cover:** When not in use, cover the piano with a dust cover to protect it from dust and debris.
- **Environment:** Avoid exposing the piano to direct sunlight, extreme temperatures, high humidity, or excessive vibrations.
- **Key Care:** Keep the keys clean. If they become dirty, wipe them gently with a soft, slightly damp cloth.

## 5. Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| No sound | Volume is too low; headphones are connected; power cable is loose. | Increase volume; disconnect headphones; check power connection. |
| Keys do not respond | Piano is not powered on; internal issue. | Ensure power is on; if problem persists, contact support. |
| Bluetooth connection fails | Device is out of range; incorrect pairing procedure; interference. | Move device closer; re-attempt pairing; restart both devices. |
| Sound is distorted | Volume too high; speaker obstruction. | Reduce volume; ensure speakers are clear. |

## 6. Specifications

| Feature | Detail |
|---|---|
| Model Name | RP107 |
| Brand | Roland |
| Number of Keys | 88 |
| Keyboard Type | PHA-4 Standard Keyboard |

| Feature | Detail |
|---|---|
| Sound Engine | SuperNATURAL Piano Technology |
| Polyphony | 256 notes |
| Connectivity | Bluetooth |
| Headphones Jack | 3.5mm Jack (x2) |
| Product Dimensions | 58.5"D x 23"W x 22.6"H |
| Item Weight | 132 pounds (approx. 60 kg) |
| Color | Black |
| UPC | 761294518496 |




Figure 5: Dimensional diagram of the Roland RP107 Digital Piano, showing width, depth, and height measurements.

## 7. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Roland website. Keep your proof of purchase for warranty claims.
**Online Support:** Roland Global Support

© 2023 Roland Corporation. All rights reserved.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question



**Open the live page**

**https://manuals.plus/asin/B0B6D3KKMX**

More documents and user manuals: **https://manuals.plus/**