SKMEI 1637

SKMEI Model 1637 Digital Sports Watch User Manual

Model: 1637 | Brand: SKMEI

Introduction

This manual provides comprehensive instructions for the operation and maintenance of your SKMEI Model 1637 Digital Sports Wrist Watch. Designed for durability and functionality, this watch features a precise Japanese Quartz movement and an analog-digital display, making it suitable for various activities. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.



Figure 1: Front view of the SKMEI Model 1637 Digital Sports Watch.

Product Overview

The SKMEI 1637 watch combines analog and digital displays with multiple functions. Understanding its components is key to its operation.

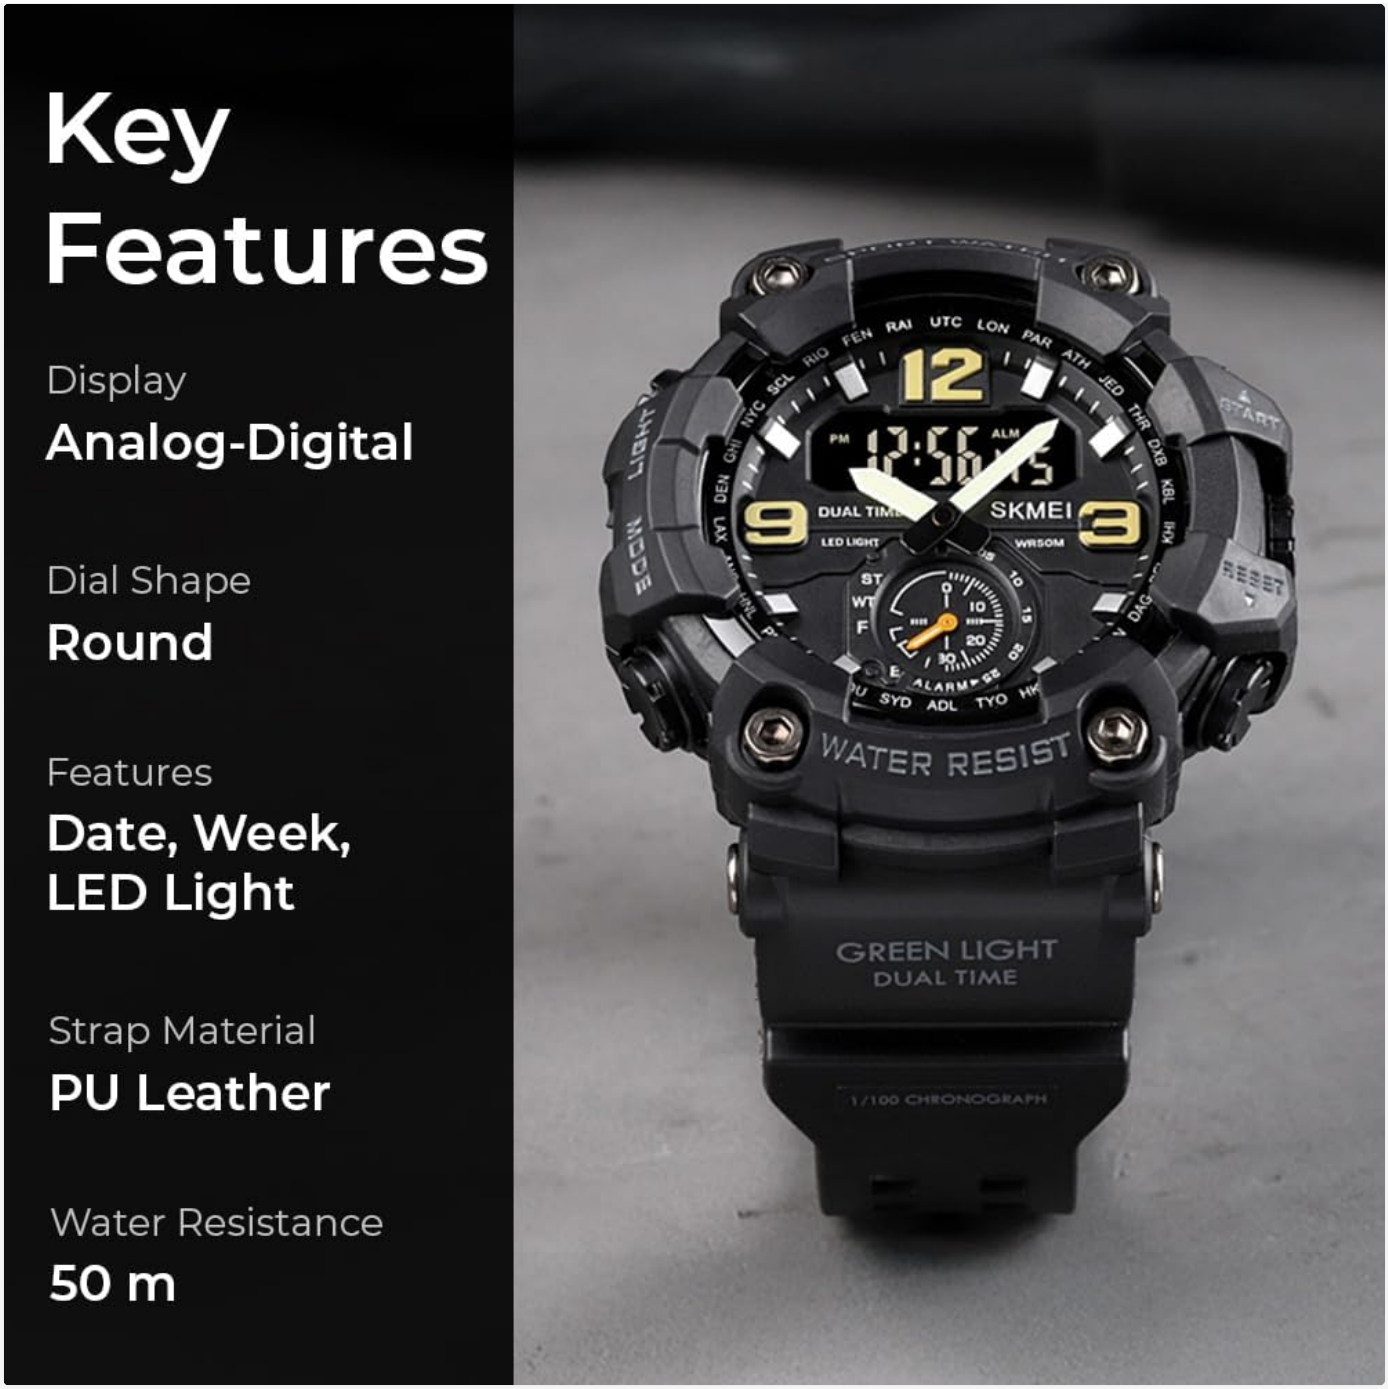


Figure 2: Overview of key features and specifications.

Key Components:

- **Analog Display:** Traditional hour and minute hands.
- **Digital Display:** Shows time, date, and other digital functions.
- **Buttons:**
  - **LIGHT Button:** Activates the LED backlight.
  - **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
  - **START Button:** Used for starting/stopping functions in certain modes.
  - **RESET Button:** Used for resetting functions or adjusting settings.
- **Hardlex Mirror:** Provides high transparency and scratch resistance.
- **Resin Strap:** Durable and comfortable for daily wear.



Figure 3: Side view illustrating button placement.

Setup

Setting the Analog Time:

1. Pull out the crown (small knob on the right side of the watch case) to the first position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to secure the time setting.

Setting the Digital Time and Date:

1. From the normal time display, press the**MODE** button repeatedly until the seconds start flashing. This indicates you are in time setting mode.
2. Press the **RESET** button to cycle through the settings: seconds, hour, minute, month, date, day of the week.
3. Use the **START** button to adjust the flashing value.

4. Once all settings are adjusted, press the **MODE** button to exit the setting mode and return to the normal time display.

Operating Instructions

Using the Backlight:

- Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will remain on for a few seconds.

Stopwatch Function:

1. Press the **MODE** button until "ST" (Stopwatch) appears on the digital display.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to exit the stopwatch mode.

Alarm Function:

1. Press the **MODE** button until "AL" (Alarm) appears on the digital display.
2. Press the **RESET** button to select the hour or minute setting.
3. Use the **START** button to adjust the flashing value.
4. To turn the alarm ON/OFF, press the **START** button while in alarm mode (not in setting mode). An alarm icon will appear/disappear.
5. Press the **MODE** button to exit the alarm mode.

Dual Time Function:

- Press the **MODE** button until "DT" (Dual Time) appears on the digital display.
- In this mode, you can set a second time zone independently. Follow similar steps as setting the main digital time, using **RESET** to select and **START** to adjust.

Maintenance

Water Resistance:

The SKMEI 1637 watch is rated for 50 meters (164 feet) water resistance. This means it is suitable for swimming, washing hands, and showering. *However, it is crucial not to press any buttons while the watch is submerged in water, as this can compromise the water seal and lead to damage.*

General Care:

- Clean the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Keep the watch away from harsh chemicals, solvents, and detergents, as these can damage the case and strap materials.
- If the watch comes into contact with saltwater, rinse it with fresh water and dry thoroughly.



Figure 4: Rear view of the watch, highlighting water resistance markings.

Troubleshooting

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery (CR2025). It is recommended to have this done by a professional.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in. If still not moving, replace the battery.

Problem	Possible Cause	Solution
Water inside the watch.	Buttons pressed underwater; damaged seal.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid pressing buttons underwater.
Time is inaccurate.	Incorrect setting; low battery.	Re-set the time according to the "Setup" section. If the problem persists, replace the battery.

Specifications

- **Model Number:** 1637
- **Movement:** Japanese Quartz
- **Display:** Analog-Digital
- **Case Diameter:** 56mm
- **Case Thickness:** 20mm
- **Band Width:** 22mm
- **Max Perimeter:** 240mm
- **Min Perimeter:** 165mm
- **Strap Material:** Resin
- **Mirror Material:** Hardlex
- **Water Resistance:** 50M (164FT)
- **Functions:** Dual Timezone, Calendar (Day and Date), Alarm, LED Display, Back Light, Shock Resistant, Stopwatch.
- **Product Dimensions:** 26.5 x 5.6 x 2 cm
- **Item Weight:** 78 g



Figure 5: Detailed dimensions of the watch.

Warranty and Support

Warranty Information:

Each SKMEI Model 1637 watch comes with a**6-month warranty** from all manufacturing defects. This warranty covers defects in materials and workmanship under normal use.

Customer Support:

If you have any questions about your product, encounter issues, or require assistance, please contact our customer support team immediately. We are committed to providing a satisfactory solution to any concerns you may have. Please refer to your purchase documentation for specific contact details or visit the official SKMEI website for support information.

© 2024 SKMEI. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question