Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nokia 8210

Nokia 8210 4G User Manual

Model: 8210

1. Introduction

Welcome to the user manual for your Nokia 8210 4G Dual-SIM smartphone. This guide provides essential information on how to set up, operate, maintain, and troubleshoot your device. Please read this manual carefully to ensure proper use and to maximize the performance of your phone.



Figure 1: Front view of the Nokia 8210 4G phone.

2. Safety Information

Always read these simple guidelines. Not following them may be dangerous or illegal.

- **Switch off in restricted areas:** Switch off the device when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, near medical equipment, fuel, chemicals, or blasting areas.
- **Road safety comes first:** Obey all local laws. Always keep your hands free to operate the vehicle while driving.
- **Interference:** All wireless devices may be susceptible to interference, which could affect performance.
- **Qualified service:** Only qualified personnel may install or repair this product.
- **Batteries, chargers, and other accessories:** Use only batteries, chargers, and other accessories approved by Nokia for use with this device. Do not connect incompatible products.

3. Getting Started (Setup)

3.1 Package Contents

Your Nokia 8210 4G package should contain the following items:

- Nokia 8210 4G Handset
- Battery (Li-Ion 1450 mAh)
- Charger
- Quick Start Guide (separate document)
- [Inferred] Phone Cover
- [Inferred] SIM Card
- [Inferred] microSD Card

3.2 Inserting SIM Card(s) and MicroSD Card

The Nokia 8210 4G supports Dual-SIM functionality and a dedicated microSDHC slot for expandable storage.

1. Power off the phone and remove the back cover by gently prying it from the designated notch.
2. If the battery is installed, remove it.
3. Locate the SIM card slots (SIM1 and SIM2) and the microSD card slot.
4. Insert your Nano-SIM card(s) into the respective slots with the gold contacts facing down and the cut corner aligned as shown in the diagram (refer to Quick Start Guide for detailed diagram).
5. Insert the microSD card into its dedicated slot until it clicks into place.
6. Replace the battery and then the back cover, ensuring it snaps securely into place.



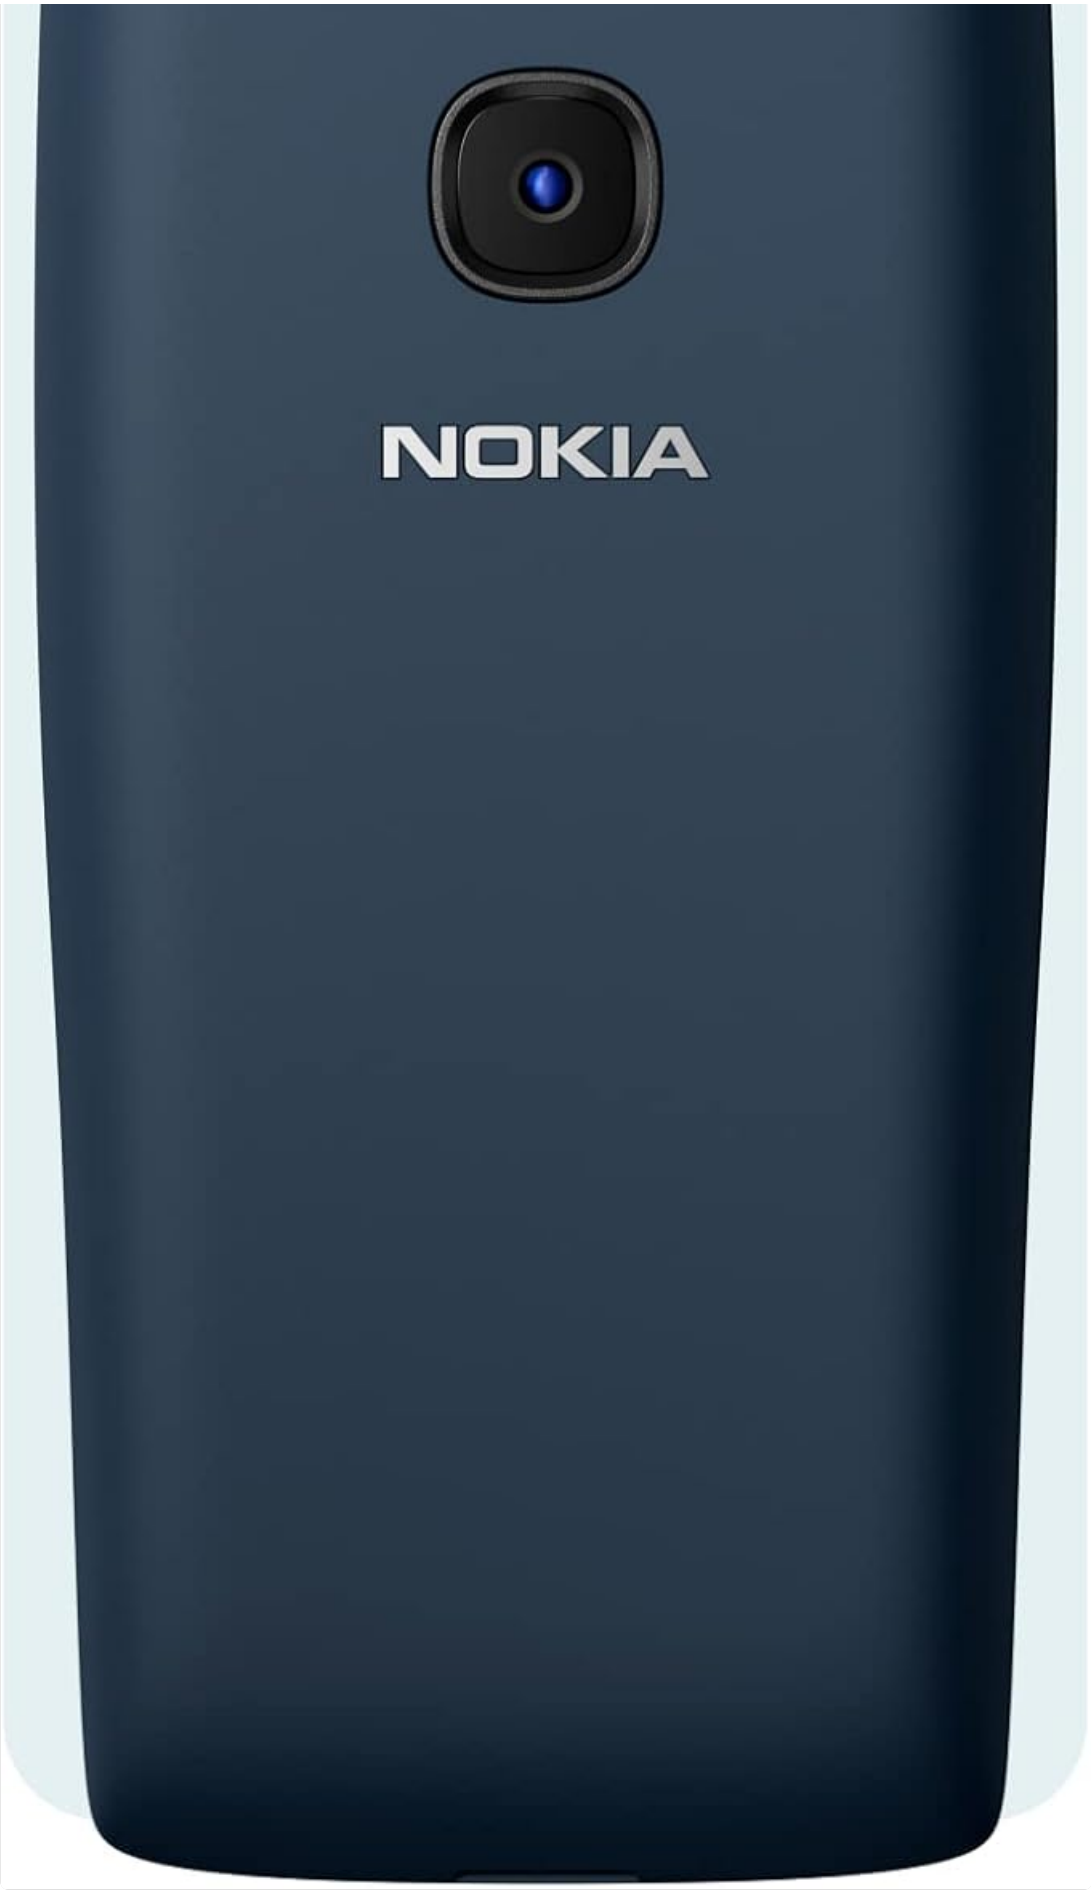


Figure 2: Rear view of the Nokia 8210 4G, where the back cover is removed for SIM/battery access.

3.3 Battery Installation and Charging

Your phone comes with a removable Li-Ion 1450 mAh battery.

1. Ensure the phone is powered off.
2. Remove the back cover.
3. Align the battery contacts with the contacts in the phone's battery compartment and gently press the battery into place.
4. Replace the back cover.
5. Connect the charger to the phone's charging port.
6. Plug the charger into a wall outlet. The battery indicator on the screen will show charging status.
7. Once fully charged, disconnect the charger from the phone and then from the wall outlet.

Note: It is recommended to fully charge the battery before first use.

3.4 Powering On and Off

- **To Power On:** Press and hold the Power/End Call key until the phone vibrates and the Nokia logo appears.
- **To Power Off:** Press and hold the Power/End Call key until the power options appear on the screen. Select "Power off" and confirm.

4. Basic Operation

4.1 Navigation

The Nokia 8210 4G features a traditional keypad for navigation and input.

- **Navigation Key (D-pad):** Use the up, down, left, and right keys to navigate through menus and options. The center key acts as a selection/confirmation button.
- **Call Key:** Press to make a call or answer an incoming call.
- **End Call/Power Key:** Press to end a call, reject an incoming call, or return to the home screen. Long press to power on/off the device.
- **Soft Keys:** The two keys directly below the screen (left and right) perform functions indicated by the text on the screen directly above them.
- **Alphanumeric Keypad:** Used for dialing numbers and typing text.

4.2 Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key to initiate the call.
3. To end the call, press the End Call key.
4. To call a contact, go to "Contacts," select the desired contact, and press the Call key.

4.3 Sending Messages

1. Go to "Menu" > "Messages".
2. Select "Create message" or "New message".
3. Enter the recipient's phone number or select from contacts.
4. Type your message using the alphanumeric keypad. Press the '#' key to switch between text input modes (e.g., T9, ABC, abc, 123).
5. Press "Send".

4.4 Contacts

Store and manage your contacts directly on your phone or SIM card.

- **Adding a Contact:** Go to "Menu" > "Contacts" > "Add new contact". Enter the name and phone number, then save.
- **Searching for a Contact:** From the Contacts menu, start typing the name, or use the navigation keys to scroll.

4.5 Camera

Your Nokia 8210 4G is equipped with a basic camera for capturing photos.

1. Go to "Menu" > "Camera".
2. Frame your shot using the screen as a viewfinder.
3. Press the center navigation key to take a photo.
4. Photos are saved to the phone's gallery or microSD card.

4.6 Connectivity

The device supports 4G LTE, Wi-Fi, and Bluetooth for various connectivity needs.

- **4G LTE:** Provides high-speed mobile data connectivity. Ensure your SIM card supports 4G and your network provider offers 4G services in your area.
- **Wi-Fi:** Connect to wireless networks for internet access. Go to "Menu" > "Settings" > "Connectivity" > "Wi-Fi" to scan for and connect to available networks.
- **Bluetooth:** For connecting to wireless headsets, car kits, or transferring files. Go to "Menu" > "Settings" > "Connectivity" > "Bluetooth" to enable and pair with other devices.

4.7 Music Player and FM Radio

Enjoy your favorite music and radio stations on the go.

- **Music Player:** Transfer music files to your phone's internal storage or microSD card. Access the player via "Menu" > "Music".
- **FM Radio:** Plug in a compatible headset (sold separately) to use as an antenna. Access the FM Radio via "Menu" > "FM Radio".

5. Maintenance and Care

Proper care of your device will ensure its longevity and optimal performance.

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** Do not expose the battery to extreme temperatures. Avoid fully discharging the battery frequently. If the phone will not be used for an extended period, charge the battery to about 50% before storing.
- **Water Resistance:** This device is not water-resistant. Avoid exposure to liquids.

6. Troubleshooting

If you encounter issues with your Nokia 8210 4G, try the following solutions before seeking professional service.

Problem	Possible Solution

Problem	Possible Solution
Phone does not turn on.	Ensure the battery is correctly installed and charged. Connect the charger and wait a few minutes before attempting to power on.
No network signal.	Check if the SIM card is properly inserted. Move to an area with better network coverage. Restart the phone.
Cannot make or receive calls.	Check network signal. Ensure call barring or flight mode is not activated. Verify SIM card is active.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Disable Wi-Fi or Bluetooth when not in use. Limit background data usage.
Phone freezes or is unresponsive.	Remove and reinsert the battery to perform a hard reset.

7. Specifications

Feature	Detail
Model Name	Nokia 8210 4G
Dimensions (L x W x H)	5.16 x 2.2 x 0.55 inches (131.06 x 55.88 x 13.97 mm)
Weight	3.88 ounces (110 grams)
Display	2.8 Inches LCD, 240 x 320 Resolution
Processor	1.4 GHz Quad-core (Unisoc T107)
RAM	48 MB
Internal Storage	128 MB ROM (expandable with microSDHC)
Battery	Li-Ion 1450 mAh, removable
Operating System	Android [estimated]
Connectivity	2G GSM, 3G HSDPA, 4G LTE, Wi-Fi, Bluetooth, 3.5 mm Audio Jack
SIM Type	Dual-SIM (Nano-SIM)
Camera	Rear, Front (details not specified in input)
Color	Dark Black

8. Warranty and Support

For warranty information and technical support, please refer to the warranty card included in your product package or visit the official Nokia support website. You can also find frequently asked questions (FAQs) and additional resources online.

Nokia Official Support: www.nokia.com/phones/support

Please have your product model number (8210) and serial number (IMEI) ready when contacting support.

© 2024 Nokia. All rights reserved. Nokia and the Nokia Logo are trademarks of Nokia Corporation.
Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B6WLBKKR

More documents and user manuals: **https://manuals.plus/**