Dyson UP30

Dyson Ball Animal 3 Upright Vacuum Cleaner

Model: UP30
Brand: Dyson

Product Overview

The Dyson Ball Animal 3 is engineered for powerful cleaning performance, especially designed to tackle tough tasks in homes with pets. Its advanced de-tangling technology ensures continuous cleaning without hair wrapping around the brush bar. With versatile cleaning modes and Ball™ technology, it offers precise maneuverability for a whole-home deep clean.

Key Features

- The best cleaning performance of any upright de-tangling vacuum.
- De-tangling technology automatically clears wrapped hair from the brush bar.
- Ball technology for easy, precise maneuvering around your home.
- 3 cleaning modes optimized for a variety of tasks.
- Engineered for larger homes with pets, effectively removing dirt and pet hair.
- Includes 2 Dyson-engineered accessories: Stair tool and Combination tool.
- Advanced, whole-machine filtration traps particles inside the machine.
- Pioneering Radial Root Cyclone technology increases suction.
- 5-year warranty and lifetime Dyson customer support.






The Dyson Ball Animal 3 upright vacuum cleaner, showcasing its sleek design and transparent dust bin.

Components and Setup

Included Components

- Dyson Ball Animal 3 upright vacuum cleaner
- Combination tool
- Stair tool
- Tool holder

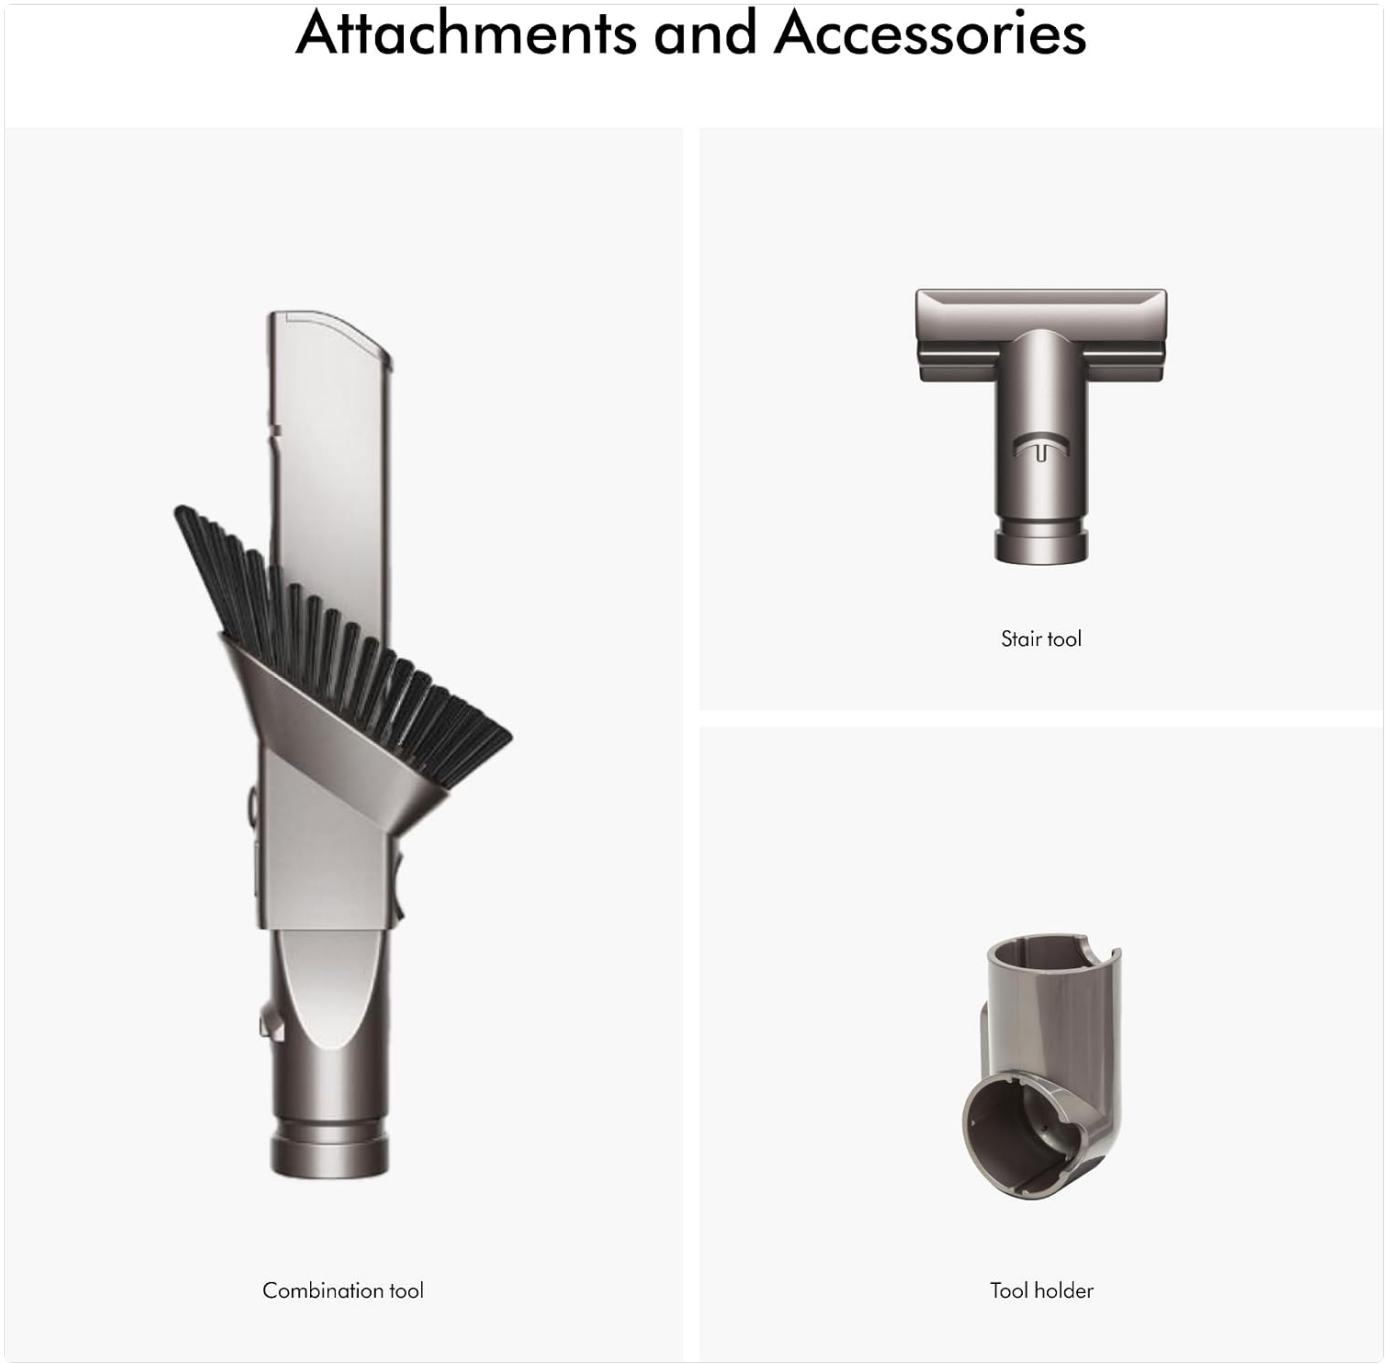

Included accessories: the combination tool for versatile cleaning, the stair tool for steps, and a convenient tool holder.

Assembly Instructions

Your Dyson Ball Animal 3 is designed for quick and easy assembly. Simply connect the main body to the cleaner head until it clicks securely into place. Attach the handle to the top of the main body. Ensure all components are firmly connected before use.

Operating Your Dyson Ball Animal 3

Powering On and Off

Plug the vacuum into a power outlet. Press the red power button located on the main body to turn the vacuum on or off.

Cleaning Modes and Surface Adjustment

The Dyson Ball Animal 3 features 3 cleaning modes to optimize performance across different surfaces. Use the slider on the cleaner head to adjust the brush bar height for bare floors, medium-pile carpets, or high-pile carpets. The brush bar can also be turned on or off as needed.



Detailed view of the de-tangling technology, designed to automatically clear wrapped hair from the brush bar.

Maneuverability

Thanks to Dyson's Ball™ technology, the vacuum pivots smoothly around furniture and obstacles with a simple turn of the wrist, allowing for precise cleaning in tight spaces.



Whole-home deep clean

Powerful cleaning on all floor types



Advanced filtration

Five layers of filtration capture 99.97% of particles down to 0.3 microns[2]



3 cleaning modes

Adjustable suction for complete control over your clean



Radial Root Cyclone technology™

Delivers strong suction from start to finish

The unique Ball™ technology allows for easy and precise maneuvering around obstacles and furniture.


Using Attachments

To use the wand and attachments, simply pull the wand release catch located at the top of the main body. The hose will extend, allowing you to attach the combination tool or stair tool for targeted cleaning of upholstery, stairs, and hard-to-reach areas.



Dyson Ball technology™ designed for comfortable vacuuming. Steer smoothly around furniture.

The extended wand and stair tool provide excellent reach for cleaning stairs and high-up areas.

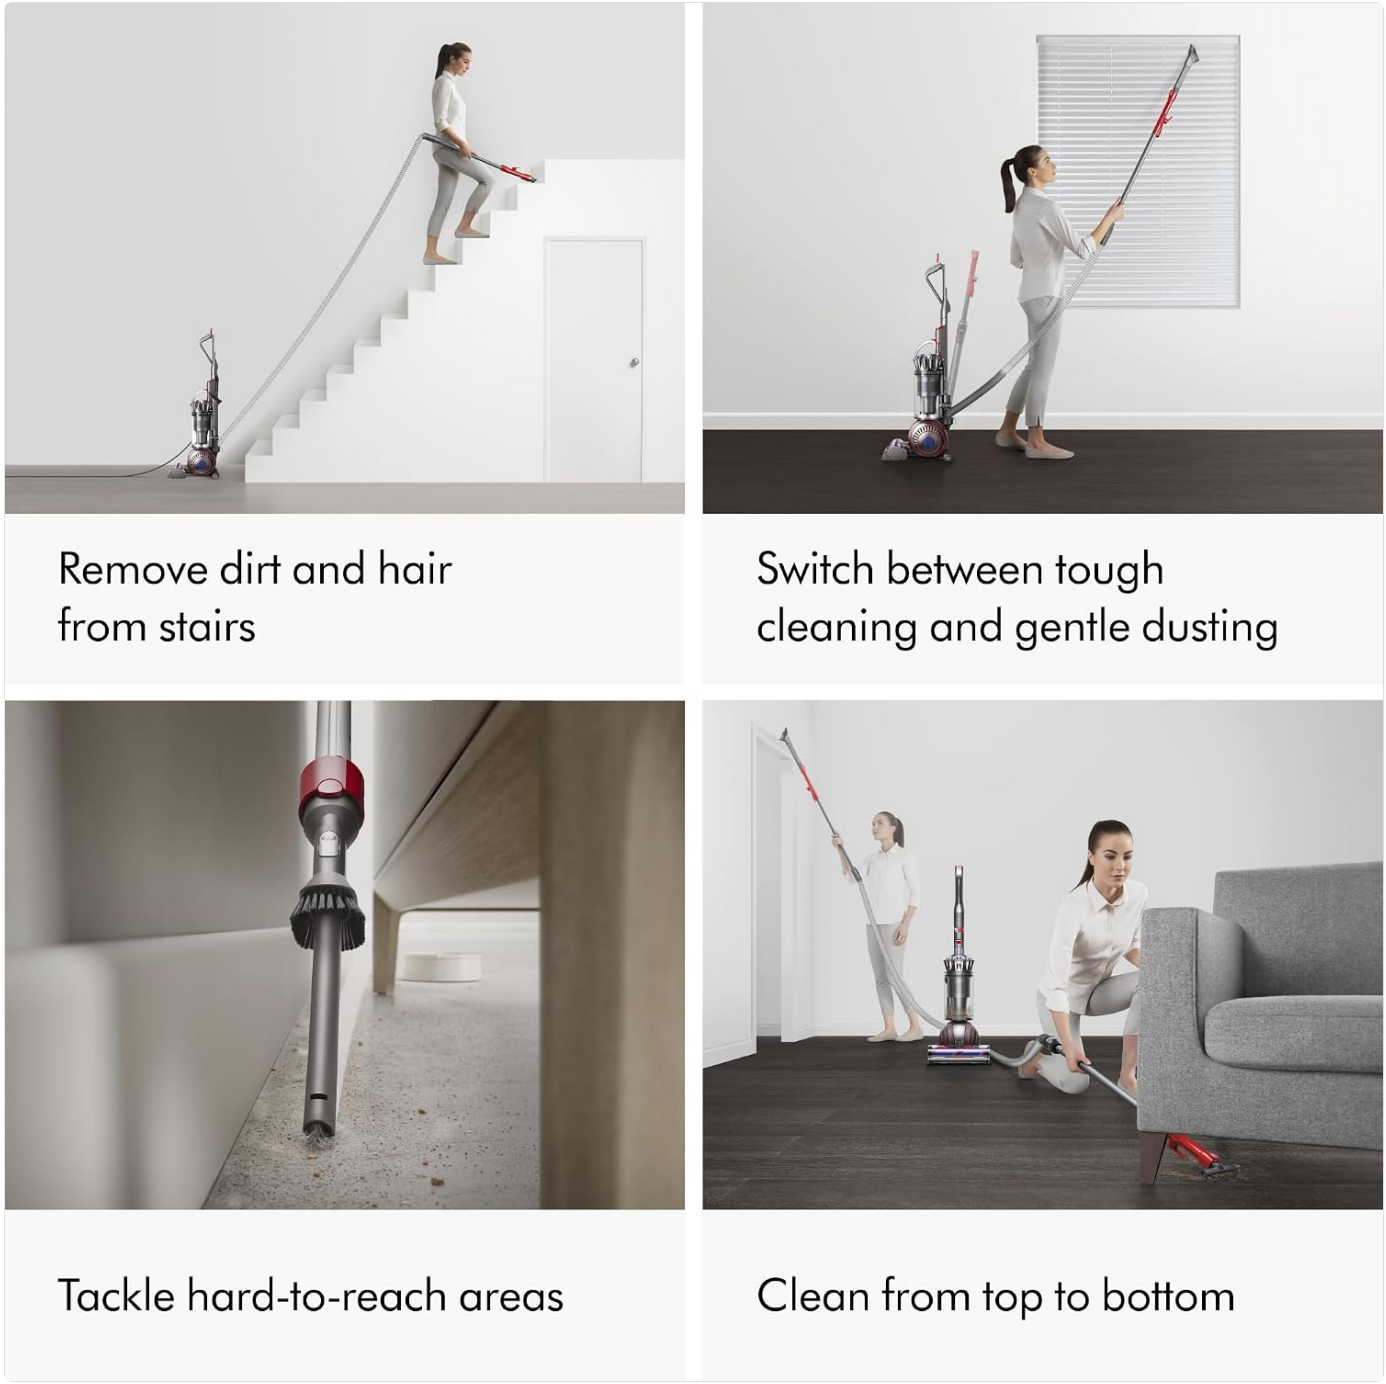

Demonstration of the vacuum's versatility, reaching high ceilings and low under furniture for a complete clean.

Maintenance

Emptying the Dust Bin

To empty the dust bin, press the red button located on the top of the cyclone assembly. The bin will release from the main body. Position the bin over a trash receptacle and press the red button again to open the bottom flap and release the debris. Close the flap and reattach the bin to the vacuum until it clicks.



Hygienic one-touch bin emptying mechanism, allowing for quick and clean disposal of collected debris.

Filter Maintenance

The Dyson Ball Animal 3 features washable filters. Refer to your full user manual for specific instructions on how to remove, wash, and dry the filters. Regular cleaning of the filters is essential to maintain optimal suction performance and air filtration.

De-tangling Brush Bar

The de-tangling technology is designed to prevent hair wrap. Periodically check the brush bar for any stubborn debris or hair that may have accumulated and remove it manually if necessary to ensure continued effective cleaning.

Troubleshooting Common Issues

Loss of Suction

- Check if the dust bin is full and empty it.
- Ensure the filters are clean and properly installed. Wash and dry them if needed.
- Inspect the cleaner head, wand, and hose for any blockages and clear them.

Hair Wrapping Around Brush Bar

- While the de-tangling technology is highly effective, occasionally long hair may accumulate. Manually remove any wrapped hair from the brush bar.

Vacuum Not Turning On

- Verify the power cord is securely plugged into both the vacuum and a working electrical outlet.
- Check your household's circuit breaker if the outlet is not providing power.

Product Specifications

Specification	Detail
Brand	Dyson
Model Name	Dyson Ball Animal 3™
Model Number	UP30
Product Dimensions	15.51"L x 11.02"W x 42.17"H
Item Weight	17.33 pounds
Wattage	1350 watts
Capacity	0.55 Gallons
Hose Length	15 Feet
Filter Type	Washable
Special Features	De-tangling Motorbar™ cleaner head, Corded, Whole-machine filtration, Bagless

Warranty and Support

The Dyson Ball Animal 3 comes with a 5-year warranty, ensuring long-term reliability and performance. Dyson also provides lifetime customer support for your machine.

For personalized machine guides, maintenance tips, and direct support, register your machine on the MyDyson™ app. You can also visit the official Dyson website for further assistance and FAQs.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question