ONN 100026240

ONN Android TV 4K UHD Streaming Device

User Instruction Manual

Introduction

The ONN Android TV 4K UHD Streaming Device (Model: 100026240) is designed to transform your television into a smart entertainment hub. Experience stunning 4K Ultra HD resolution, offering four times the clarity and detail of Full HD. Powered by the Android TV operating system, this device provides access to a vast array of content and applications through the Google Play Store. Its voice remote control with Google Assistant allows for intuitive navigation and content search. The built-in Chromecast feature enables seamless casting from your mobile devices.

Important Note: This product is designed for use in the United States and is not compatible with regions outside the U.S. (including Mexico or other international locations).

What's in the Box

Upon unboxing your ONN Android TV 4K UHD Streaming Device, please ensure all the following components are present:

- 1 x ONN 4K UHD Streaming Device
- 1 x Voice Remote Control (batteries included)
- 1 x HDMI Cable (3.28 ft / 1 m)
- 1 x AC Adapter with cable (3.28 ft / 1 m)
- 1 x Quick Start Guide



Figure 1: All components included in the ONN Android TV 4K UHD Streaming Device package.

Setup

Follow these steps to set up your ONN Android TV 4K UHD Streaming Device:

1. **Connect the Device:** Plug the HDMI cable into the HDMI port on your ONN streaming device and then into an available HDMI port on your television.
2. **Power On:** Connect the AC adapter to the streaming device's power input and then plug the adapter into a wall outlet. The device will power on automatically.
3. **Select HDMI Input:** On your television, use your TV remote to select the corresponding HDMI input where the ONN device is connected.
4. **Pair the Remote:** Follow the on-screen instructions to pair your voice remote control. This usually involves pressing and holding specific buttons on the remote until it pairs with the device.
5. **Initial Setup:**
    - Access your Google account to personalize your experience.
    - Configure the device language.
    - Connect to your Wi-Fi network by selecting your network and entering the password.

6. **Download Apps:** Once connected, you can download your favorite streaming applications from the Google Play Store.



Figure 2: The ONN streaming device and its accompanying voice remote, ready for setup.

Operating Instructions

The ONN Android TV device offers a user-friendly interface and powerful features for an enhanced streaming experience.

Voice Remote Control

The included voice remote control simplifies navigation and content discovery. It can also control basic TV functions like power and volume if linked during setup.

- **Power Button:** Turns the streaming device and linked TV on/off.
- **Google Assistant Button:** Press and hold to activate voice commands. Speak clearly into the remote to search for content, open apps, control smart home devices, and get information.
- **Navigation Pad (Circle):** Use the directional buttons to move through menus and content. Press the center button to select.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Android TV home screen.
- **Volume Buttons (+/-):** Adjusts the volume of your television.

- **Mute Button:** Mutes/unmutes the TV audio.
- **Dedicated App Buttons:** Quick access buttons for popular streaming services like YouTube, Netflix, Disney+, and HBO Max.



Figure 3: The ONN voice remote control, showing its various buttons for navigation and voice commands.

Android TV Interface

The Android TV home screen provides personalized recommendations, quick access to your installed apps, and live TV options.

- **Home Screen:** Displays recommended content, recently watched shows, and a row of your favorite apps.
- **Apps Section:** Navigate to the "Apps" tab to view all installed applications and access the Google Play Store to download new ones.
- **Live TV:** If you have compatible live TV services or apps, they will be integrated into the "Live" tab for easy access.
- **Chromecast Built-in:** To cast content from your phone or tablet, ensure your mobile device and the ONN streaming device are on the same Wi-Fi network. Open a compatible app on your mobile device and tap the Cast icon (▶) to send content to your TV.

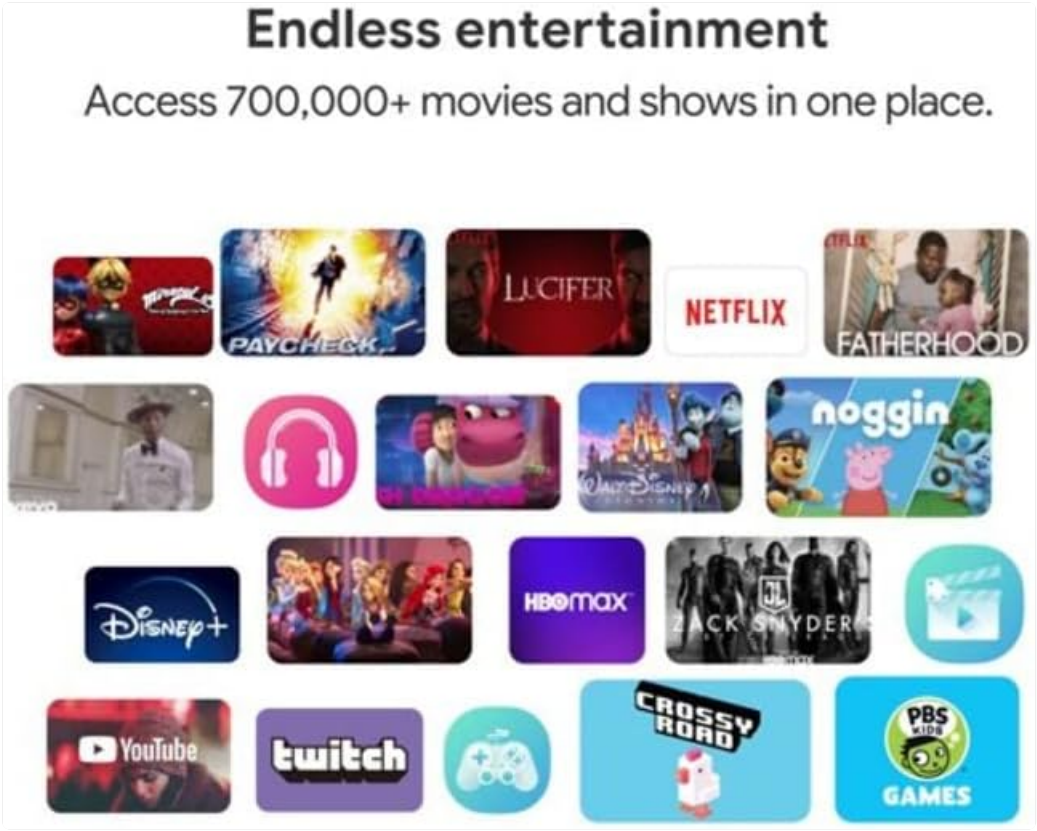


Figure 4: The ONN Android TV device displaying the Google TV interface with popular streaming app icons.

Features

- **4K Ultra HD Resolution:** Supports 4K UHD output, providing crisp and vibrant visuals on compatible 4K televisions.
- **Android TV Operating System:** Access thousands of apps, games, and content from the Google Play Store.
- **Voice Remote with Google Assistant:** Use voice commands for search, control, and smart home integration.
- **Chromecast Built-in:** Stream movies, shows, photos, and more directly from your Android or iOS devices.
- **High-Quality Audio:** Delivers clear audio with enhanced dialogue for an immersive sound experience.
- **HDMI Connectivity:** Simple plug-and-play connection to your TV via the included HDMI cable.
- **Wide TV Compatibility:** Works with various TV brands including ONN, Samsung, Sony, RCA, Vizio, Hisense, TCL, and Philips.

Specifications

Attribute	Detail
Brand	ONN
Model Number	100026240
Resolution	4K Ultra HD
Operating System	Android TV
Connectivity	Wi-Fi, HDMI
Controller Type	Remote Control, Voice Control

Attribute	Detail
Memory Storage Capacity	8 GB
Item Weight	12 ounces (0.34 Kilograms)
Package Dimensions	6.89 x 3.82 x 2.05 inches
UPC	671227008065

Troubleshooting

If you encounter issues with your ONN Android TV Streaming Device, try the following solutions:

- **No Power/Device Not Turning On:**
  - Ensure the AC adapter is securely plugged into both the device and a working wall outlet.
  - Check if the power outlet is functional by plugging in another device.
- **No Picture/Black Screen:**
  - Verify the HDMI cable is firmly connected to both the streaming device and the TV.
  - Ensure your TV is set to the correct HDMI input source.
  - Try a different HDMI port on your TV or a different HDMI cable.
  - Restart the streaming device by unplugging it from power for 10 seconds and plugging it back in.
- **Remote Control Not Responding:**
  - Check if the batteries in the remote are correctly inserted and have sufficient charge. Replace if necessary.
  - Ensure there are no obstructions between the remote and the device.
  - Re-pair the remote control by following the initial setup instructions (usually involves pressing and holding specific buttons).
- **Wi-Fi Connection Issues:**
  - Restart your Wi-Fi router and modem.
  - Ensure the Wi-Fi password entered is correct.
  - Move the streaming device closer to your Wi-Fi router to improve signal strength.
- **App Freezing/Lagging:**
  - Close and reopen the problematic application.
  - Clear the cache for the specific app in the device settings (Settings > Apps > [App Name] > Clear Cache).
  - Ensure your internet connection is stable and fast enough for streaming.
  - Restart the streaming device.

Maintenance

Proper care and maintenance will ensure the longevity of your ONN Android TV Streaming Device:

- **Cleaning:**
  - Unplug the device before cleaning.

- Use a soft, dry, lint-free cloth to wipe the device and remote.
- Do not use liquid cleaners, aerosols, or abrasive cleaners, as they may damage the device.

- **Placement:**
  - Place the device on a stable, flat surface.
  - Ensure adequate ventilation around the device to prevent overheating. Do not place it in an enclosed cabinet or cover ventilation openings.
  - Keep the device away from direct sunlight, heat sources, and moisture.
- **Software Updates:**
  - The device may receive automatic software updates. Ensure it is connected to the internet to receive these updates, which can improve performance and add new features.

Warranty and Support

For warranty information or technical support, please refer to the Quick Start Guide included in your product packaging or visit the official ONN support website. Keep your purchase receipt as proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question