GIM Wireless Charging RGB Gaming Mouse Pad 15W

GIM Wireless Charging RGB Gaming Mouse Pad 15W User Manual

Brand: GIM | Model: Wireless Charging RGB Gaming Mouse Pad 15W

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your GIM Wireless Charging RGB Gaming Mouse Pad 15W. Please read these instructions carefully before use to ensure optimal performance and safety.

SAFETY INFORMATION

- Do not expose the mouse pad to extreme temperatures or direct sunlight.

- Keep the mouse pad away from water and other liquids, despite its water-resistant surface.

- Avoid placing metal objects, magnets, or credit cards on the wireless charging area as this may interfere with charging or damage the device.

- Use only the provided USB-C cable for power.

PACKAGE CONTENTS

- GIM Wireless Charging RGB Gaming Mouse Pad 15W

- USB-C Power Cable

SETUP

1. **Unroll the Mouse Pad:** Carefully unroll the GIM Wireless Charging RGB Gaming Mouse Pad onto a flat, clean desk surface. Allow some time for it to flatten completely.

2. **Connect Power:** Insert the provided USB-C cable into the port on the mouse pad's control module. Connect the other end of the USB-C cable to a compatible USB power source (e.g., computer USB port, USB wall adapter).

3. **Power Adapter Note:** For optimal 10W/15W wireless fast charging, a 9V 2A power adapter (not included) is recommended.

The GIM Wireless Charging RGB Gaming Mouse Pad 15W properly set up on a desk, ready for use.

OPERATING INSTRUCTIONS

RGB Lighting Control

- **Change Lighting Modes:** Lightly press the one-touch switch button on the control module to cycle through 10 different RGB lighting modes, including 7 static and 3 dynamic effects.

- **Turn On/Off:** Press and hold the one-touch switch button for 3 seconds to turn the RGB lighting on or off.

- **Memory Function:** The mouse pad remembers your last selected lighting mode when powered off and will resume it upon restart.

Illustration of the 10 RGB lighting modes available on the mouse pad.

The one-touch switch allows for easy control of RGB lighting and indicates charging status.

Wireless Charging

- **Place Device:** Position your Qi-enabled smartphone or other compatible device directly on the wireless charging area of the mouse pad. Ensure the device is centered for optimal charging.

- **Charging Indicators:** The LED indicator on the control module will show the charging status:
    - **BLUE:** Standby mode
    - **RED:** Device is charging
    - **GREEN:** Device is fully charged
    - **RED FLASHING:** Charging error (e.g., foreign object detected, device not compatible, or improperly placed).

- **Compatibility:** Compatible with smartphones supporting wireless charging (e.g., iPhone 8/X/XR/XS/11/11 Pro/12/12 Pro/12 Pro Max/13/13 Pro/13 Pro Max, Samsung Galaxy 10/S9/S8 Plus, Galaxy Note 9/8, and all other Qi-enabled devices).

- **Important:** Avoid placing metal cases, grips, stands, magnets, or credit cards between your device and the charging pad, as this will prevent charging.

A smartphone actively charging on the designated wireless charging area.

The wireless charging feature is compatible with a wide range of Qi-enabled devices.
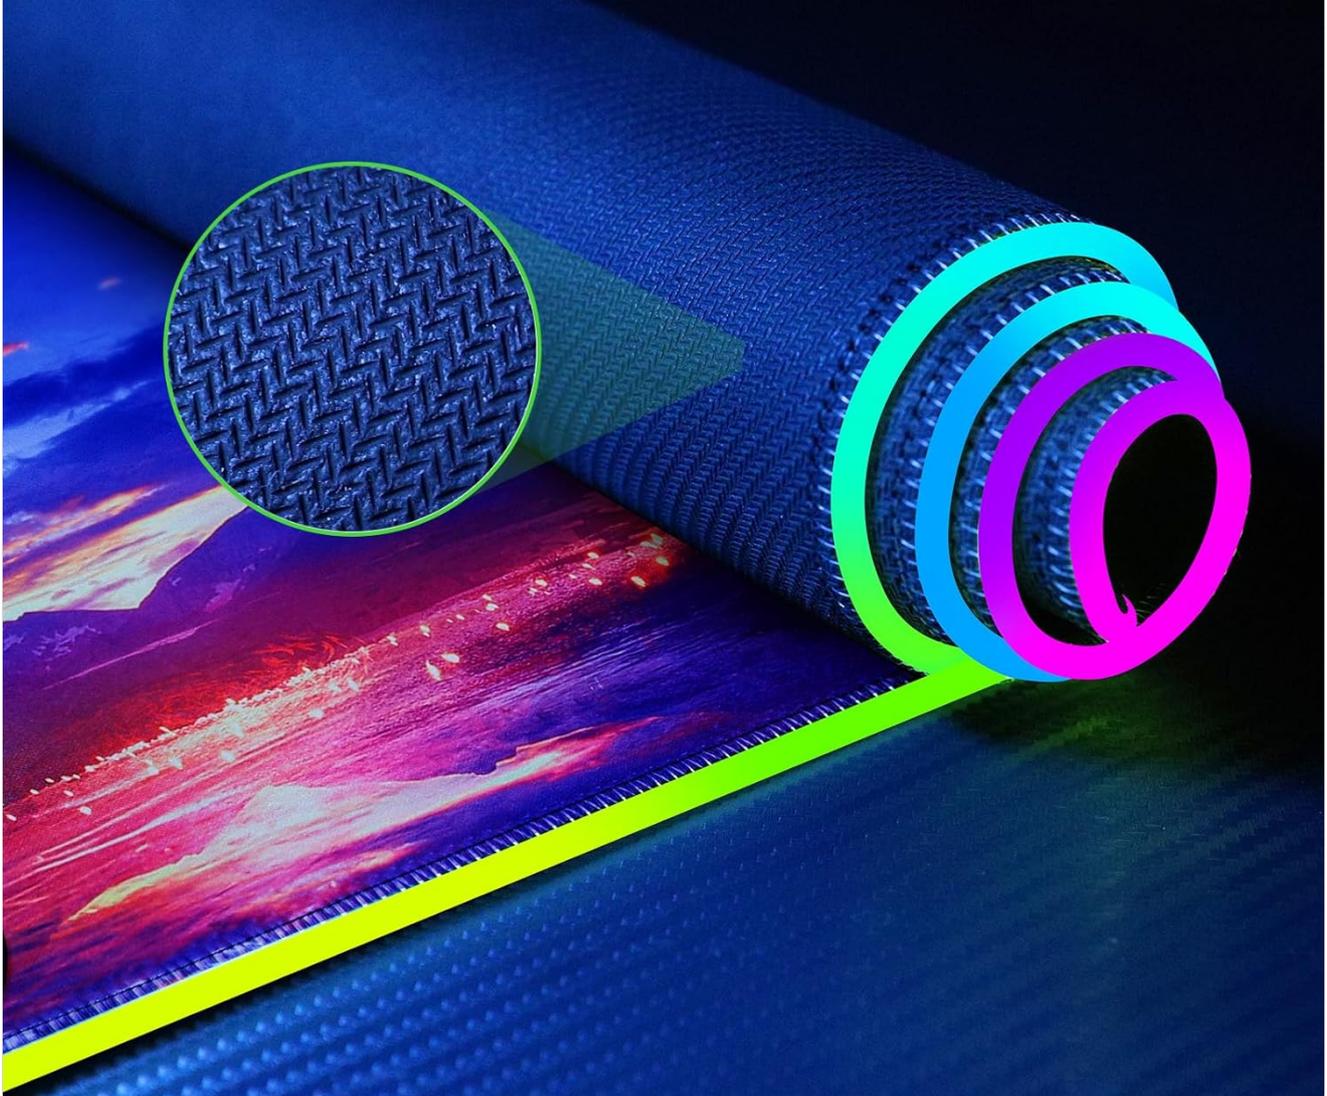
Official product video demonstrating the wireless charging capabilities of the GIM RGB Mouse Pad.

MAINTENANCE

- **Cleaning:** The mouse pad features a water-resistant surface. For spills, gently wipe with a damp cloth. For general cleaning, use a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, the mouse pad can be rolled up for easy storage.

The water-resistant surface allows for easy cleaning of spills.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging / Red flashing indicator	Device improperly placed, incompatible device, foreign object, or thick case.	Ensure device is centered on the charging area. Remove any metal objects, magnets, or thick cases. Verify device is Qi-enabled.
RGB lights not working	No power, or lights are turned off.	Check USB-C cable connection. Press and hold the one-touch switch for 3 seconds to turn lights on. Briefly press to cycle modes.
Mouse pad not lying flat	Recently unrolled.	Allow some time for the mouse pad to naturally flatten on a desk surface.

SPECIFICATIONS

Feature	Detail
Brand	GIM
Model	Wireless Charging RGB Gaming Mouse Pad 15W
Dimensions (LxWxH)	31.5 x 11.81 x 0.16 inches (800x300x4MM)
Item Weight	1.9 pounds
Material	Rubber
Wireless Charging Output	10W (up to 15W with compatible adapter)
RGB Lighting Modes	10 (7 static, 3 dynamic)
Special Features	Non-slip base, Water-resistant surface, Memory function for RGB lights
Hardware Platform	PC

WARRANTY AND SUPPORT

GIM products come with a **12-month technical support** warranty. For any technical assistance or customer service inquiries, please contact GIM Electronic support. Our team is available for **7*24 hours customer service** to assist you. For more information, visit the GIM Store on Amazon.