Candy FIDCP X625 L

Candy FIDCP X625 L Multifunction Oven User Manual

Model: FIDCP X625 L | Brand: Candy

Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Candy FIDCP X625 L Multifunction Oven. Please read this manual thoroughly before using the appliance and keep it for future reference.

Safety Information

Always adhere to the following safety precautions to prevent electric shock, fire, or injury:

- Ensure the oven is properly installed and grounded by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Keep children away from the oven during operation and cooling.
- Never use water to extinguish grease fires; smother the fire or use a dry chemical or foam-type extinguisher.
- Unplug the oven from the power supply before cleaning or performing maintenance.
- Do not store flammable materials in or near the oven.

Product Overview

The Candy FIDCP X625 L is a 70L multifunction oven designed for modern kitchens. It features a sleek stainless steel and black finish, a digital display with touch timer, and Push&Pull controls for ease of use.

Components and Controls



Figure 1: Front View of the Oven. This image displays the front of the Candy FIDCP X625 L oven, highlighting its stainless steel control panel, digital display, and Push&Pull knobs. The large glass door provides a clear view into the oven cavity.

- **Control Panel:** Located at the top, featuring the digital display and control knobs.
- **Digital Display with Timer Touch:** Shows time, temperature, and cooking settings. Allows for precise timer adjustments.
- **Push&Pull Knobs:** Retractable knobs for selecting cooking functions and temperature, providing a flush, clean look when not in use.
- **Oven Door:** Features double glass for improved insulation and safety, with a radial cooling fan.
- **Oven Cavity:** 70L capacity, equipped with internal lighting.
- **Accessories:** Includes 1 baking tray and 1 wire rack.



Figure 2: Oven Interior. A detailed view of the oven's interior, showing the multiple rack positions and the rear fan for convection cooking. The spacious 70L cavity is designed for versatile cooking.



Figure 3: Baking Tray. This image shows the included baking tray, suitable for various dishes and collecting drips.

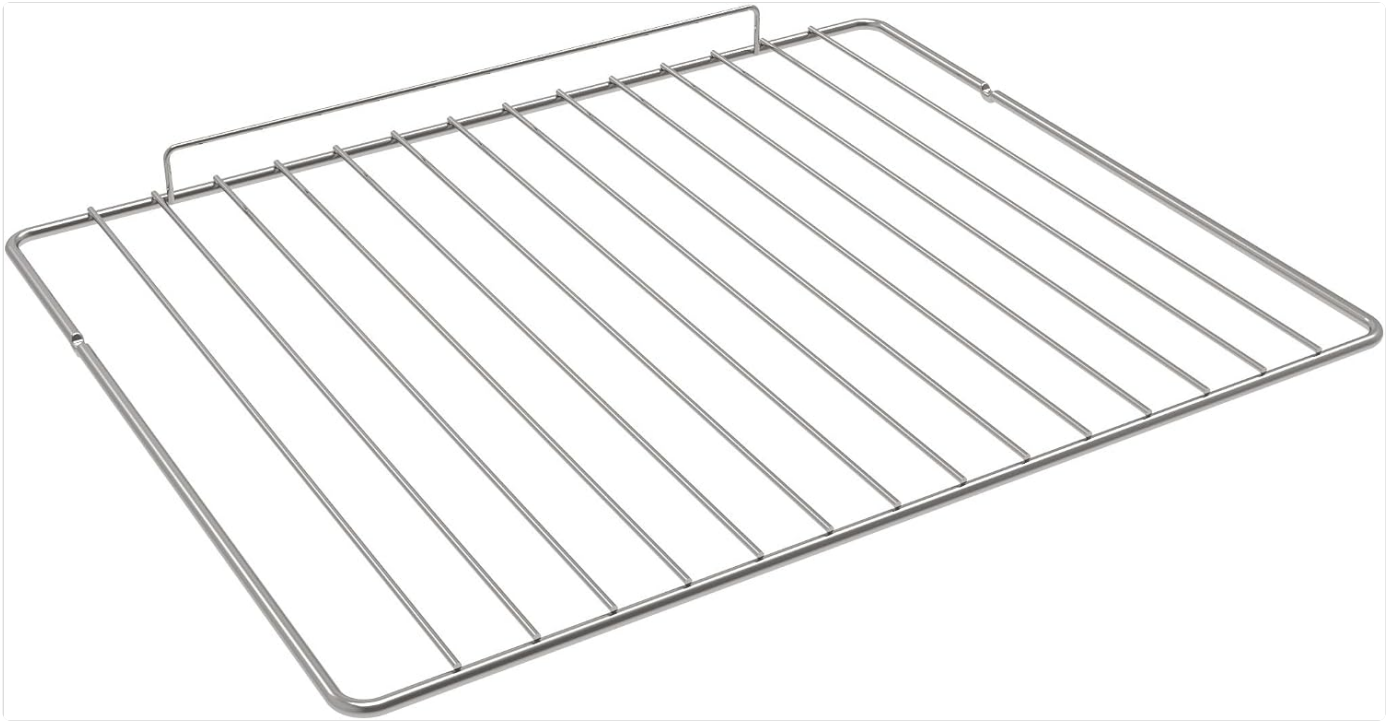


Figure 4: Wire Rack. This image displays the wire rack, ideal for grilling, roasting, or supporting bakeware.

Setup

Installation

The Candy FIDCP X625 L oven is designed for built-in installation. It requires a dedicated electrical connection. Refer to the installation diagram for precise dimensions and clearances.

1. Ensure the installation cavity dimensions are 59 cm (Height) x 56 cm (Width) x 56 cm (Depth).
2. Connect the oven to a suitable power supply (2400W). A qualified electrician should perform the electrical connection. The oven does not come with a plug and requires direct wiring.
3. Secure the oven into the cabinet using the provided screws.



Figure 5: Installed Oven (Closed). This image shows the Candy oven seamlessly integrated into a kitchen cabinet, demonstrating its flush fit and modern aesthetic when the door is closed.

Initial Use

Before first use, clean the oven interior and accessories. It is recommended to run the oven empty for approximately 30 minutes at maximum temperature to burn off any manufacturing residues and odors.

Operating Instructions

Your Candy FIDCP X625 L oven offers 8 cooking functions, including convection and radial fan assistance.

Setting the Time and Timer

The digital display allows you to set the current time and program cooking durations.

- **Setting Current Time:** Use the 'Timer Touch' controls to adjust the hour and minute.
- **Countdown Timer:** Set a countdown for cooking. An acoustic signal will sound when the time expires.
- **Automatic Shut-off Timer:** Program the oven to turn off automatically after a set duration.

Selecting Cooking Functions and Temperature

Use the Push&Pull knobs to select the desired cooking function and temperature.

- **Function Knob:** Rotate to choose from the 8 available cooking functions (e.g., Conventional, Convection, Grill, Defrost).
- **Temperature Knob:** Rotate to set the desired cooking temperature. The oven preheats quickly.
- **Oven Light:** A dedicated function on the selector allows you to turn on the interior light independently for inspection or cleaning.



Figure 6: Oven in Operation (Door Open). This image illustrates the oven during cooking, with the door slightly ajar, showcasing the internal light and a dish being prepared.



Figure 7: Oven in Operation (Door Closed). The oven is shown with the door closed, allowing the user to monitor the cooking process through the clear glass.

Maintenance and Cleaning

Aquactiva Cleaning System

The Aquactiva system provides a natural and effortless way to clean your oven.

1. Pour approximately 300 ml of water into the bottom of the oven cavity.
2. Select the Aquactiva cleaning function (if available, otherwise set to 90°C).
3. Run the cycle for 30 minutes. The steam generated will loosen grease and food residues.
4. Once the cycle is complete and the oven has cooled, wipe away the softened residues with a damp cloth.

General Cleaning

- Clean the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.
- The double glass door can be disassembled for thorough cleaning between the panes. Refer to the full manual for detailed instructions on door removal.
- Clean accessories (baking tray, wire rack) with warm soapy water.

Troubleshooting

If you encounter issues with your oven, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; incorrect function/temperature setting; timer not set.	Check power connection; ensure circuit breaker is on; verify function and temperature settings; set the timer.
Oven light not working.	Bulb is faulty or loose.	Replace the bulb (ensure oven is cool and unplugged).
Uneven cooking.	Incorrect rack position; overloaded oven; door not fully closed.	Adjust rack position; avoid overloading; ensure door is properly closed.
Oven produces smoke during first use.	Residues from manufacturing.	This is normal for initial use. Ensure good ventilation. It should subside after the first few uses.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Feature	Detail
Model Number	FIDCP X625 L
Brand	Candy
Type	Multifunction Electric Oven
Capacity	70 Liters
Dimensions (H x W x D)	59.5 x 59.5 x 56.8 cm
Integration Dimensions (H x W x D)	59 x 56 x 56 cm
Weight	28 kg
Power (Wattage)	2400 W
Cleaning System	Aquactiva (Hydrolytic)
Number of Functions	8
Door Type	Double Glass, Removable
Controls	Push&Pull Knobs, Timer Touch Display
Included Accessories	1 Baking Tray, 1 Wire Rack

Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Candy website. Keep your purchase receipt as proof of purchase for any warranty claims.
For technical assistance or spare parts, contact Candy customer service. Ensure you have your model number (FIDCP X625 L) and serial number ready when contacting support.

© 2025 Candy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question