T'nB HPCOLORBL

T'nB Color HPCOLORBL Bluetooth Wireless Speaker User Manual

Model: HPCOLORBL | Brand: T'nB

1. Introduction

Thank you for choosing the T'nB Color HPCOLORBL Bluetooth Wireless Speaker. This portable speaker is designed to provide high-quality audio with convenient wireless connectivity, an 8-hour battery life, and IPX4 splash resistance. This manual provides essential information for setting up, operating, and maintaining your speaker.



Front view of the T'nB Color Bluetooth Speaker in blue, showcasing its compact design.


2. Package Contents

Please check the package for the following items:

- T'nB Color HPCOLORBL Bluetooth Wireless Speaker
- Matching Hand Strap
- Micro USB Charging Cable

3. Product Overview

Familiarize yourself with the speaker's components and controls.

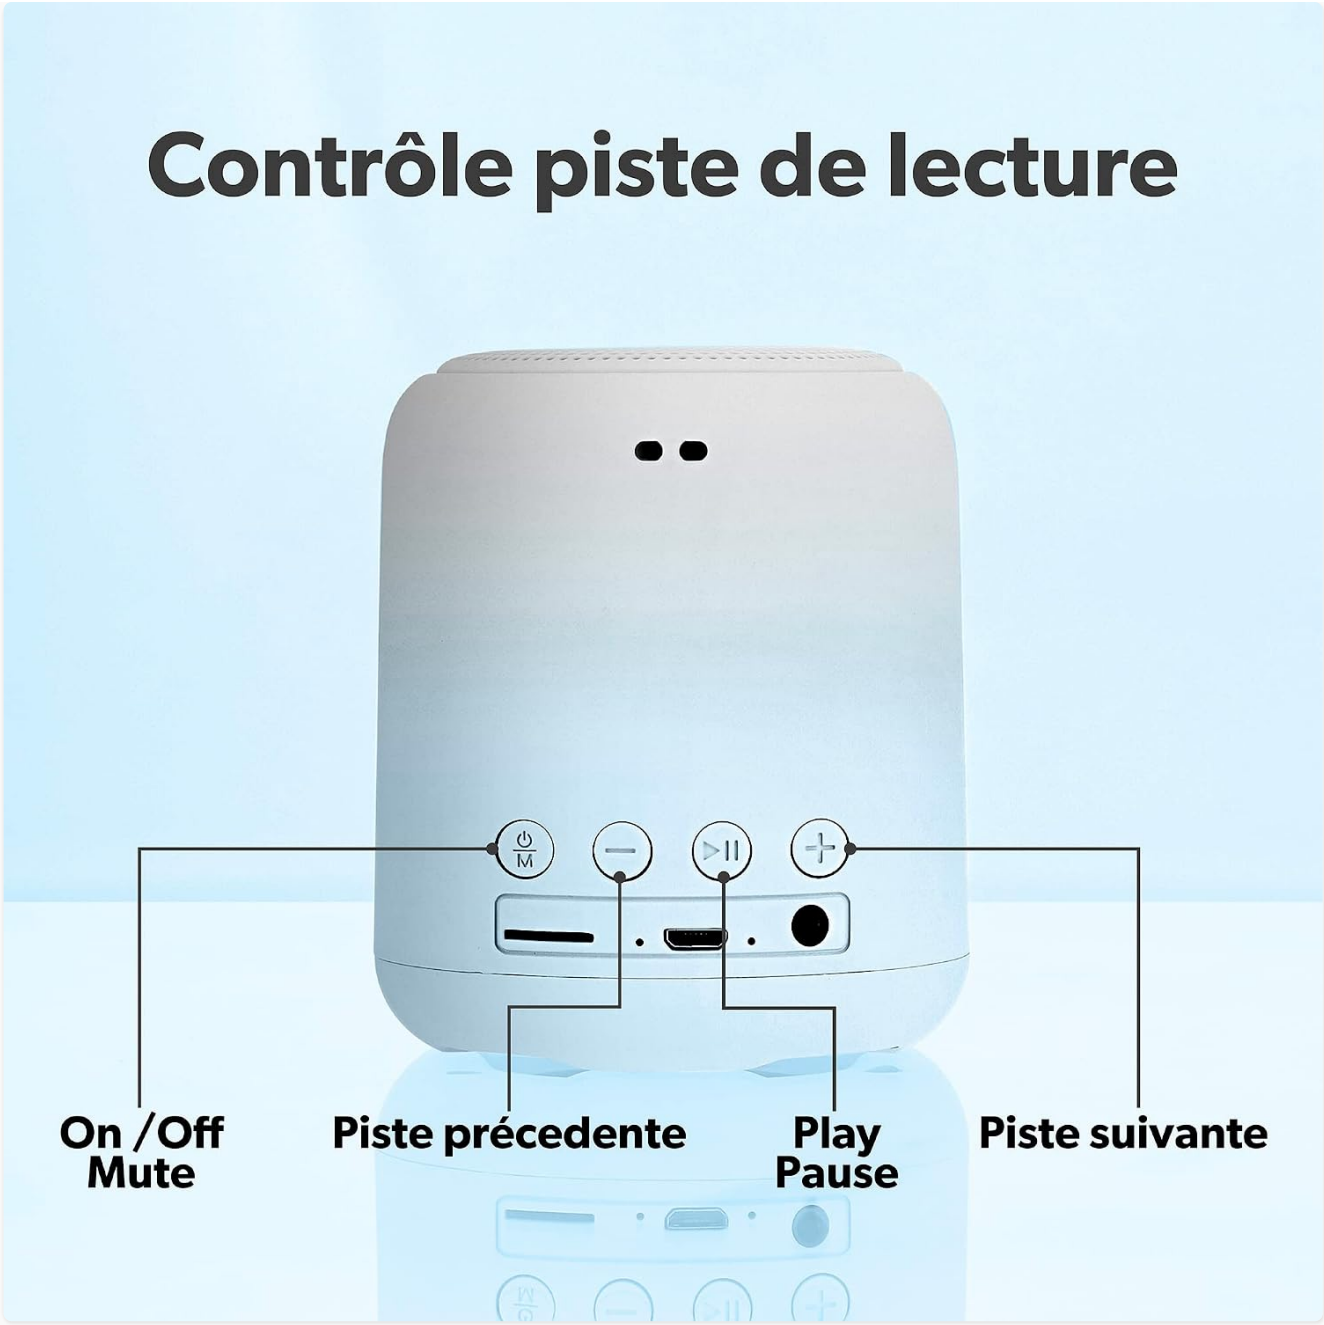

Detailed view of the speaker's control panel, labeling the On/Off/Mute, Previous Track, Play/Pause, and Next Track buttons.

Control Buttons:

- **Power Button (On/Off/Mute):** Press and hold to power on/off. Short press to mute/unmute.
- **Previous Track Button:** Short press to go to the previous track.
- **Play/Pause Button:** Short press to play or pause audio.
- **Next Track Button:** Short press to go to the next track.

Ports and Indicators:

- **Micro USB Port:** For charging the speaker.
- **Micro SD Card Slot:** For playing MP3 audio files from a Micro SD card (up to 32GB).
- **LED Indicator:** Shows power and Bluetooth status.
- **3.5mm Audio Jack:** For wired audio input.



An illustration of the various connectivity options available, including 3.5mm audio jack, FM Radio, Micro SD card input, and Bluetooth 5.0.

4. Setup

4.1 Charging the Speaker

1. Connect the Micro USB charging cable to the speaker's Micro USB port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off once fully charged.

A full charge provides up to 8 hours of playback time.



The T'nB Color speaker demonstrating its long-lasting 8-hour battery life, suitable for extended use.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button again until the LED indicator turns off and you hear an audible prompt.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash).
2. Enable Bluetooth on your audio device (smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "TNB COLOR" from the list.
4. Once paired, the LED indicator will stop flashing and remain solid, and you will hear a confirmation sound.



The T'nB Color speaker highlighting its wireless capability and Bluetooth 5.0 technology for stable connections.

4.4 TWS (True Wireless Stereo) Pairing

TWS technology allows you to connect two T'nB Color speakers for a stereo sound experience.

1. Ensure both T'nB Color speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Play/Pause button for a few seconds until you hear a pairing tone.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your audio device to the primary speaker via Bluetooth as described in section 4.3.



Depiction of two T'nB Color speakers paired together using TWS (True Wireless Stereo) technology for an enhanced stereo audio experience.

4.5 Micro SD Card Playback

1. Insert a Micro SD card (up to 32GB) with MP3 audio files into the Micro SD card slot.
2. The speaker will automatically switch to Micro SD card mode and begin playing audio.
3. Use the Play/Pause, Previous Track, and Next Track buttons to control playback.

4.6 FM Radio Mode

1. With the speaker powered on, short press the Power/Mode button to cycle through modes until you reach FM Radio mode.
2. In FM mode, press the Play/Pause button to automatically scan and save available radio stations.
3. Use the Previous Track and Next Track buttons to navigate between saved stations.

---

5. Operating Instructions

5.1 Audio Playback

- **Play/Pause:** Short press the Play/Pause button.
- **Next Track:** Short press the Next Track button.
- **Previous Track:** Short press the Previous Track button.

5.2 Volume Control

Volume is primarily controlled via your connected audio device. The speaker's buttons control track navigation and play/pause.

---

6. Maintenance

6.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

6.2 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

6.3 Battery Care

To prolong battery life, fully charge the speaker before first use and at least once every three months if not used regularly.



Rear view of the T'nB Color speaker, illustrating its IPX4 splash-proof design and revealing the charging port, Micro SD slot, and control buttons.

7. Troubleshooting

Issue	Possible Cause	Solution
Speaker does not turn on	Low battery	Charge the speaker fully.
Cannot pair via Bluetooth	Speaker not in pairing mode / Device Bluetooth off / Too far from device	Ensure speaker is in pairing mode, Bluetooth is enabled on your device, and devices are within 10 meters. Forget previous pairings on your device and try again.

Issue	Possible Cause	Solution
No sound	Volume too low / Speaker muted / Incorrect source mode	Increase volume on both speaker and device. Check if speaker is muted. Ensure correct input mode (Bluetooth, Micro SD, FM).
TWS pairing fails	Speakers already paired to a device / Incorrect pairing procedure	Ensure both speakers are disconnected from other devices. Follow TWS pairing instructions carefully.

8. Specifications

Feature	Detail
Model Number	HPCOLORBL
Brand	T'nB
Connectivity Technology	Bluetooth 5.0
Speaker Output Power	3W RMS (5W Max)
Audio Output Mode	Mono (Stereo with TWS pairing)
Frequency Response	Up to 20000 Hz
Battery	1 Lithium Ion (included), 1200 mAh
Battery Life	Up to 8 hours
Charging Port	Micro USB
Micro SD Card Support	Up to 32GB (MP3 playback)
Water Resistance	IPX4 (Splash-proof)
Dimensions	7 x 7 x 8.6 cm
Weight	32 g
Material	Plastic



A visual representation of the speaker's compact size, showing its dimensions of 8.6 cm in height and 7 cm in width.

9. Safety Information

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble or attempt to repair the speaker yourself. This will void the warranty.
- Keep the speaker away from water sources, despite its splash-proof rating, to prevent damage.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the battery and speaker responsibly according to local regulations.

10. Warranty and Support

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official T'nB website. Keep your proof of purchase for warranty claims.

© 2023 T'nB. All rights reserved.