**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## MEIXISUE MX-P2143-4A

# MEIXISUE MX-P2143-4A 4-Light Rustic Linear Chandelier Instruction Manual

Model: MX-P2143-4A

## Introduction

Thank you for purchasing the MEIXISUE MX-P2143-4A 4-Light Rustic Linear Chandelier. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

## Important Safety Information

To reduce the risk of electric shock, fire, or injury to persons, please follow these guidelines:

- Always turn off the power at the main circuit breaker or fuse box before beginning installation or maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- Use only UL-listed components and wiring as specified in this manual.
- Do not exceed the maximum wattage for bulbs (60W per bulb).
- Ensure all electrical connections are secure and properly insulated.
- This fixture is designed for indoor use only and is not water resistant.

## Package Contents

Verify that all components are present and undamaged before installation. If any parts are missing or damaged, contact customer support.

- Chandelier Frame with 4 Light Sockets
- Ceiling Canopy
- Mounting Hardware (screws, wire nuts, etc.)
- Adjustable Chains (2)
- Instruction Manual
- *Note: Light bulbs are not included.*




Figure 1: Overview of Chandelier Components and Dimensions.

## Setup and Installation

Follow these steps to install your chandelier. Professional installation is recommended if you are not familiar with electrical wiring.

1. **Turn off Power:** Before starting, ensure the power supply to the installation area is completely turned off at the circuit breaker.
2. **Prepare Mounting Location:** Securely attach the mounting bracket to the ceiling junction box. Ensure the junction box can support the weight of the fixture.
3. **Adjust Chain Length:** Determine the desired hanging height for your chandelier. Adjust the length of the chains by removing links as needed. Ensure both chains are of equal length to hang the fixture level.
4. **Connect Wiring:** Carefully connect the fixture's wires to the household electrical wires. Connect the black wire (live) from the fixture to the black wire from the ceiling, the white wire (neutral) from the fixture to the white wire from the ceiling, and the ground wire to the ground wire from the ceiling. Use wire nuts to secure connections and wrap with electrical tape for

added safety.

5. **Secure Canopy:** Tuck the wires into the junction box and raise the ceiling canopy to cover the junction box. Secure the canopy to the mounting bracket using the provided screws.
6. **Install Bulbs:** Screw four E26 base bulbs (not included) into the light sockets. Do not exceed 60 watts per bulb.




Figure 2: Detail of Lamp Holders and Construction.

## Operating Instructions

Once installed, your MEIXISUE chandelier is ready for use.

- **Power On:** Restore power to the fixture at the main circuit breaker.
- **Switch Operation:** The chandelier is controlled by a standard wall switch (not included). Flip the switch to turn the lights on or off.
- **Bulb Type:** This fixture uses E26 base bulbs. We recommend using LED bulbs for energy efficiency and longevity.
- **Dimmability:** This fixture is not dimmable. Using dimmable bulbs with a non-dimmable fixture may cause flickering or

damage.

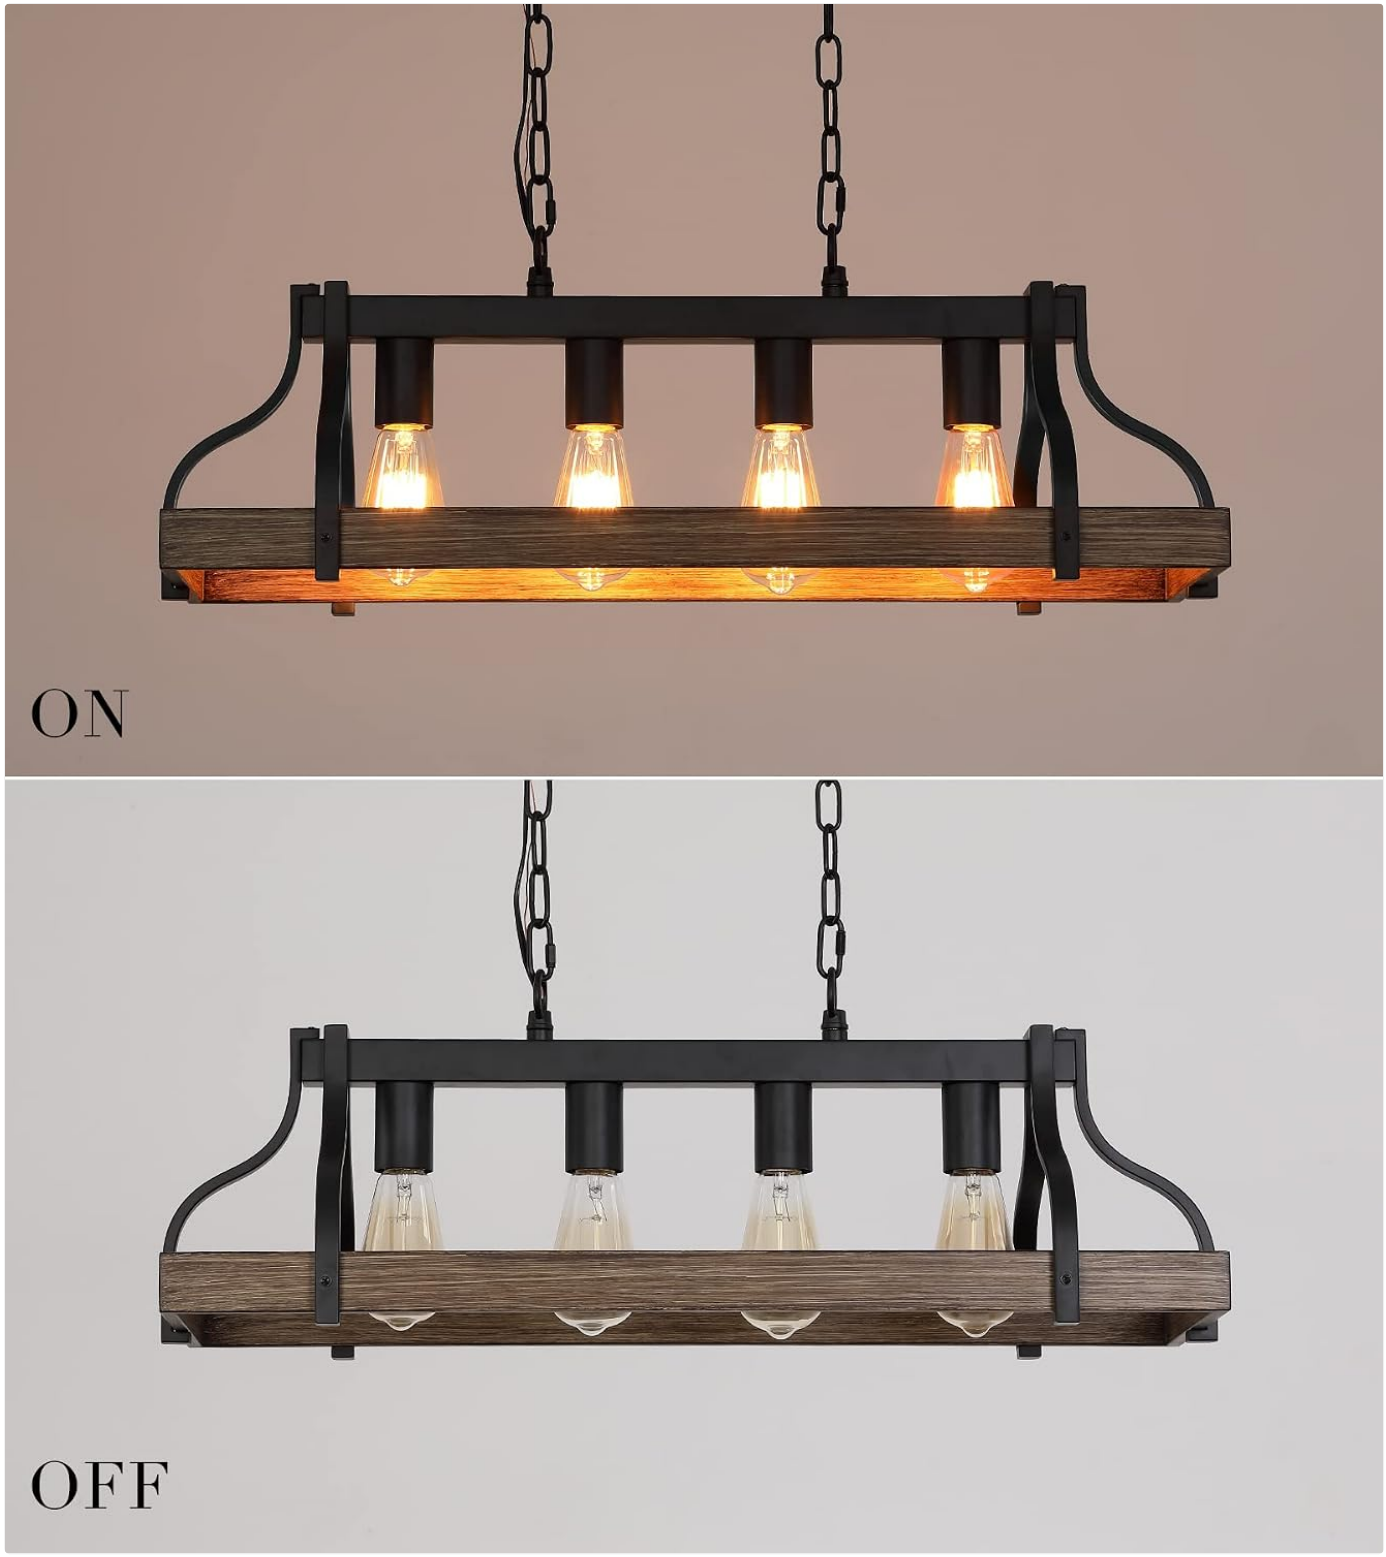



Figure 3: Chandelier in ON and OFF states.

## Maintenance

Regular maintenance ensures the longevity and optimal performance of your chandelier.

- **Cleaning:** Turn off the power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Ensure the power is off and bulbs have cooled before replacing. Unscrew the old bulb and screw in a new E26 base bulb, not exceeding 60 watts.

- **Inspections:** Periodically check all connections and mounting hardware to ensure they remain secure.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Light does not turn on. | No power supply.<br>Loose wiring connection.<br>Faulty bulb. | Check circuit breaker.<br>Ensure all wires are securely connected (power off first).<br>Replace bulb. |
| Flickering lights. | Incorrect bulb type.<br>Loose connection. | Ensure non-dimmable bulbs are used.<br>Check wiring connections (power off first). |
| Fixture hangs unevenly. | Unequal chain length. | Adjust chain links to ensure equal length on both sides. |

## Specifications

| Feature | Detail |
|---|---|
| Model Number | MX-P2143-4A |
| Brand | MEIXISUE |
| Product Dimensions (L x W x H) | 71.9 cm x 26.9 cm x 141.7 cm (28.3" x 10.6" x 55.8") |
| Item Weight | 3.99 kg (8.8 Pounds) |
| Material | Metal with Wood Finish |
| Style | Rustic, Farmhouse |
| Number of Lights | 4 |
| Bulb Base | E26 |
| Max Wattage per Bulb | 60 Watts |
| Voltage | 110 Volts (AC) |
| Dimmable | No |
| Indoor/Outdoor Usage | Indoor Use Only |
| Certification | UL Listed |
| Assembly Required | Yes |

## Warranty Information

This MEIXISUE lighting fixture comes with a **2-year limited product warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized modifications. Please retain your proof of purchase for warranty claims.

## Customer Support

If you have any questions, require assistance with installation, or encounter any issues not covered in this manual, please contact MEIXISUE customer support. Refer to your purchase documentation for specific contact details or visit the official MEIXISUE website.


## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

**Open the live page**

**https://manuals.plus/asin/B0B7J3NSSZ**

More documents and user manuals: **https://manuals.plus/**