Glade 333655

Glade Aromatherapy Cool Mist Diffuser User Manual

Model: 333655

Introduction

The Glade Aromatherapy Cool Mist Diffuser is designed to enhance your home environment with a dual blend of essential oil-infused fragrance. This device allows you to customize your experience by adjusting fragrance intensity and light settings, providing a balanced and pleasant atmosphere. The "Uplift Your Day" scent features a blend of Brazilian Orange and North African Neroli blossom.

This diffuser is crafted without parabens, phthalates, nitro musks, artificial colors, or dyes, focusing on a pure fragrance experience. It is designed for ease of use with pre-blended, one-click refills and is powered via a standard USB connection, offering flexibility for placement in various locations.

Safety Information

CAUTION: EYE IRRITANT. Contains Fragrance Oils. Avoid contact with eyes.

FIRST AID: EYES: Immediately rinse eyes with plenty of water for at least 15 minutes. If irritation persists, get medical attention.

IF SWALLOWED: Call a physician or Poison Control Center immediately.

KEEP OUT OF REACH OF CHILDREN AND PETS.

When using electrical appliances, basic precautions should always be followed. Use with a properly functioning USB adapter/power source (5V). To reduce the risk of injury, close supervision is necessary when a product is used near children. Do not put fingers or hands into the product. Do not immerse in water. Use only the product recommended refills in this device. Keep face and fingers away from fragrance mist outlet; do not touch metal plate.

For detailed safety information, please refer to the official Safety Information PDF: Safety Information (PDF).

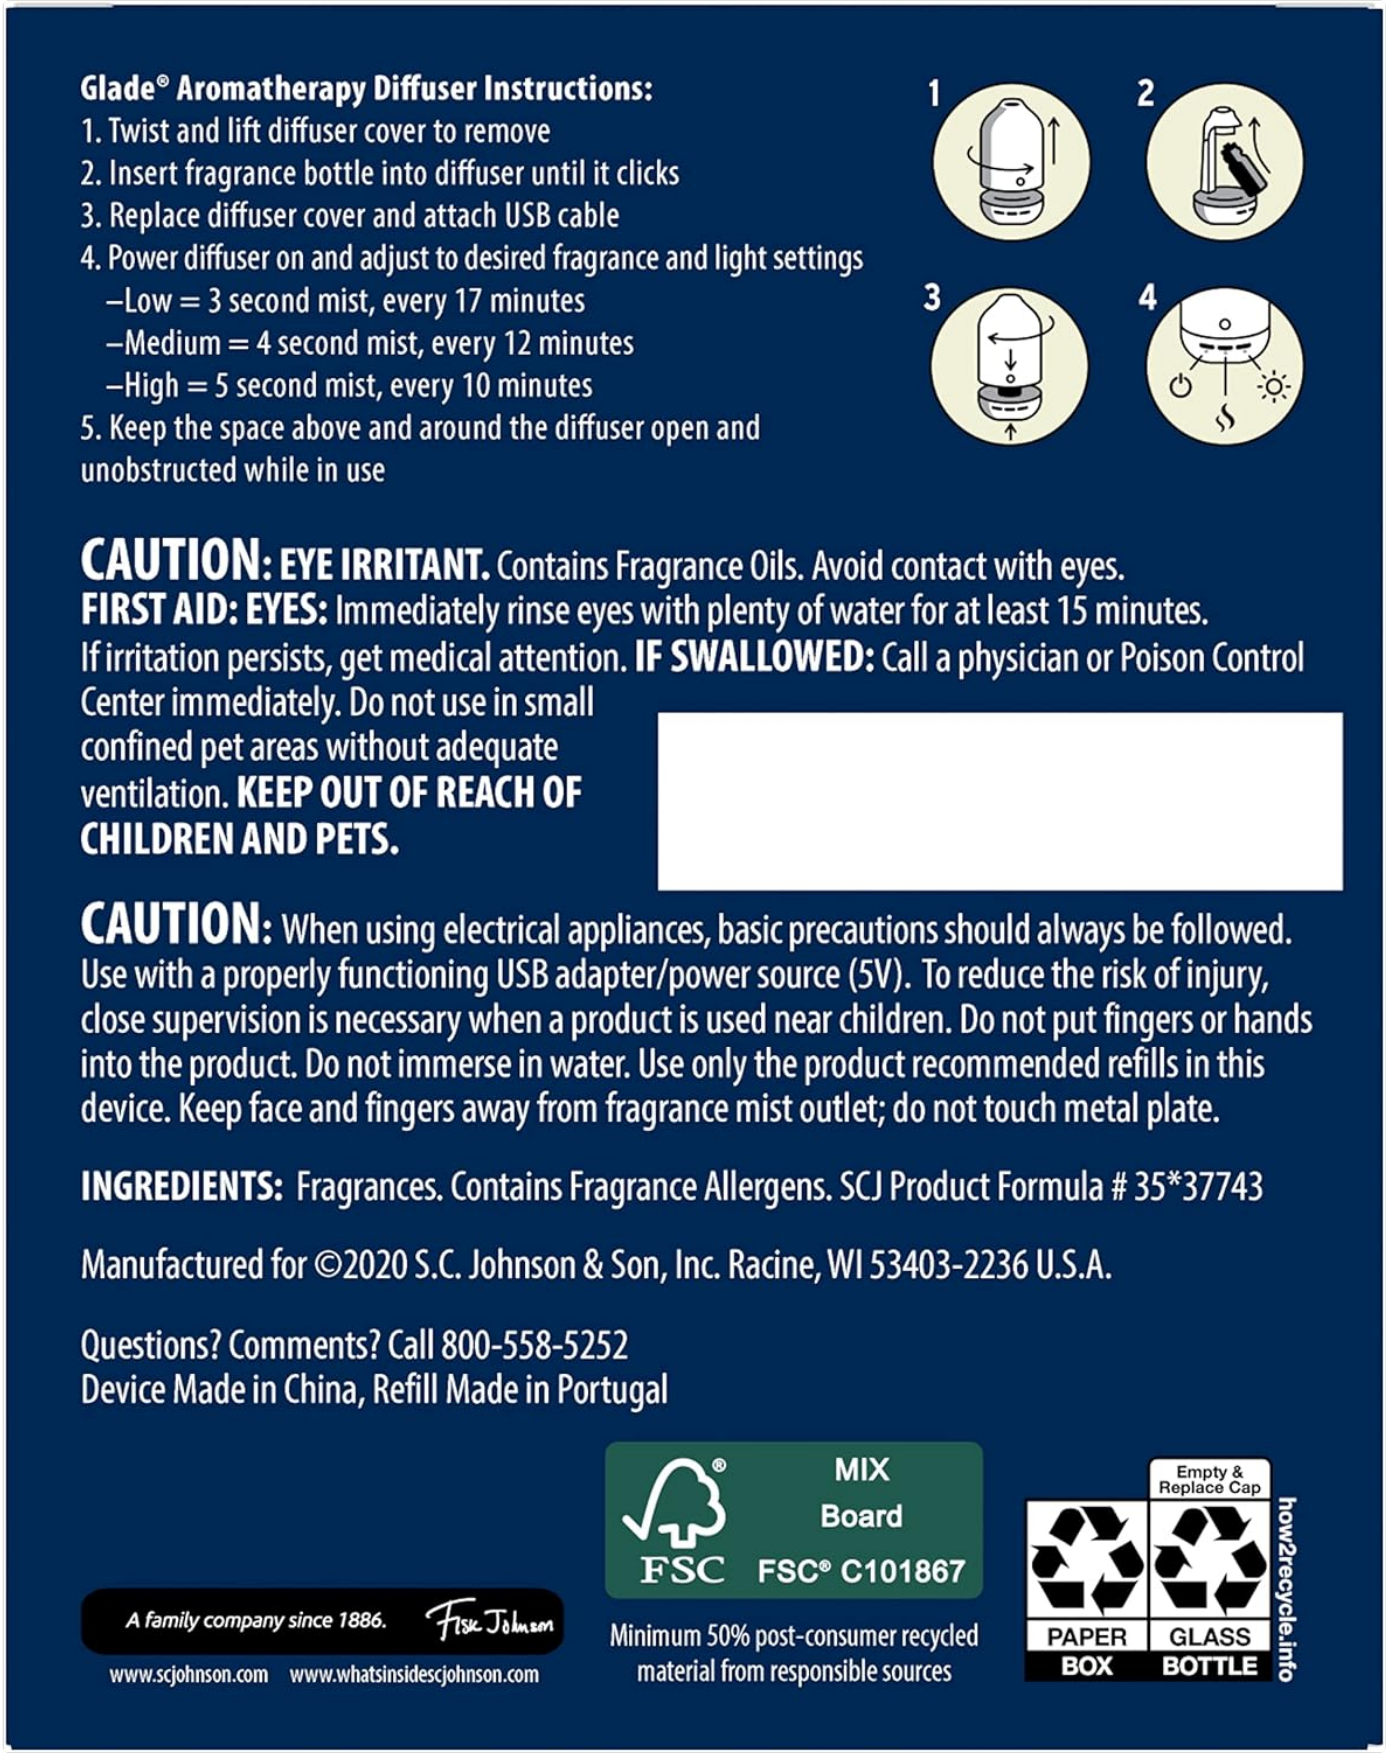


Image: Back of product packaging with detailed instructions and safety warnings.

Package Contents

- 1 Glade Aromatherapy Cool Mist Diffuser
- 1 Glade Aromatherapy Essential Oil Refill (Uplift Your Day scent, 0.56 Fl Oz)
- 1 USB Cable



Image: The Glade Aromatherapy Cool Mist Diffuser, including the diffuser unit and a bottle of essential oil refill.

Setup

1. **Remove Cover:** Twist and lift the diffuser cover to remove it from the base.
2. **Insert Refill:** Insert the fragrance bottle into the diffuser base until it clicks securely into place.
3. **Replace Cover:** Carefully replace the diffuser cover, ensuring it is properly aligned.

4. **Connect Power:** Attach the USB cable to the diffuser and connect it to any standard USB power outlet, such as a power bank, laptop, or a USB wall adapter (5V, not included).



Image: Visual guide for inserting the essential oil refill into the diffuser.



Image: The diffuser connected via its USB cable, demonstrating its power flexibility.

Operating Instructions

Once set up, you can power on the diffuser and adjust its settings using the controls located on the base.

Fragrance Intensity Settings:

The diffuser offers three fragrance intensity settings. Tap the fragrance button to cycle through them:

- **Low:** 3-second mist every 17 minutes.
- **Medium:** 4-second mist every 12 minutes.
- **High:** 5-second mist every 10 minutes.

Light Settings:

The diffuser features six light settings, including different colors and brightness levels. Tap the light button to adjust the ambiance.



Image: Control panel of the diffuser, showing buttons for power, fragrance, and light.



Image: Examples of the diffuser's adjustable light settings.

Ensure the space above and around the diffuser remains open and unobstructed while in use to allow for proper mist dispersion.

Maintenance

The Glade Aromatherapy Diffuser is designed for low maintenance. The one-click refills are pre-blended, eliminating the need for mixing or measuring essential oils.

- **Refill Replacement:** Replace the fragrance refill when empty. The dual-wick technology ensures consistent performance for up to 60 days on the low setting.
- **Cleaning:** Do not immerse the device in water. For cleaning, gently wipe the exterior with a soft, dry cloth.
- **Refill Compatibility:** Only use Glade Aromatherapy refills specifically designed for this device to ensure proper function and safety.



Image: The diffuser in a home setting, emphasizing its long-lasting fragrance.

Troubleshooting

Problem	Possible Cause	Solution
Diffuser stops working or light goes out after a period.	The unit has an automatic cycle. It operates for approximately 8 hours and then shuts down for 16 hours.	This is normal operation. The diffuser will automatically resume operation at the same time it was initially started, 24 hours later. No action is required.
No mist or very faint mist.	Refill bottle is empty or not properly inserted. Obstruction around the mist outlet.	Ensure the fragrance bottle is securely clicked into place. Replace the refill if empty. Clear any obstructions from the mist outlet.
No power/unit does not turn on.	USB cable not properly connected or power source issue.	Check that the USB cable is firmly connected to both the diffuser and the power source. Try a different USB port or power adapter.

Specifications

Feature	Detail
Brand	Glade
Model Number	333655
Manufacturer	SC Johnson
Scent Included	Uplift Your Day (Orange & Neroli)
Refill Volume	0.56 Fl Oz
Material	Plastic
Color	Clear (Diffuser unit is white/light-colored)
Power Source	USB (5V adapter required, not included)
Fragrance Duration	Up to 60 days (on low setting)
Package Dimensions	5.75 x 4.41 x 3.46 inches
Item Weight	9.52 ounces

Warranty & Support

For questions, comments, or support regarding your Glade Aromatherapy Cool Mist Diffuser, please contact SC Johnson directly.
Customer Service: 800-558-5252
Additional resources, including the Safety Information PDF, are available online.

© 2024 Glade. All rights reserved. Manufactured by SC Johnson.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question