REOLINK Reolink Video Doorbell WiFi

REOLINK Video Doorbell WiFi Camera Instruction Manual

Model: Reolink Video Doorbell WiFi

Introduction and Overview

The REOLINK Video Doorbell WiFi Camera is a wired 2K outdoor security device designed to provide clear, wide-angle views of your front door. It supports both 5GHz and 2.4GHz WiFi for stable connectivity and features smart detection capabilities to identify people, vehicles, and packages. With local storage options, you can record and review footage without a subscription.



Image: REOLINK Video Doorbell WiFi Camera and included Chime.

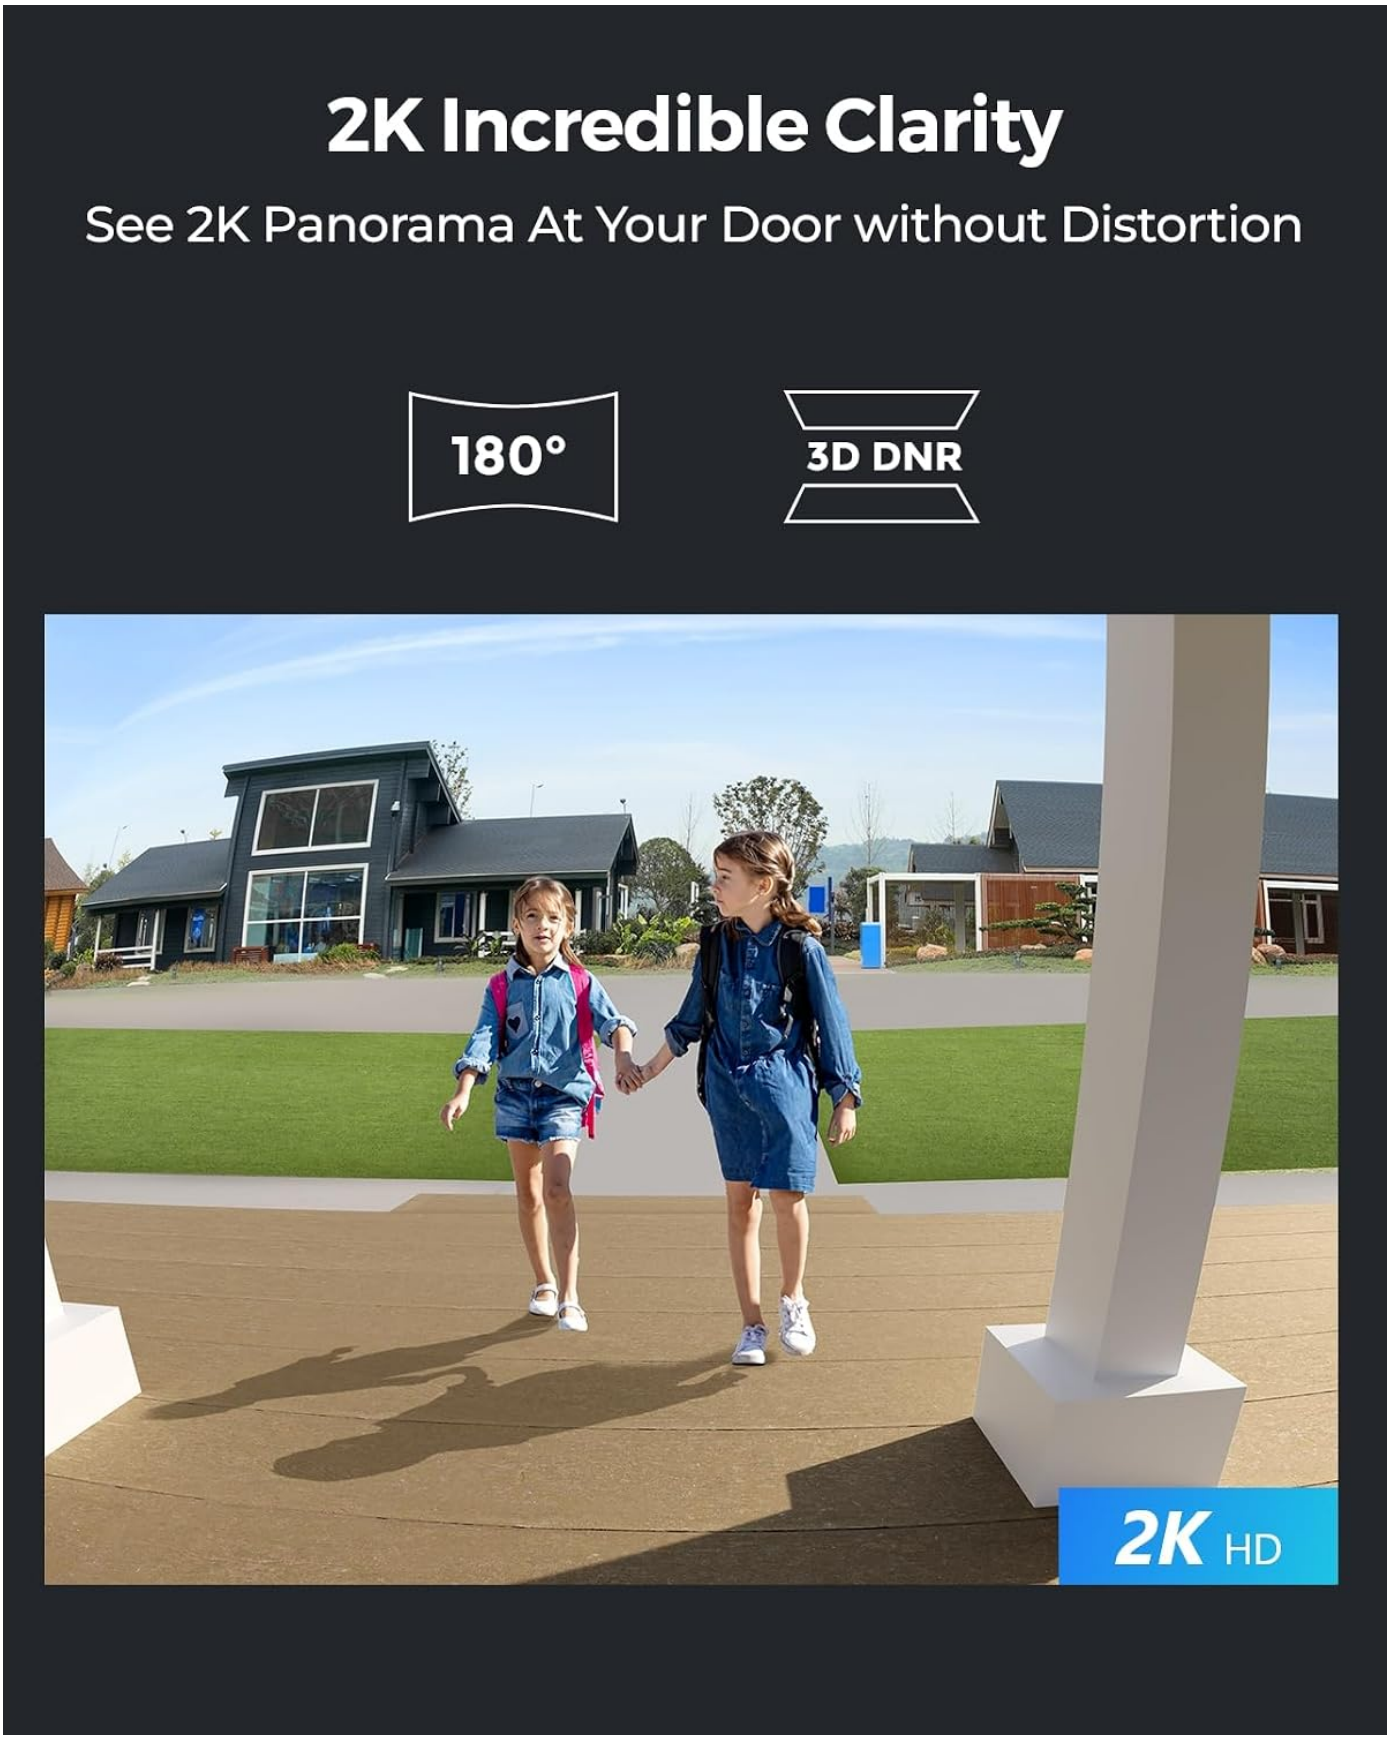


Image: Demonstrates 2K Super HD clarity with 180-degree wide view and 3D DNR technology for clear images.

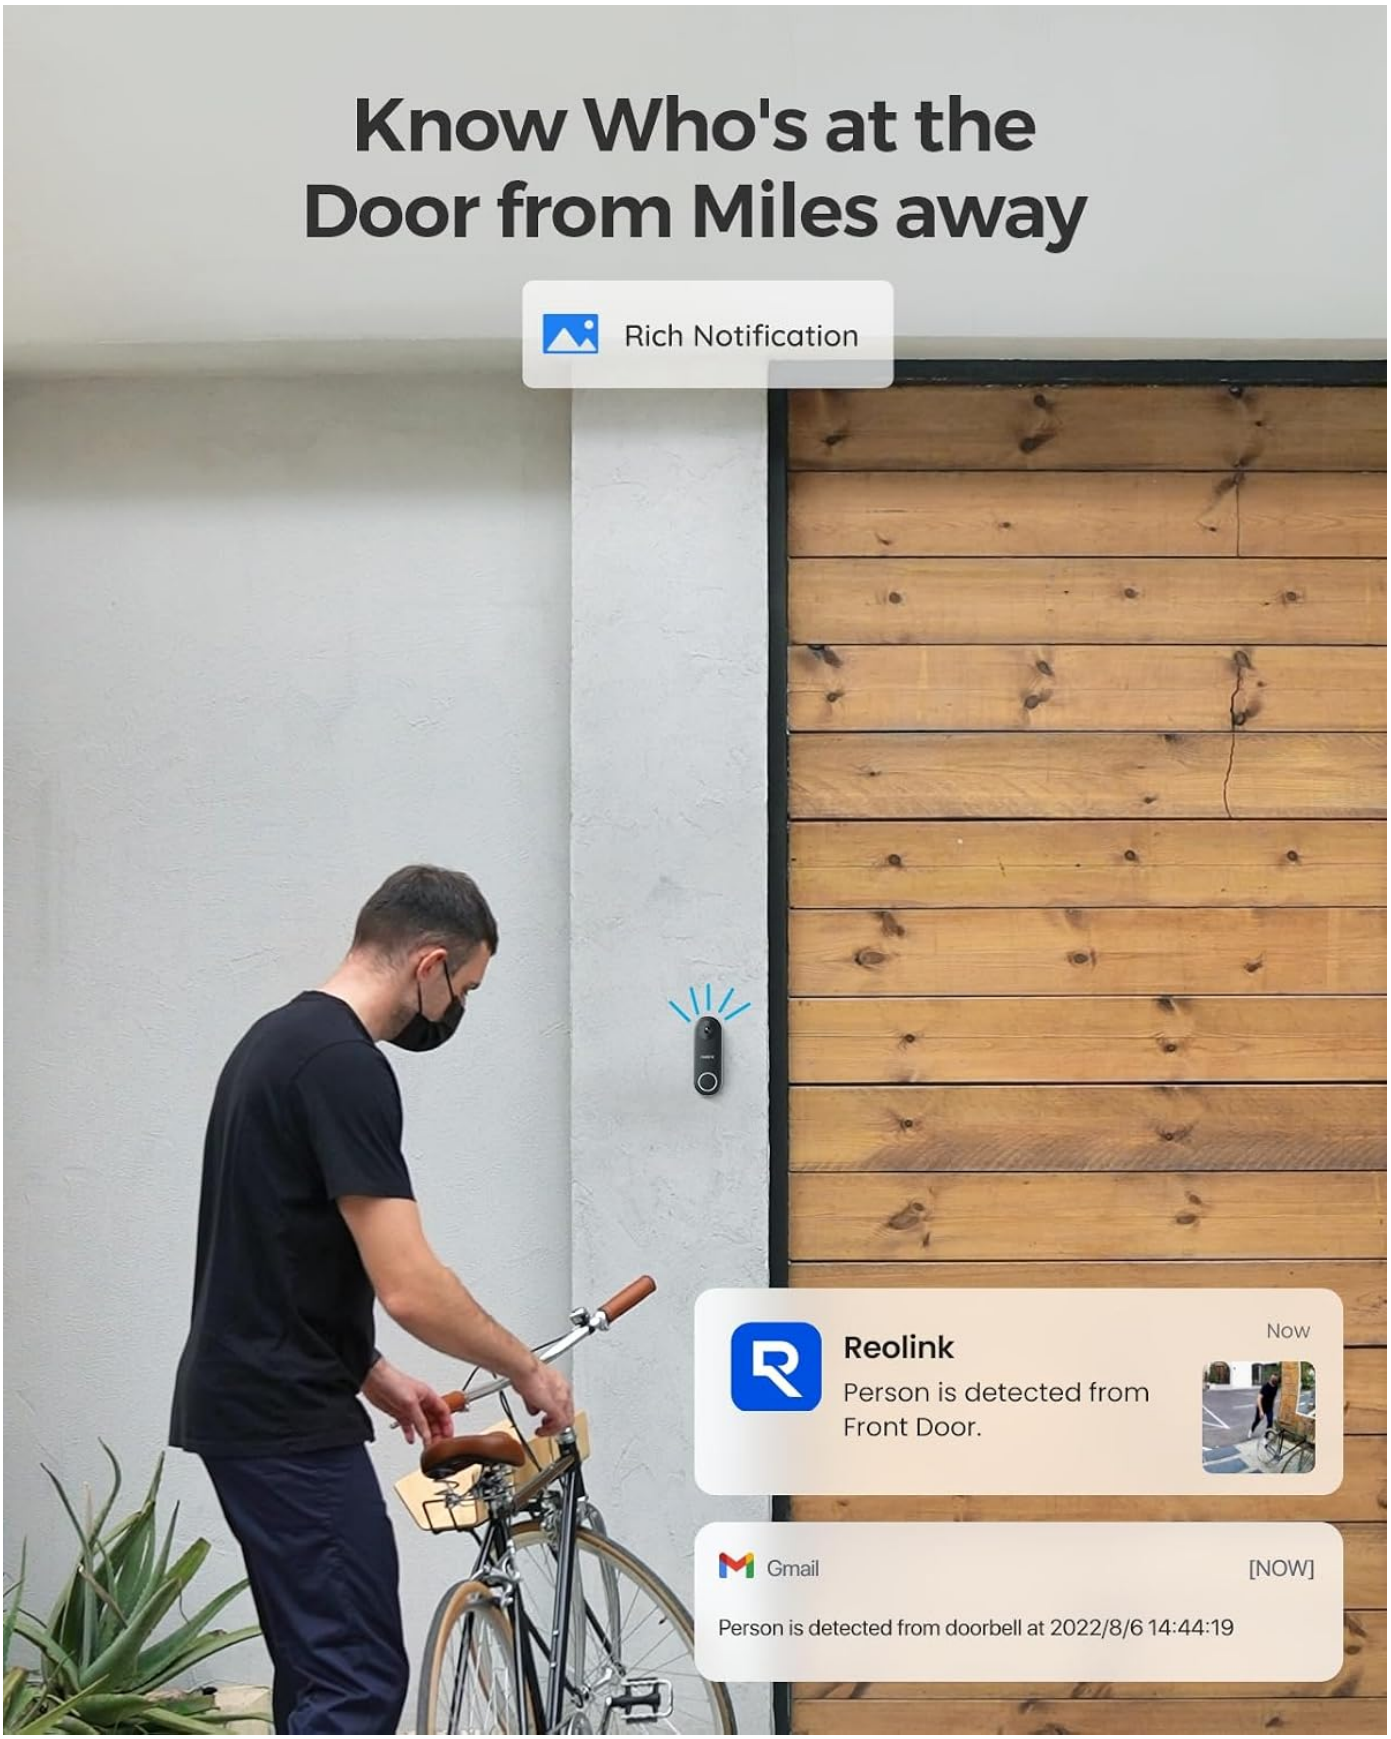


Image: A person receiving a notification on their smartphone, indicating the doorbell's ability to alert users remotely.

Video: Official REOLINK video showcasing the 2K WiFi Video Doorbell Camera's features and capabilities.

What's in the Box

Your REOLINK Video Doorbell WiFi Camera package includes the following components:

- REOLINK Video Doorbell WiFi Camera

- REOLINK Chime V2
- Mounting Plate
- 15° Wedge Kit
- Power Adapter (for hardwired installation)
- Extension Cords
- Jumper Cables
- Mounting Hole Template
- Pack of Screws and Anchors
- Quick Start Guide



Image: Illustrates multiple storage options including compatibility with Reolink NVR and Micro SD card (up to 256GB, not included).

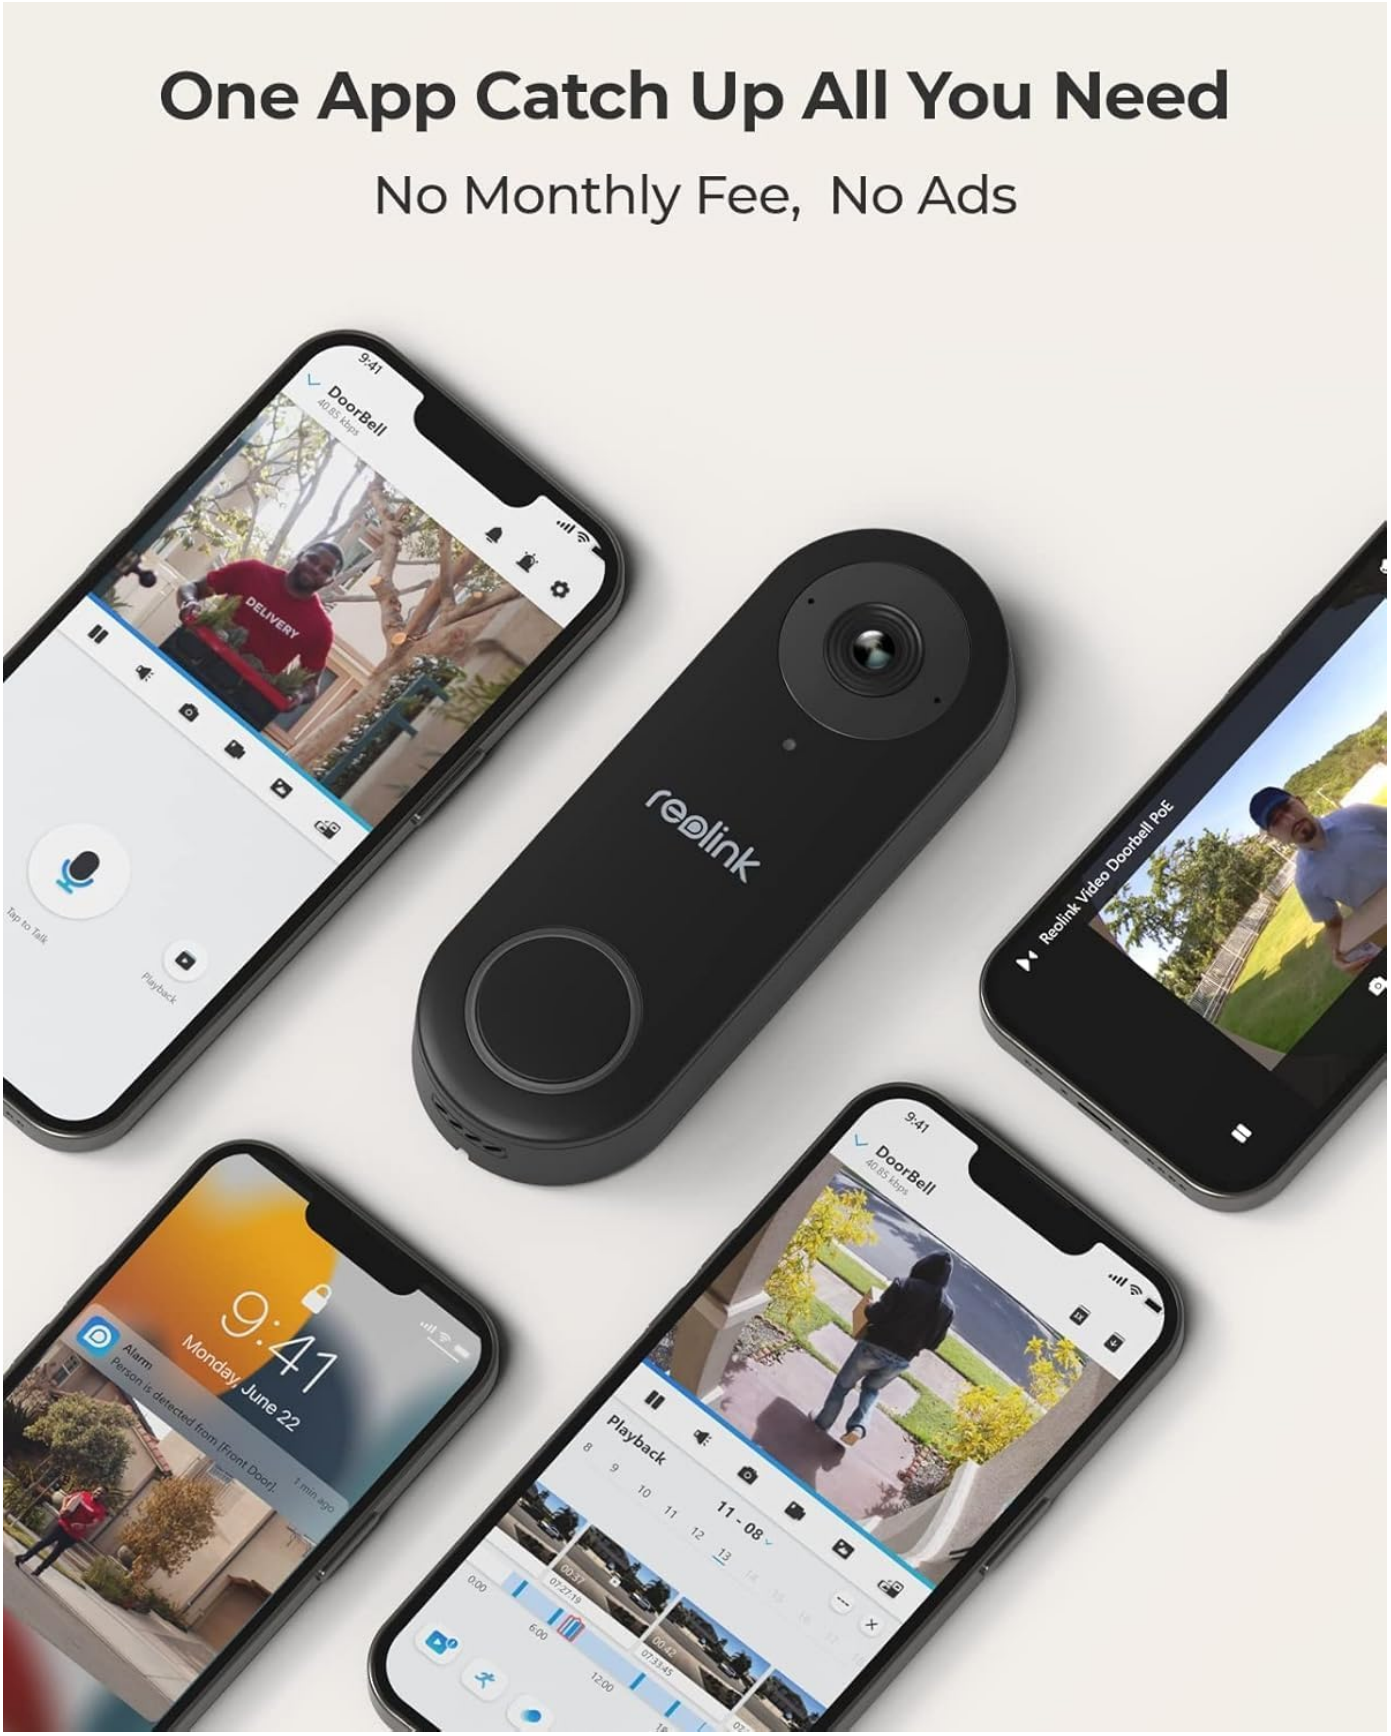


Image: The included Chime V2, designed to be plugged into any electrical socket to alert you when visitors press the doorbell.

Setup and Installation

The REOLINK Video Doorbell is designed for hardwired installation, connecting to your existing doorbell wiring (12-24VAC 50/60Hz, DC 24V). It is highly recommended to use it with Reolink Chime, Reolink NVR System, and other Reolink accessories for full connectivity and compatibility.

Installation Steps:

1. **Prepare for Installation:** Turn off power to your existing doorbell system at the circuit breaker.
2. **Remove Old Doorbell:** Carefully remove your existing doorbell button.
3. **Find the Place to Drill Holes:** Use the provided mounting hole template to mark the drill positions on your wall.
4. **Install the Wedge (Optional):** If needed for optimal viewing angle (180° wide view), install the 15° wedge kit first.
5. **Wire Up the Video Doorbell:** Connect the existing power cables to the terminals on the back of the Reolink Video Doorbell. Ensure connections are secure.
6. **Fix Video Doorbell to Mounting Plate:** Securely attach the doorbell to the mounting plate.
7. **Power On:** Restore power to your doorbell system at the circuit breaker. The doorbell should power on.
8. **Add to App:** Download the Reolink App from your smartphone's app store. Follow the in-app instructions to add your new doorbell by scanning the QR code on the device.



Image: Step 1 of installation, showing how to use the template to mark drill holes.

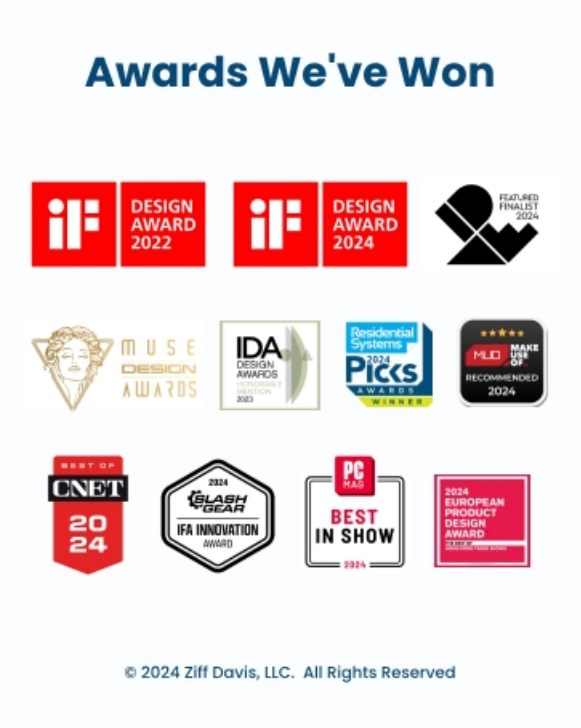


Image: Step 2 of installation, demonstrating how to install the wedge for angled mounting.



Image: Step 3 of installation, showing how to connect the power cables to the doorbell terminals.



Image: Step 4 of installation, illustrating how to attach the doorbell to its mounting plate.



Image: The doorbell installed on a wall, highlighting its 2.4/5GHz Dual-Band WiFi capability and waterproof design.

Operating Instructions

Manage your REOLINK Video Doorbell using the intuitive Reolink App, available for smartphones. The app provides live viewing, two-way audio, smart alerts, and video playback.

Key Features:

- **Live View:** Access real-time video feed from your doorbell anytime, anywhere.
- **Two-Way Talk:** Communicate with visitors using the built-in microphone and speaker. You can also preset voice messages or automatic replies.
- **Smart Detection:** Receive real-time notifications for person, vehicle, and package detection, reducing false alarms.
- **Customizable Detection Zones:** Define specific areas where you want to receive motion alerts, ignoring irrelevant activity.
- **Rich Notifications:** Get image notifications directly to your phone (up to 25 per day with the free plan).
- **Video Playback:** Review recorded events with easy-to-navigate timelines and filters for specific event types.
- **Chime V2:** Plug the included chime into any electrical socket to hear alerts inside your home. Choose from 10 tunes and adjust volume.

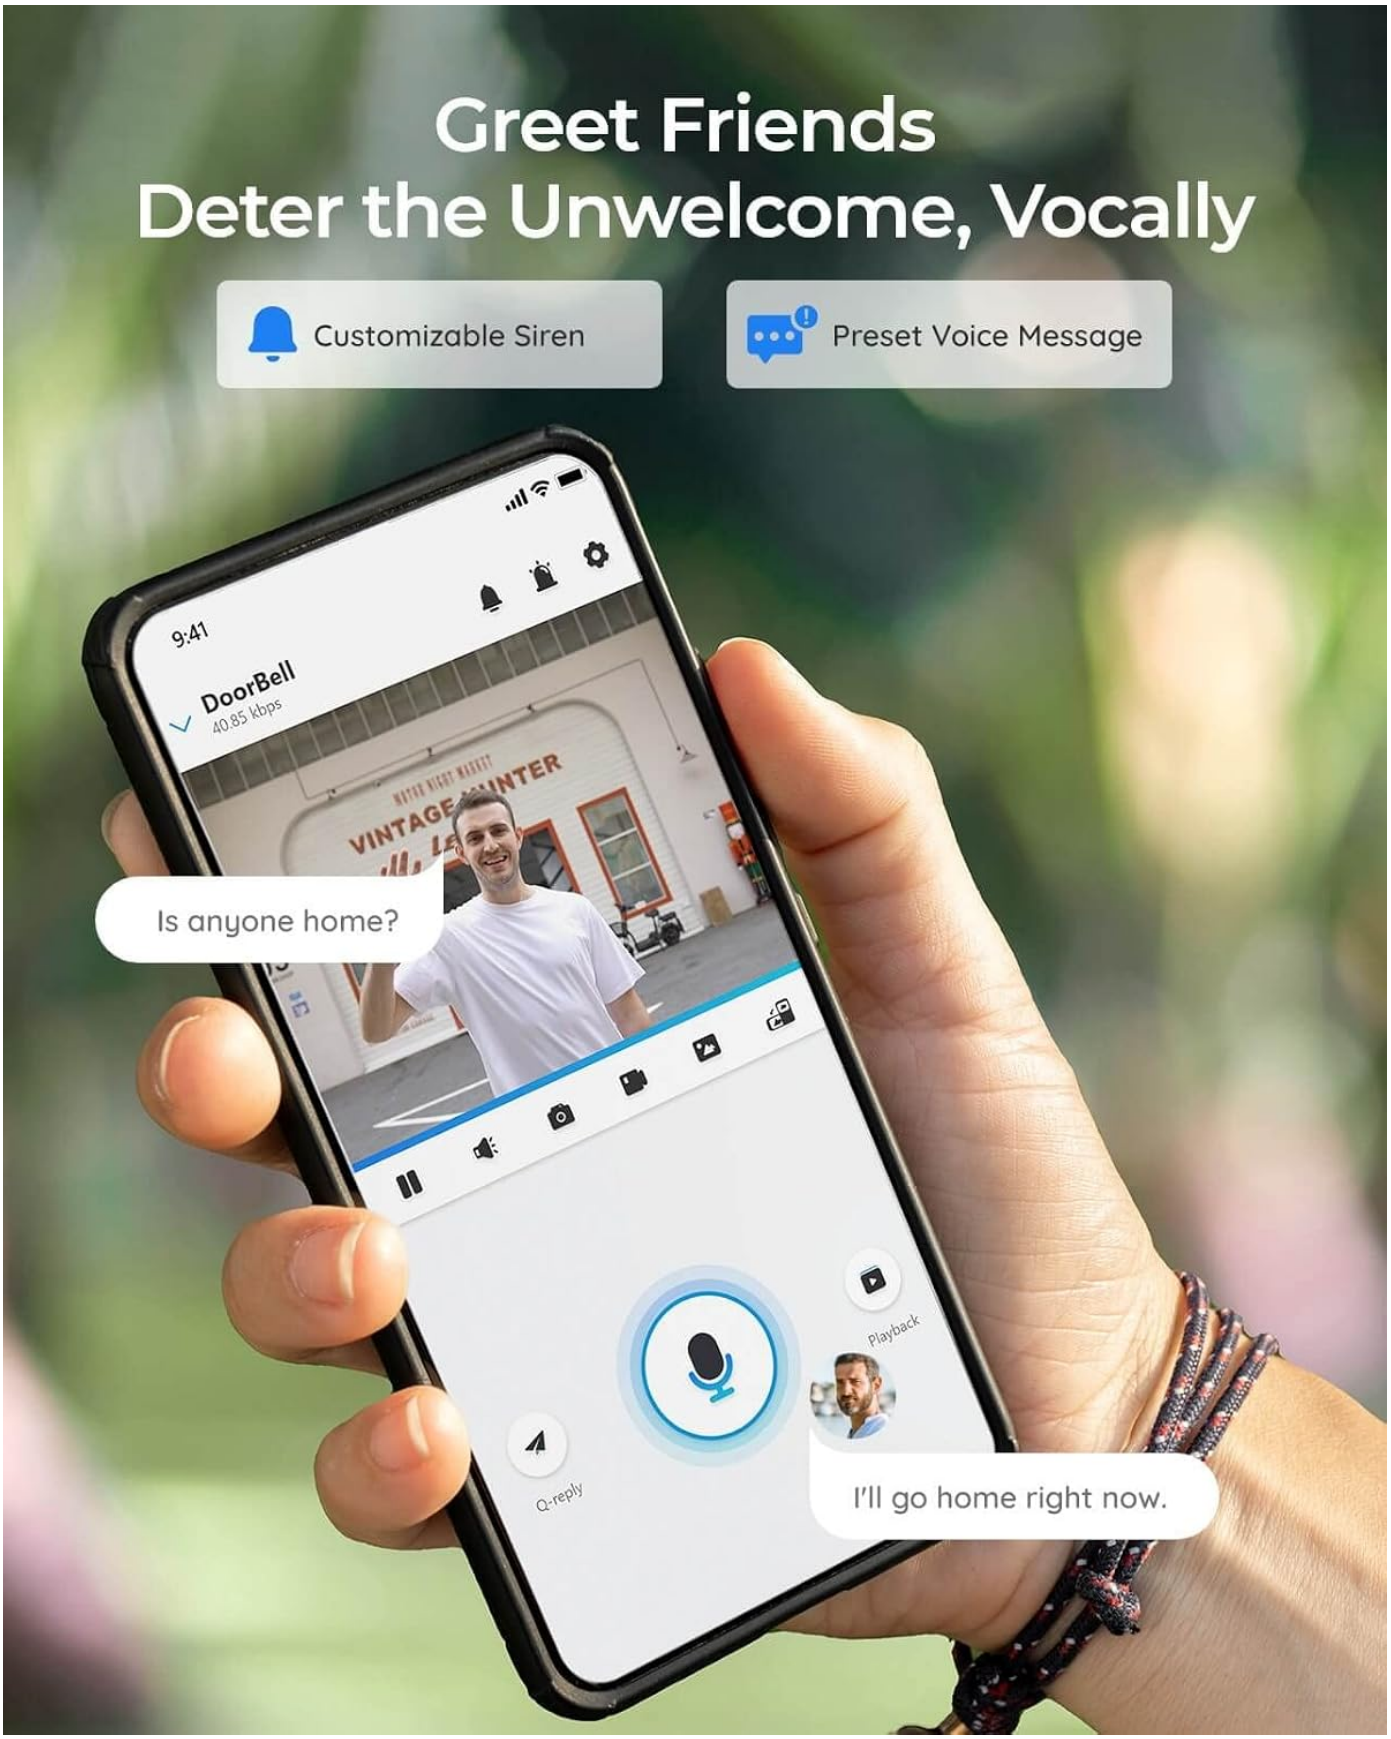


Image: A person interacting with a visitor via the Reolink app, demonstrating two-way talk and preset voice messages.

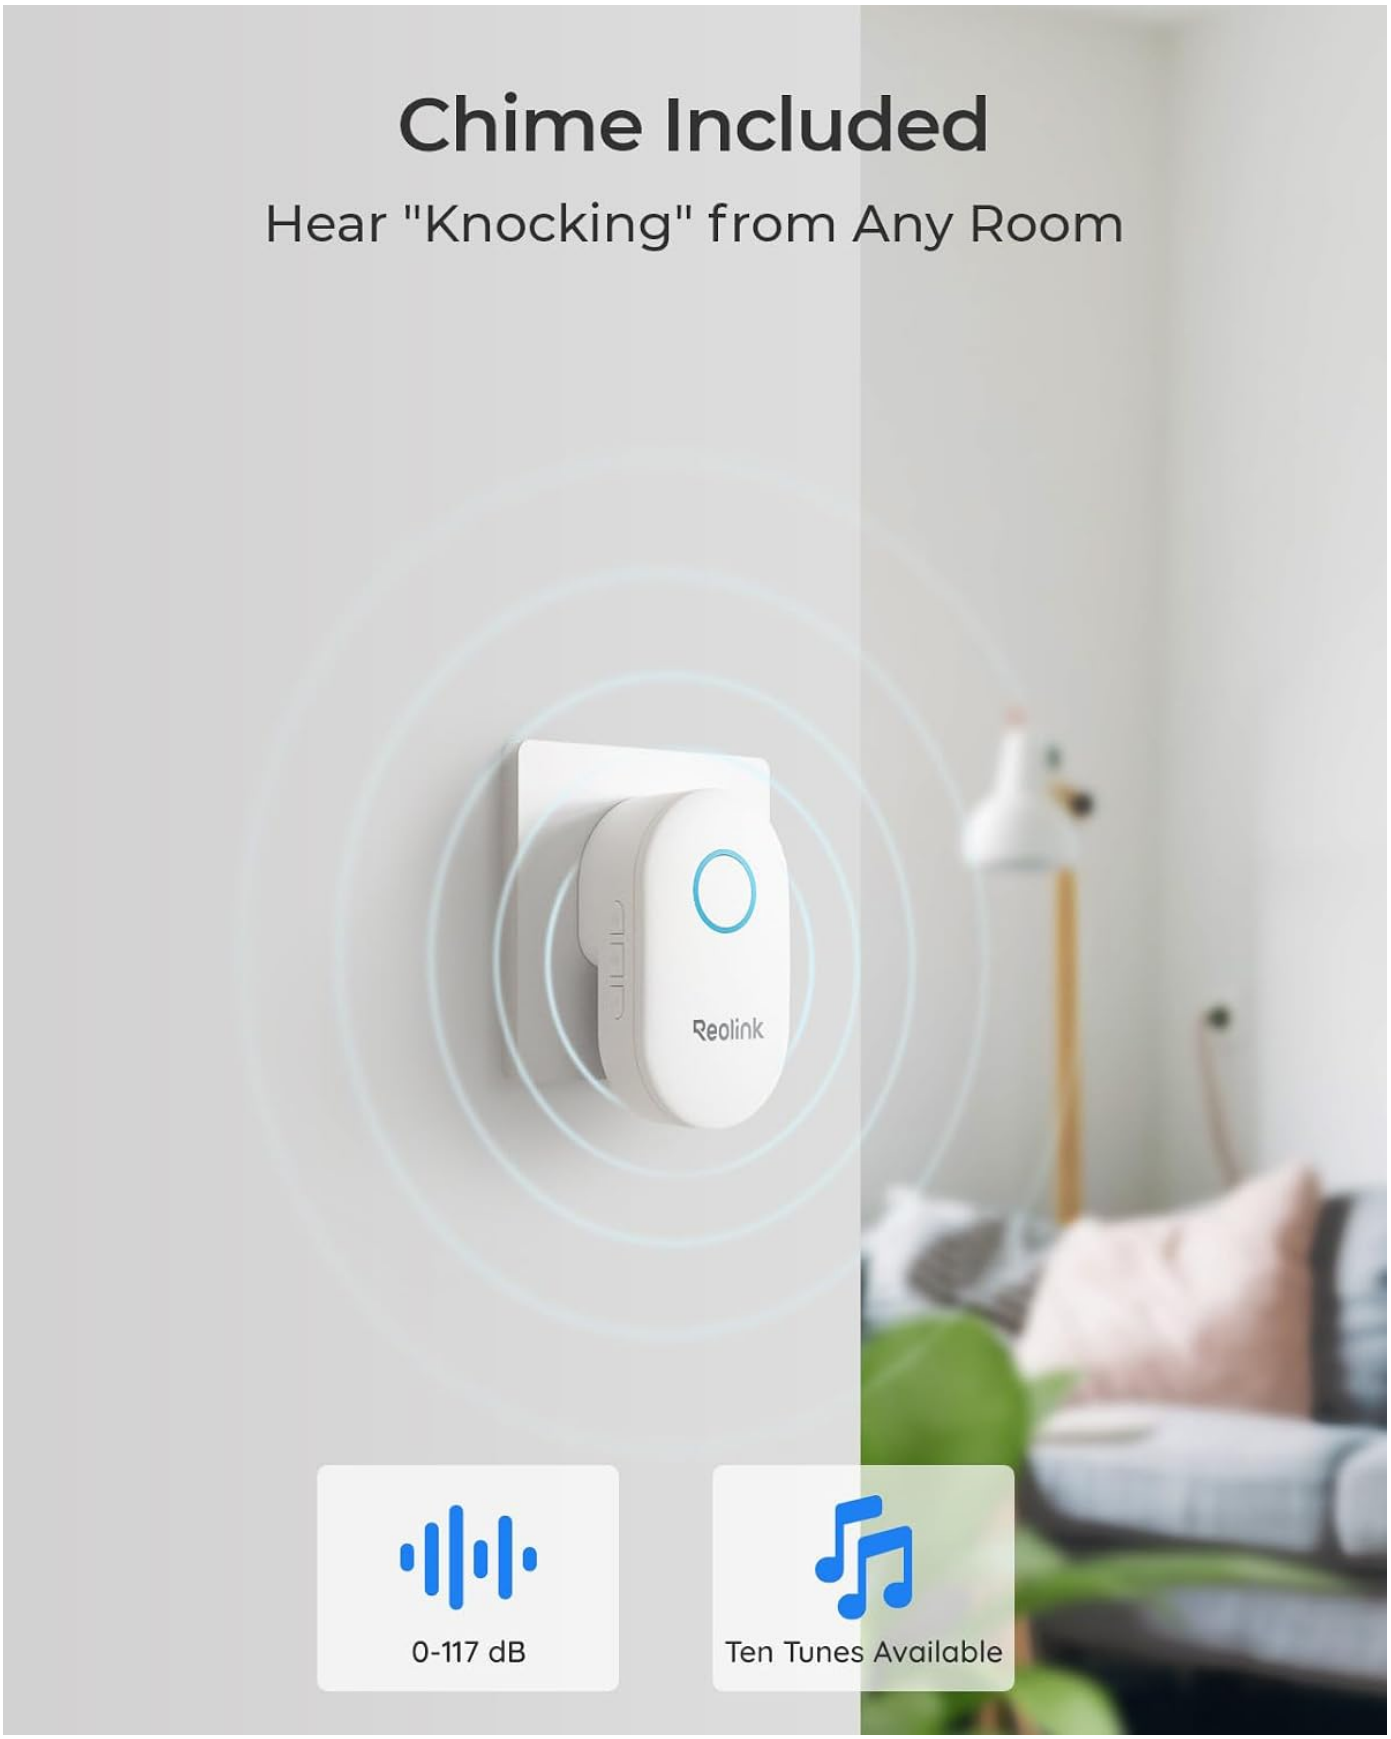


Image: Various smartphones showing the Reolink app interface, emphasizing the

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question