ZOOAOXO V200

ZOOAOXO 64GB Voice Recorder User Manual


Model: V200

1. Introduction

Thank you for choosing the ZOOAOXO 64GB Voice Recorder. This device is designed for high-quality audio capture, offering a range of features for various recording needs, from meetings and interviews to lectures. With its dual-mic noise reduction and high-definition recording capabilities, it ensures clear and crisp audio. This manual provides detailed instructions to help you get the most out of your new voice recorder.



The ZOOAOXO 64GB Voice Recorder, showcasing its sleek design and compact form factor.

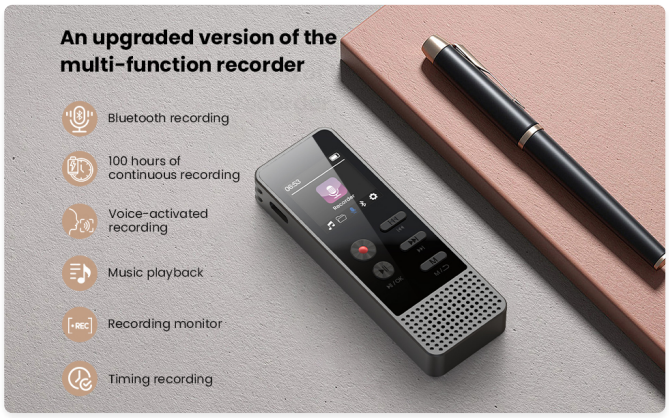

An overview of the recorder's advanced features, including Bluetooth connectivity and extended battery life.

2. What's in the Box

Upon opening your ZOOAOXO 64GB Voice Recorder package, you should find the following items:

- VOICE RECORDER (ZOOAOXO V200)
- USB cable
- Instruction manual



The retail packaging of the ZOOAOXO V200 Digital Voice Recorder.

3. Product Overview

3.1 Components and Controls

Familiarize yourself with the various parts and controls of your ZOOAOXO Voice Recorder:

Display Screen: Shows recording status, time, battery level, and menu options.

Microphones: Dual professional-grade microphones for 360° audio capture and noise reduction.

Record Button: Initiates and saves recordings.

Play/OK Button: Starts playback and confirms selections.

Menu/Back Button: Accesses menu and navigates back.

Volume Buttons (+/-): Adjusts playback volume.

Skip/Fast Forward/Rewind Buttons: Navigates through tracks or recordings.

Power Button: Turns the device on/off.

USB Port: For charging and data transfer to a computer.

Headphone Jack: For private listening.

Integrated Speaker: For direct audio playback.



Side view illustrating the button layout for easy control.



The dual microphone design ensures comprehensive 360-degree sound capture.

4. Setup

4.1 Charging the Device

Before first use, fully charge the voice recorder. Connect the provided USB cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The device features a built-in 1000mAh battery, providing extended recording time.



The device offers up to 100 hours of continuous recording on a single charge, thanks to its 1000mAh battery.

4.2 Power On/Off

To power on the device, press and hold the Power button until the screen illuminates. To power off, press and hold the Power button again until the screen turns off.

4.3 Setting a Password

For enhanced privacy, you can set a power-on password. Navigate to the settings menu on the device, locate the 'Password'

option, and follow the on-screen prompts to set your desired password. Remember your password, as it is required to access the device.

5. Operating Instructions


5.1 Recording

The ZOOAOXO Voice Recorder offers multiple recording modes to suit your needs.


One-Key Start Recording: Press the Record button once to start recording. Press it again to save the recording. The file will be automatically named with the date and time.

Voice-Activated Recording (VOR): In the settings, enable Voice-Activated Recording. The device will automatically start recording when sound is detected and pause when silence occurs, saving memory and battery.

Timing Recording: Schedule recordings to start and stop at specific times. This feature is useful for capturing lectures or meetings automatically.

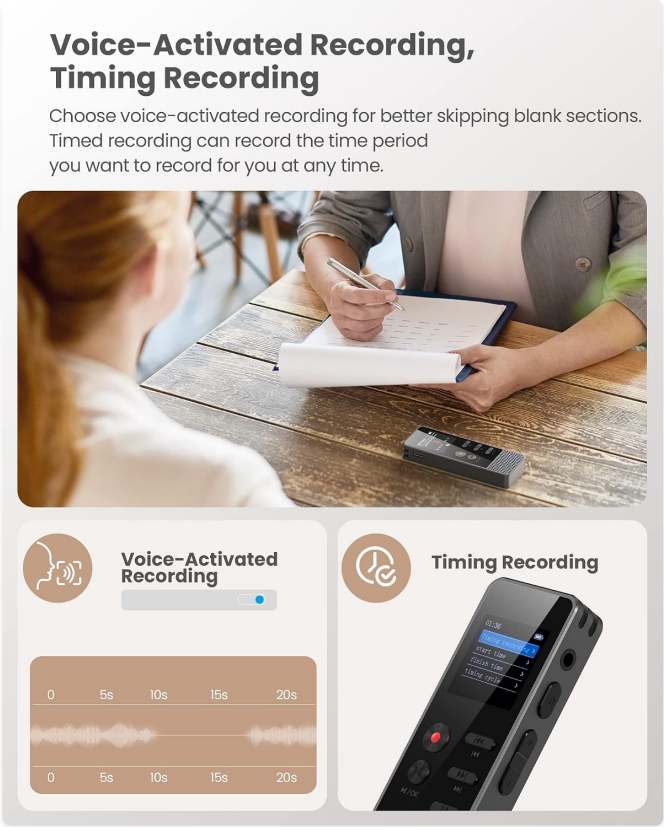

The interface for setting up Voice-Activated Recording and Timing Recording.

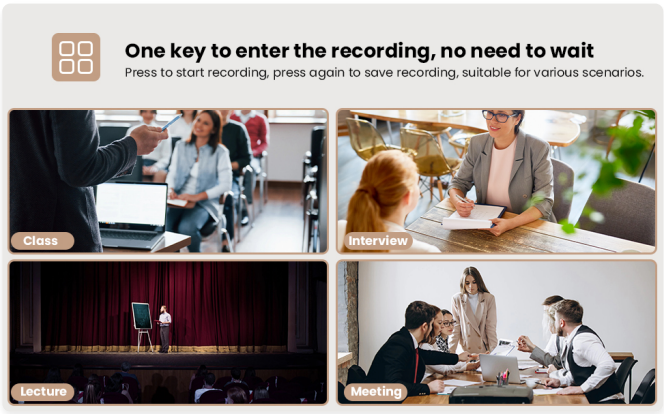


One-key recording simplifies the process for diverse environments.

5.2 Recording Quality

You can select from three recording quality modes:

- 512kbps
- 1536kbps
- 3072kbps (HD Recording)

Higher bitrates offer superior audio fidelity but consume more storage space. The device features dual-mic noise reduction for clearer sound, especially at higher quality settings.

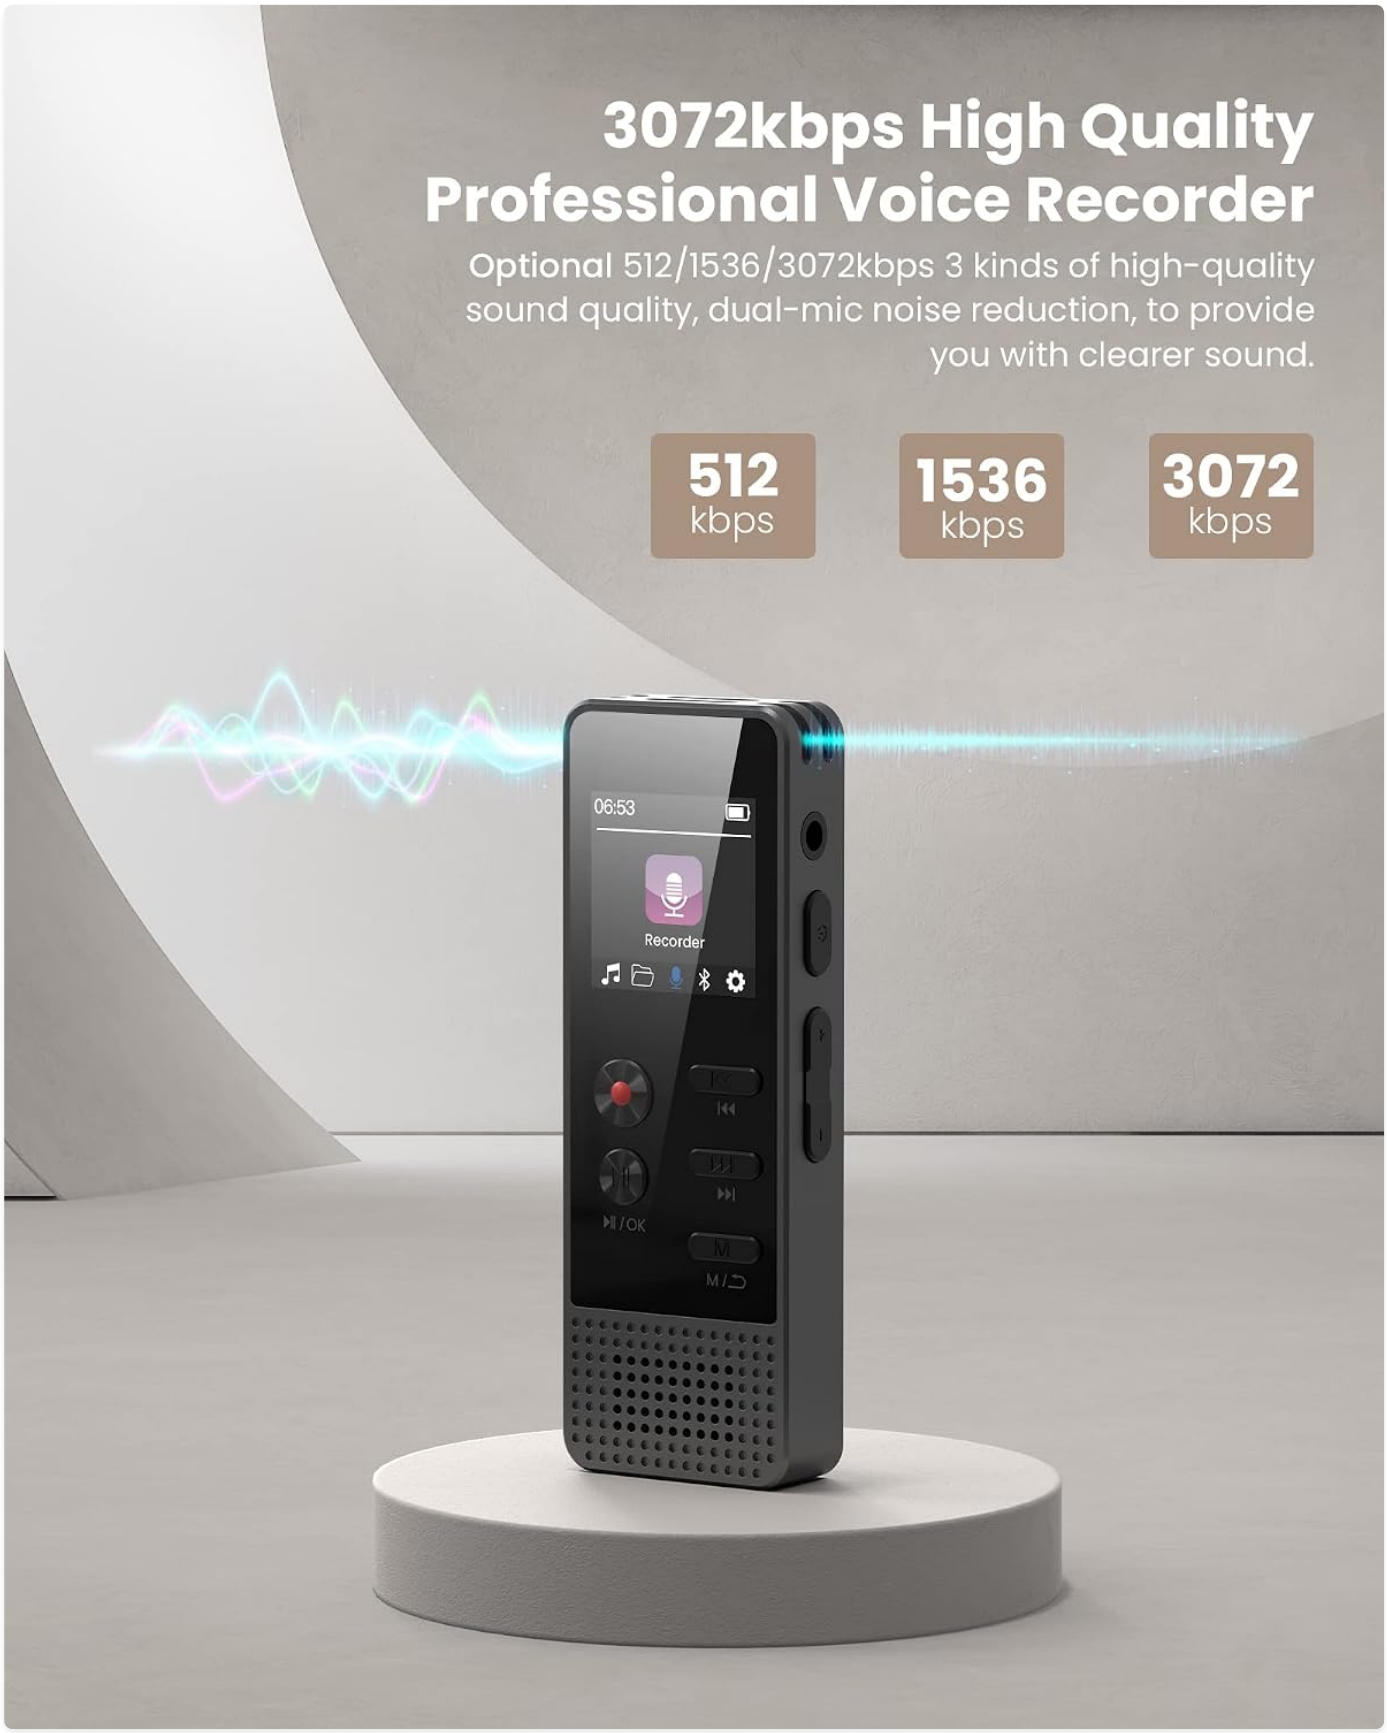


Choose from various recording bitrates to match your quality and storage needs.

5.3 Playback

The recorder functions as a versatile MP3 player and offers several playback options:

- **Music Playback:** Transfer MP3 files to the device's music folder and play them back.
- **Bluetooth Playback:** Connect to Bluetooth headphones or speakers for wireless audio output.
- **A-B Repeat:** Repeat a specific section of an audio file.

- **Recording Monitoring:** Listen to the audio being recorded in real-time through headphones.

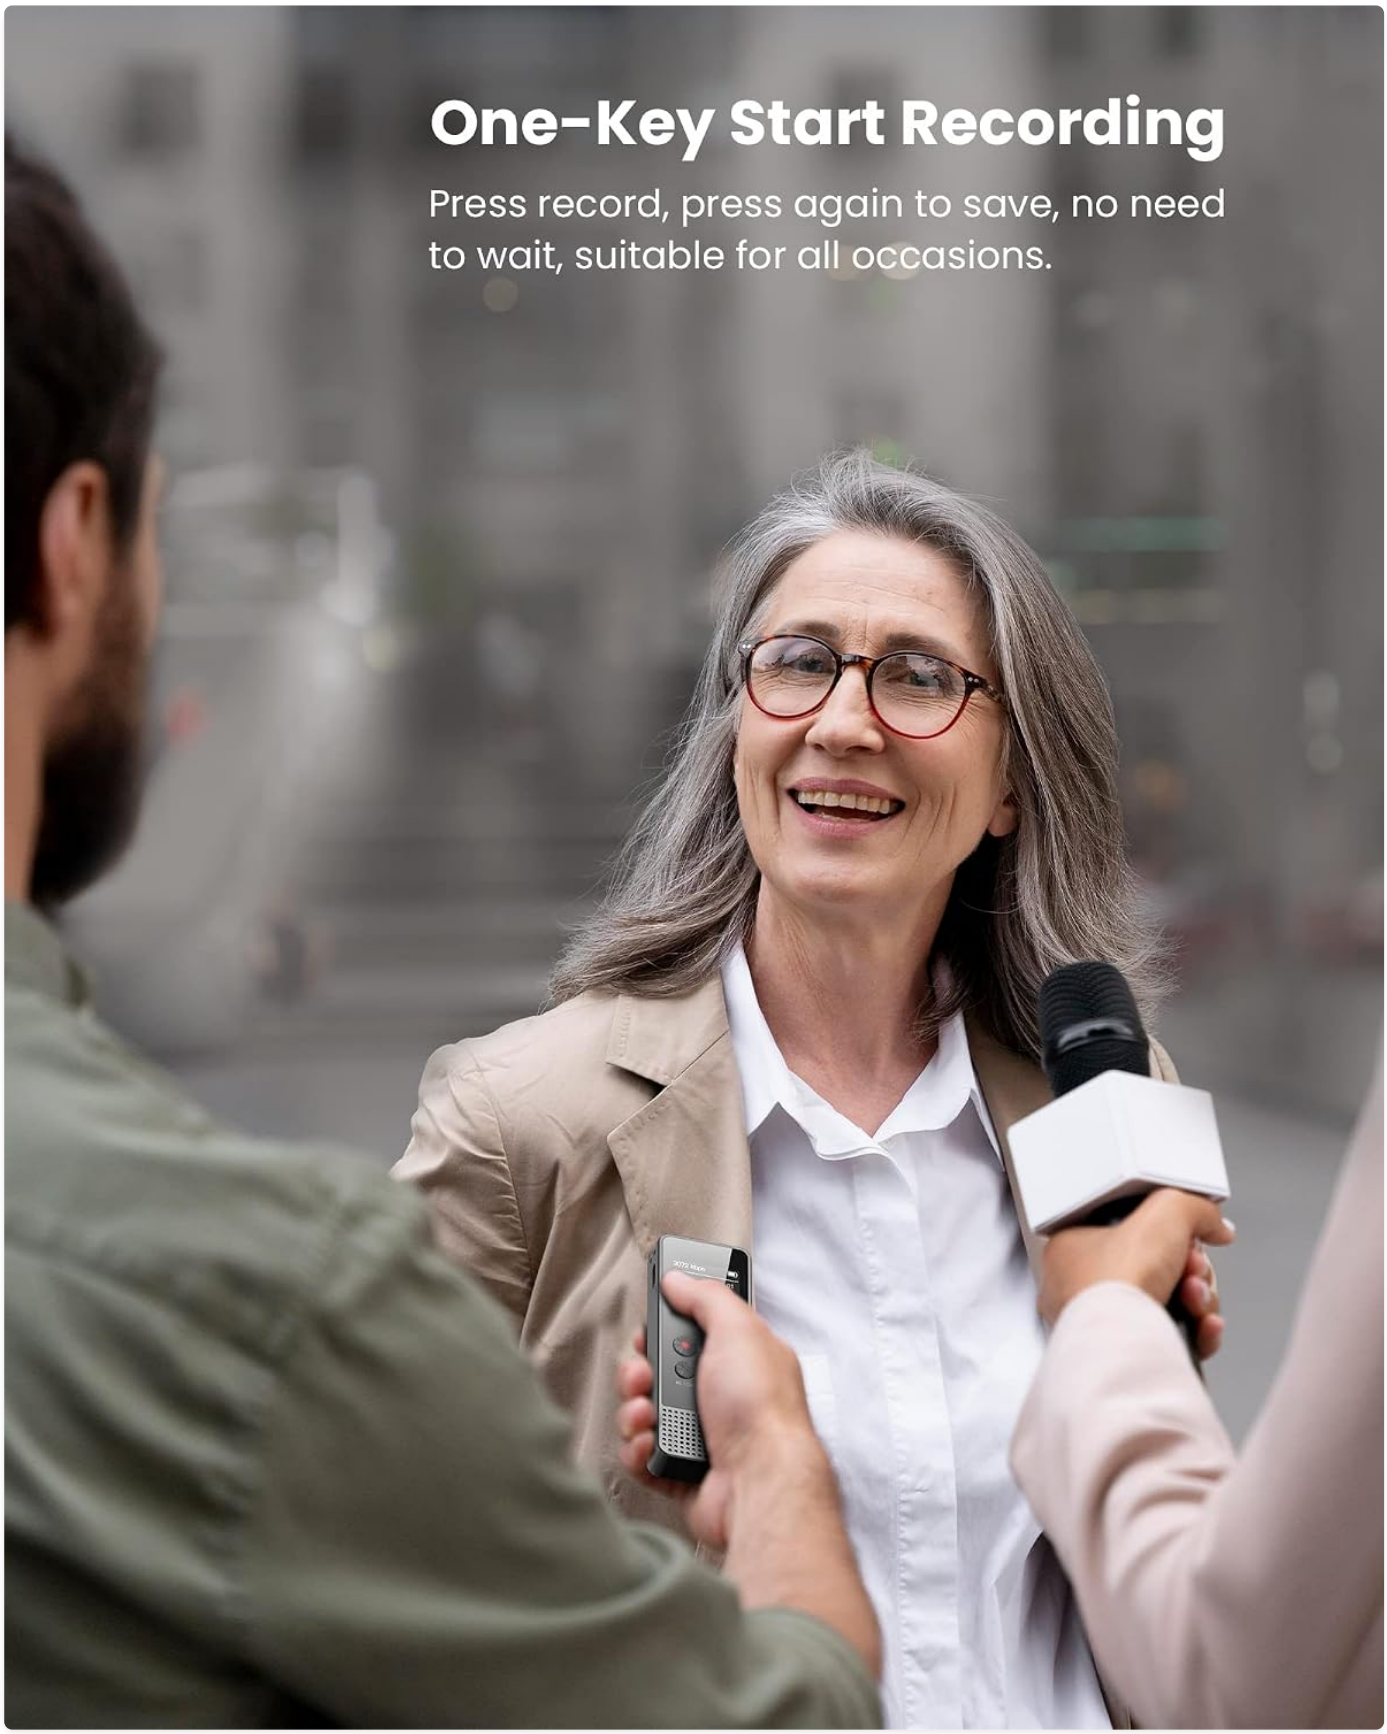

The device's multifunctional capabilities, including various playback options.

5.4 File Management

Recordings are saved automatically. To manage files:

- **Accessing Files:** Navigate to the 'Recordings' folder via the device's menu. Note that the device may default to the 'Music' folder; ensure you select 'Recordings' to view your captured audio.

- **Deleting Files:** To delete a recording, select the file from the list. Long-press the 'OK' button or navigate to the 'Delete' option within the file menu. Confirm your selection. *Note:* It is often easier to delete files immediately after viewing the list. If you listen to a recording and then go back, the delete option might become less accessible, requiring you to re-enter the list to delete.
- **Transferring Files:** Connect the device to a computer using the USB cable. The recorder will appear as a removable drive. You can then drag and drop files to and from your computer.



The user-friendly interface for navigating and managing your recorded files.

6. Maintenance

To ensure the longevity and optimal performance of your ZOOAOXO Voice Recorder, follow these maintenance guidelines:

- Keep the device clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Store the recorder in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the device yourself, as this will void the warranty.

7. Troubleshooting

If you encounter issues with your ZOOAOXO Voice Recorder, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Connect to a power source and charge for at least 2 hours.
Cannot delete recordings easily.	The deletion process can be particular. Ensure you are in the recordings list and attempt to delete immediately upon selecting the file. If you play the file and then go back, the delete option may become less accessible. Try exiting the list and re-entering to delete.
Recorded files are empty or corrupted.	Ensure the device has sufficient battery and storage space before recording. Avoid sudden power loss during recording. If the issue persists, try formatting the device's memory (this will erase all data).
Cannot connect to PC.	Ensure the USB cable is securely connected to both the device and the computer. Try a different USB port or cable. The device should appear as a removable drive.
Forgotten password.	If you have forgotten your password, try common defaults like '0000' or '1234'. If these do not work, a factory reset may be necessary, which will erase all data. Consult support if unable to resolve.

8. Specifications

Detailed technical specifications for the ZOOAOXO V200 Voice Recorder:

Feature	Detail
Model Number	V200
Memory Storage Capacity	64 GB
Battery Type	1 Lithium Polymer battery (included)
Item Weight	100 Grams
Product Dimensions	1.3D x 9.2W x 2.8H centimetres
Hardware Interface	USB 1.1
Microphone Form Factor	Integrated (Dual-Mic)
Recording Format	WAV
Headphone Jack	2.5 millimeters
Compatible Devices	Smartphone (for file transfer/management)
Visible Screen Diagonal	1" / 3 cm

9. Warranty and Support

ZOOAOXO is committed to providing high-quality products and customer satisfaction. For any product-related inquiries, technical support, or warranty claims, please contact ZOOAOXO customer service. Refer to the contact information provided on the product packaging or the official ZOOAOXO website for the most up-to-date support channels.



Manufacturer details are available on the product packaging.

© 2024 ZOOAOXO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question