YABER U10 SE

YABER V8 (U10 SE) Projector with WiFi 6 and Bluetooth - Instruction Manual

Model: U10 SE

Setup
Operating Instructions
Maintenance
Troubleshooting
Specifications
Warranty & Support

1. SETUP GUIDE

This section provides instructions for the initial setup of your YABER V8 (U10 SE) Projector.

1.1 Unboxing and Components

Carefully remove all components from the packaging. Ensure the following items are present:

- YABER V8 (U10 SE) Projector
- Power Cable
- Remote Control
- HDMI Cable
- AV Cable
- User Manual (this document)

1.2 Projector Placement

Position the projector on a stable, flat surface or mount it to the ceiling. Ensure the projection lens is facing the screen or wall. Maintain adequate ventilation around the projector.
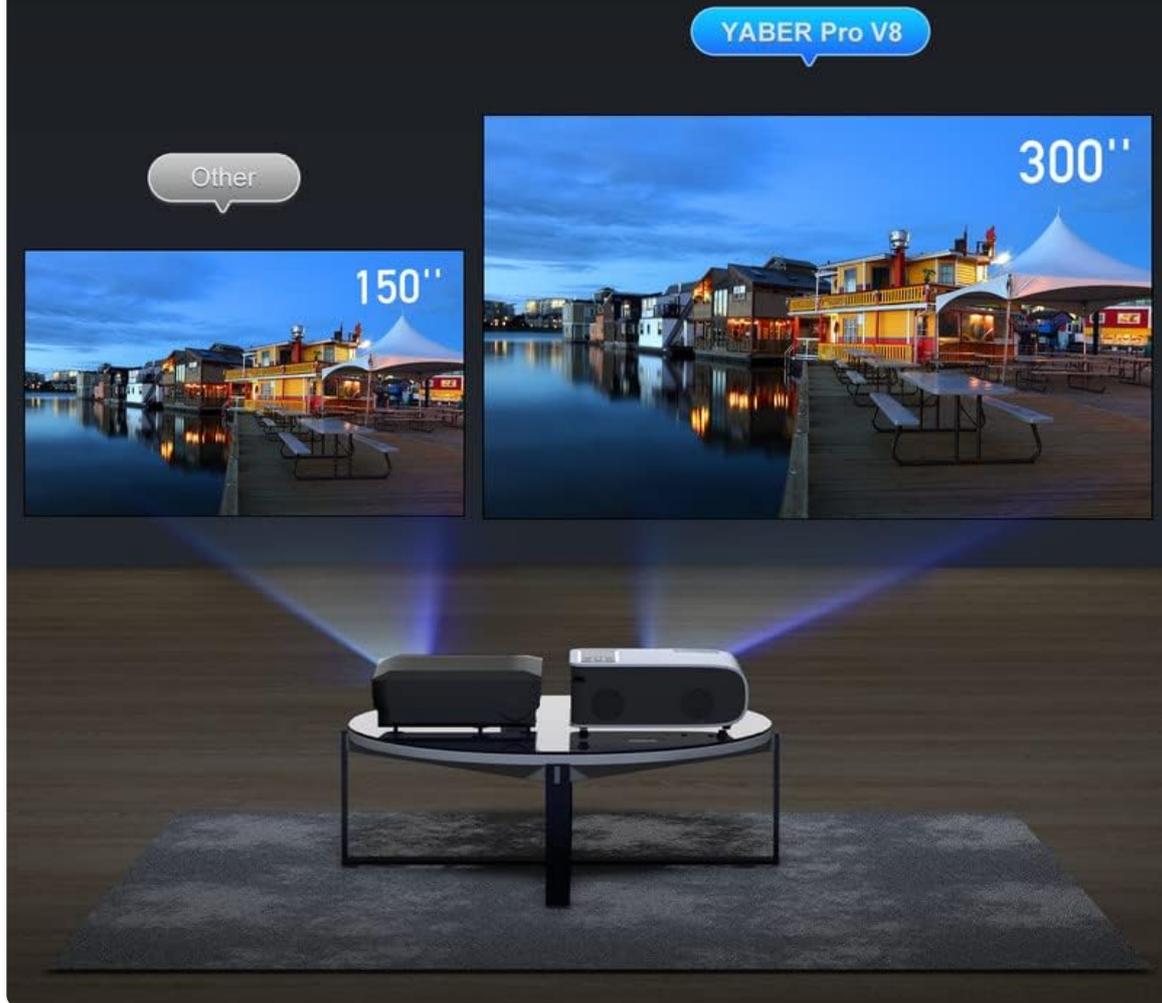
Image: The YABER V8 Projector positioned for projection, illustrating its digital keystone correction capabilities for flexible placement.

For ceiling mounting, ensure the mounting point is secure and compatible with the projector's screw size (M6, Diameter: 6mm, Length: 10-34mm). Only 1-leg ceiling brackets are supported.

1.3 Power Connection

Connect the power cable to the projector's power input and then plug it into a power outlet. The power indicator light will illuminate.

1.4 Initial Power On and Focus Adjustment

Press the power button on the projector or remote control to turn it on. Adjust the focus ring on the lens until the projected image is clear and sharp.

1.5 Keystone Correction (4P/4D)

If the projected image appears trapezoidal, use the 4P/4D keystone correction function via the remote control to adjust the image shape. This allows for flexible placement without distorting the picture.

Image: Illustration of the 4-point keystone correction and 50% zoom function, demonstrating how to adjust the image for optimal viewing.

1.6 Zoom Function

The YABER V8 (U10 SE) Projector features a 50% digital zoom function. Use the remote control to adjust the image size without moving the projector.

2. OPERATING INSTRUCTIONS

This section details the various functions and operations of your YABER V8 (U10 SE) Projector.

2.1 Basic Navigation and Input Source Selection

Use the remote control or the buttons on the projector to navigate the on-screen menu. Select your desired input source (HDMI, AV, USB) from the main menu.

2.2 Wireless Connectivity (WiFi 6)

The YABER V8 (U10 SE) supports WiFi 6 for fast and stable wireless connections. It is also compatible with earlier 2.4G/5G WiFi networks.

1. Go to the "Network Setting" in the projector's menu.
2. Select your WiFi network and enter the password to connect.
3. Once connected, you can use screen mirroring features.

Image: Comparison illustrating the faster loading times with WiFi 6 compared to normal WiFi for the YABER V8 Projector.

2.3 Screen Mirroring (iOS Cast / Android Cast)

To mirror content from your smartphone or other devices:

- Select "iOS Cast" or "Android Cast" from the main menu.
- Follow the on-screen instructions to connect your device.

Note:

- Due to HDCP copyright protection, streaming services like Netflix, Amazon Prime Video, and Hulu cannot be mirrored directly from mobile devices. For these services, use an external streaming device (e.g., Amazon Fire Stick, Roku) connected via HDMI.

2.4 Bluetooth Connection

The YABER V8 (U10 SE) features bidirectional Bluetooth 5.1, allowing connection to external Bluetooth speakers/headphones or functioning as a Bluetooth speaker for your phone.

1. Go to "Bluetooth Setting" in the projector's menu.
2. Turn Bluetooth on.
3. The projector will scan for available devices. Select your desired device from the list to pair.

Image: The YABER V8 Projector shown with various Bluetooth audio devices like headphones, earbuds, and speakers, highlighting its 5.0 Bluetooth connection capability.

2.5 Audio Settings

If there is no sound when playing videos, especially with a TV stick, ensure that Dolby Digital Plus is disabled in the audio settings of your connected device. In other cases, select a non-Dolby sound source.

3. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your projector.

3.1 Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid using abrasive materials or chemical cleaners that could damage the lens coating.

3.2 Cleaning Air Vents

Regularly check and clean the air vents to prevent dust buildup, which can lead to overheating. Use a soft brush or compressed air to remove dust from the vents.

3.3 Storage

When not in use for extended periods, store the projector in a cool, dry, and dust-free environment. Use the original packaging or a protective case to prevent damage.

4. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

4.1 No Power

- Ensure the power cable is securely connected to both the projector and the power outlet.
- Verify the power outlet is functional by plugging in another device.
- Check if the power indicator light on the projector is on.

4.2 No Image / Blank Screen

- Confirm the correct input source is selected (HDMI, AV, USB).
- Check the connection cables (HDMI, AV) for proper seating and damage.
- Ensure the connected device (laptop, streaming stick) is powered on and outputting a signal.

4.3 Blurry Image

- Adjust the focus ring on the projector lens until the image is sharp.
- Use the 4P/4D keystone correction to correct any trapezoidal distortion.
- Ensure the projection distance is within the recommended range for the desired screen size.

4.4 No Sound

- Check the projector's volume level and ensure it is not muted.
- If using an external device via HDMI, check its volume settings.
- If connecting a TV stick, disable Dolby Digital Plus in the TV stick's audio settings.
- If using Bluetooth, ensure the external speaker/headphone is properly paired and connected.

4.5 WiFi Connection Issues

- Ensure the WiFi password is entered correctly.
- Move the projector closer to the WiFi router to improve signal strength.
- Restart both the projector and the WiFi router.

4.6 Remote Control Not Responding

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote control and the projector's IR receiver.

- Point the remote directly at the projector.

5. SPECIFICATIONS

Feature	Detail
Brand	YABER
Model Number	U10 SE
Display Resolution	Native 1920 x 1080P (4K Supported)
Brightness	450 ANSI Lumens (Up to 19000L marketing value)
Connectivity Technology	WiFi 6 (5G/2.4G), Bluetooth 5.1 (Bidirectional), HDMI, USB, AV
Special Features	Digital 4P/4D Keystone Correction, 50% Zoom Function, Built-in Stereo Speakers
Recommended Uses	Home Theater, Outdoor Movies, Gaming
Item Weight	6.12 pounds
Package Dimensions	14.37 x 10.04 x 5.47 inches

Image: Diagram illustrating the YABER BASIC Smart Engine technology, highlighting its benefits in brightness, color, sound, display, and clarity.

6. WARRANTY & SUPPORT

YABER provides official after-sale service to ensure customer satisfaction.

- **Lightning Delivery:** For quick product delivery.
- **Ultra-Fast Response:** Dedicated customer support for inquiries and issues.

If you have any questions or require assistance, please contact YABER customer support. Refer to the product packaging or the official YABER website for contact details.

Image: Graphic detailing YABER's commitment to customer service, including fast delivery and responsive support.