Infinix X6823C

Infinix Smart 6 Plus Mobile Phone User Manual

Model: X6823C | Brand: Infinix

Introduction

Welcome to the user manual for your new Infinix Smart 6 Plus mobile phone. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The Infinix Smart 6 Plus (Model X6823C) is designed to offer a smooth user experience with its MediaTek Helio G25 Octa-Core processor, a large 6.82-inch HD+ display, and a long-lasting 5000mAh battery. It features an 8MP AI dual rear camera, a 5MP front camera, and runs on Android 12 (Go Edition).



This image highlights the main features of the Infinix Smart 6 Plus, showcasing its Android 12 (Go Edition) operating system, 64GB internal storage with 3GB RAM (expandable to 6GB), a powerful 5000mAh battery with Power Marathon technology, a large 6.82-inch HD+ display with 440 nits brightness, the MediaTek Helio G25 octa-core processor, an 8MP AI dual rear camera, a 5MP dual LED flash selfie camera, DTS Digital Surround sound, and security features like fingerprint sensor and face unlock.

Getting Started

Package Contents

Ensure all items are present in your product package:

- Infinix Smart 6 Plus Mobile Phone
- Power Adapter
- USB Charging Cable
- SIM Ejector Tool
- Quick Start Guide / Warranty Card

SIM Card and SD Card Installation

To install your SIM card(s) and/or microSD card:

1. Locate the SIM card tray on the side of your phone.
2. Insert the SIM ejector tool into the small hole next to the tray and push gently until the tray pops out.
3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the phone until it is flush with the side.



Locate the SIM card tray on the side of the device. Use the provided SIM ejector tool to open the tray for inserting your SIM and microSD cards.

Charging the Device

Before first use, fully charge your Infinix Smart 6 Plus. Connect the USB cable to the charging port on your phone and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will appear on the screen.

Powering On/Off

- **To Power On:** Press and hold the Power button on the side of the phone until the Infinix logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then tap 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears, then tap 'Restart'.

Operating Instructions

Basic Navigation

Your Infinix Smart 6 Plus features an intuitive touchscreen interface:

- **Tap:** Touch an icon or option to open or select it.

- **Swipe:** Drag your finger across the screen to scroll through pages or content.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.
- **Home Screen:** Access your apps, widgets, and notifications from the home screen.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.



Experience vibrant visuals on the 6.82-inch HD+ display of the Infinix Smart 6 Plus, featuring a narrow bezel and a 20:5:9 aspect ratio for an immersive viewing experience.

Making Calls and Sending Messages

- **Calls:** Open the 'Phone' app, enter the number or select a contact, then tap the call icon.
- **Messages:** Open the 'Messages' app, tap 'Start chat', enter the recipient's number or name, type your message, and tap send.

Camera Operation

Capture moments with your phone's cameras:

1. Open the 'Camera' app from your home screen or app drawer.
2. To switch between the 8MP rear camera and the 5MP front camera, tap the camera switch icon.
3. Select your desired mode (Photo, Video, Portrait, etc.).
4. Tap the shutter button to take a photo or start/stop recording a video.



The rear of the Infinix Smart 6 Plus features an 8-megapixel AI dual camera system with a depth lens and dual LED flash for enhanced photography.

Security Features

Secure your device with advanced biometric options:

- **Fingerprint Sensor:** Go to Settings > Security > Fingerprint to register your fingerprints. Once registered, you can unlock your phone by placing your finger on the rear-mounted sensor.
- **Face Unlock:** Go to Settings > Security > Face Unlock to set up facial recognition. Your phone can then be unlocked by simply looking at the front camera.





The Infinix Smart 6 Plus includes a multi-purpose fingerprint sensor located on the back for secure and quick unlocking, alongside face unlock functionality.

Connectivity

Connect to networks and other devices:

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi. Turn Wi-Fi on and select an available network to connect.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth. Turn Bluetooth on to pair with other Bluetooth devices.
- **Mobile Data:** Ensure your SIM card is active and mobile data is enabled in Quick Settings or Network & internet settings.


Device Care

Battery Management

Your Infinix Smart 6 Plus is equipped with a 5000mAh battery. To maximize battery life:

- Avoid extreme temperatures.
- Reduce screen brightness.

- Close unused apps running in the background.
- Enable Power Marathon technology in battery settings for optimized power saving.

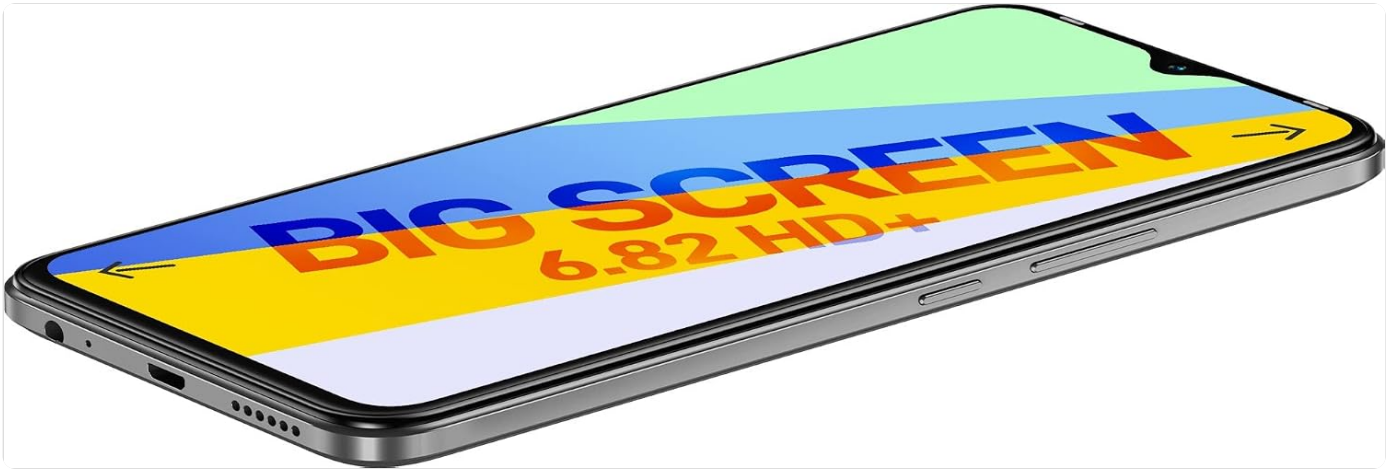

The Infinix Smart 6 Plus is equipped with a large 5000mAh battery, providing extended usage times. The Power Marathon technology further optimizes battery performance.

Software Updates

Regularly check for software updates to ensure optimal performance and security:

1. Go to Settings > System > System update.
2. Tap 'Check for updates' and follow the on-screen instructions if an update is available.

Cleaning Your Device

Use a soft, lint-free cloth to clean your phone. Avoid using harsh chemicals or abrasive materials that could damage the screen or finish.

Troubleshooting

If you encounter issues with your device, try the following solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen unresponsive:** Restart the device by holding the Power button for about 10-15 seconds until it reboots.
- **Poor battery life:** Review battery management tips in the 'Device Care' section. Close background apps and reduce screen brightness.
- **Network connectivity issues:** Check if your SIM card is properly inserted. Toggle Airplane Mode on and off. Restart your phone.
- **Apps crashing:** Clear the cache and data for the problematic app in Settings > Apps. If the issue persists, uninstall and reinstall the app.
- **Device freezing:** Perform a force restart by holding the Power button until the device reboots.

If problems persist, contact Infinix customer support or visit an authorized service center.

Technical Specifications

Feature	Detail
Model Name	Smart 6 Plus

Feature	Detail
Model Number	X6823C
Operating System	Android 12.0 (Go Edition)
Processor	MediaTek Helio G25 Octa-Core, 2.0 GHz
RAM	3 GB (expandable up to 6 GB virtual RAM)
Internal Storage	64 GB
Expandable Storage	Up to 512 GB via dedicated SD card slot
Display Size	6.82 inches (17.32 cm)
Display Resolution	HD+ (1080 x 2160 pixels)
Refresh Rate	60 Hz
Brightness	440 nits
Rear Camera	8 MP + Depth Lens with Dual LED Flash
Front Camera	5 MP with Dual LED Flash
Battery Capacity	5000 mAh Li-Polymer
Security	Rear Fingerprint Sensor, Face Unlock
Dimensions (L x W x H)	17.26 x 7.77 x 0.87 cm
Weight	320 grams

Warranty Information and Support

Your Infinix Smart 6 Plus is covered by a limited manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service inquiries, or to find an authorized service center, please visit the official Infinix website or contact their customer service helpline. Keep your purchase receipt and product serial number handy when seeking support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question