Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

zeBrush Galaxy Buds 2 Pro

User Manual: zeBrush Galaxy Buds 2 Pro Wireless Earphones

Model: Galaxy Buds 2 Pro

Brand: zeBrush

Introduction

The zeBrush Galaxy Buds 2 Pro are advanced wireless earphones designed to deliver a premium audio experience. Featuring 24-bit Hi-Fi sound and robust Active Noise Cancellation, these earbuds provide clear, immersive sound for all your listening needs. Their ergonomic design ensures a comfortable and secure fit, making them ideal for extended use.



Image: The Galaxy Buds 2 Pro are designed for comfortable wear during various activities.

What's in the Box

Upon unboxing your zeBrush Galaxy Buds 2 Pro, verify that all the following components are included:

- Earbuds (1 set)
- Wireless Charging Case
- Eartips (various sizes for optimal fit)
- Charging Cable
- User Manual (this document)

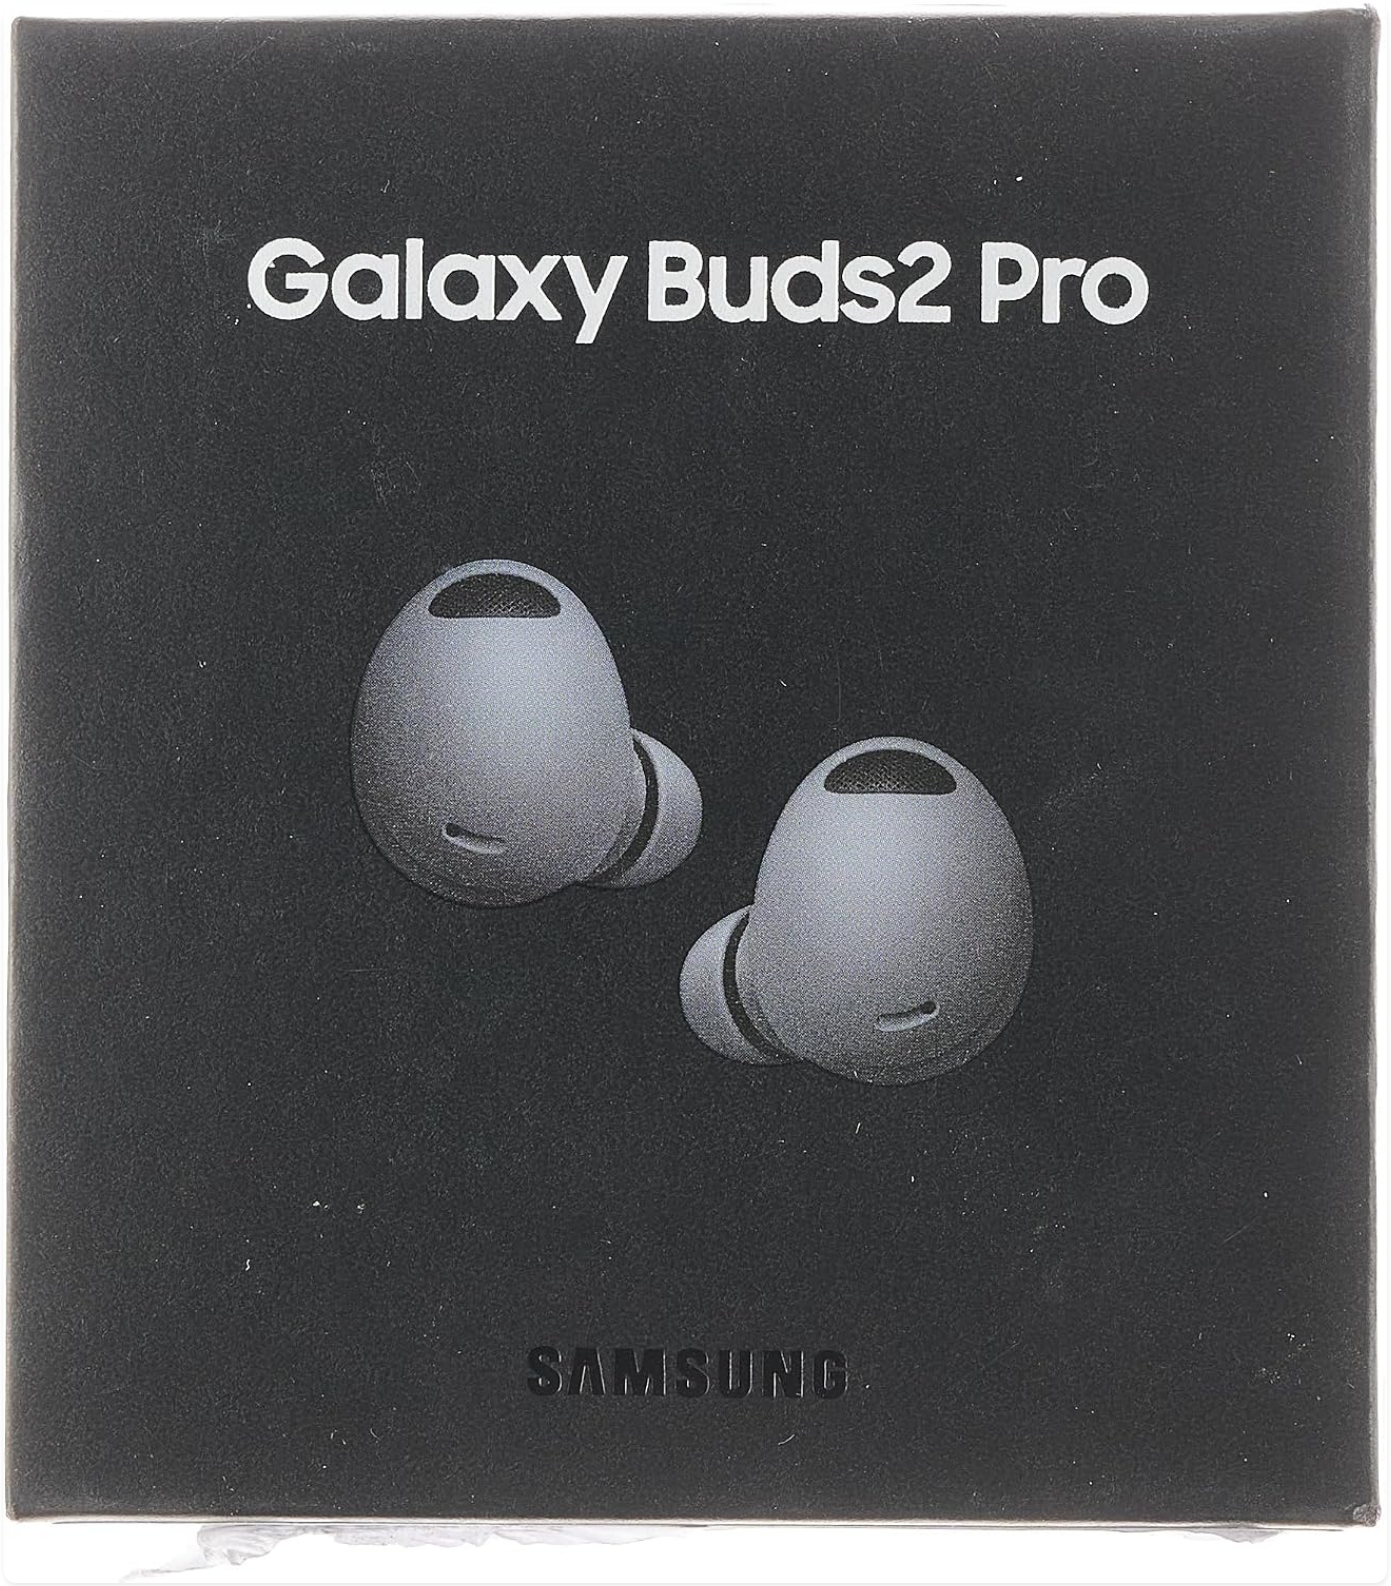


Image: The retail packaging for the Galaxy Buds 2 Pro, indicating the product inside.

Product Overview

The Galaxy Buds 2 Pro are meticulously designed for both performance and comfort. Each earbud is lightweight and features an ergonomic shape to fit securely in your ear.



Image: The Galaxy Buds 2 Pro earbuds nestled within their open wireless charging case.



Image: A detailed view of the left and right Galaxy Buds 2 Pro earbuds.

The charging case not only protects your earbuds but also provides convenient wireless charging, ensuring they are always ready for use.

Setup

Initial Charging

Before first use, fully charge your Galaxy Buds 2 Pro. Place both earbuds into the wireless charging case and connect the case to a power source using the provided charging cable. The indicator light on the case will show the charging status.

Pairing with Your Device

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case with the earbuds inside. The earbuds will automatically enter pairing mode.
3. On your device, search for available Bluetooth devices and select "Galaxy Buds 2 Pro" from the list.
4. Follow any on-screen prompts to complete the pairing process.

For optimal performance, ensure your device is running Android 8.0 or higher with more than 1.5GB of RAM. Some features may vary depending on your device and region.

Operating Instructions

Touch Controls

The Galaxy Buds 2 Pro feature intuitive touch controls on each earbud. You can customize these controls via the companion app on your smartphone.

- **Single Tap:** Play/Pause music, Answer/End call.
- **Double Tap:** Play next song, Answer/End second call, Switch between calls.
- **Triple Tap:** Play previous song.
- **Touch and Hold:** Activate Active Noise Cancellation (ANC) or Ambient Sound mode, Decline call. (Customizable)

Active Noise Cancellation (ANC)

The ANC feature utilizes three high signal-to-noise ratio (SNR) microphones to effectively block out external noise, allowing you to focus on your audio. Activate or deactivate ANC using the touch and hold gesture or through the companion app.



Image: Active Noise Cancellation helps put your playlist in focus by reducing ambient sounds.

Audio 360 Surround Sound

Experience immersive audio with Audio 360, which surrounds you like you're at the center of the action. This feature enhances your listening experience by providing a dynamic and realistic soundstage.



Image: The ultimate 24-bit Hi-Fi sound is now wirelessly available with the Galaxy Buds 2 Pro.

Official Product Video

Your browser does not support the video tag.

Video: An official overview of the Samsung Galaxy Buds 2 Pro, highlighting key features and design.

Maintenance

Cleaning Your Earbuds

Regular cleaning helps maintain sound quality and hygiene. Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. For the eartips, remove them from the earbuds and clean with a mild soap solution if necessary, then rinse and dry thoroughly before reattaching.

Storage

When not in use, always store your Galaxy Buds 2 Pro in their charging case to protect them from dust, damage, and to keep them charged.

Water Resistance

The earbuds are water resistant. However, they are not waterproof. Avoid submerging them in water or exposing them to high-pressure water streams. Dry them thoroughly if they get wet before placing them back in the charging case.

Troubleshooting

Problem	Possible Cause	Solution
Earbuds not pairing	Bluetooth off, earbuds not in pairing mode, low battery.	Ensure Bluetooth is on, open case to activate pairing, charge earbuds.
No sound or low volume	Volume too low, earbud fit, debris in speaker mesh.	Adjust volume, ensure proper fit, clean speaker mesh.
ANC not effective	Improper fit, ANC not activated.	Adjust earbud position, activate ANC via touch control or app.
Earbuds falling out	Incorrect eartip size.	Try different eartip sizes for a more secure fit.

Specifications

Feature	Detail
Model Name	Galaxy Buds 2 Pro
Brand	zeBrush
Connectivity Technology	Wireless (Bluetooth 5.2)
Noise Control	Active Noise Cancellation
Audio Quality	24-bit Hi-Fi sound
Battery Life	Up to 5 Hours (earbuds)
Control Type	Touch Control
Water Resistance Level	Water Resistant
Item Weight	0.071 ounces (approx. 2 grams)
Product Dimensions	3.15 x 1.18 x 3.94 inches
Included Components	Cable, Earbuds 1 set, Eartip, User Manual, Wireless Charging Case



Image: Rear view of the product packaging, detailing key features and compatibility information.

Warranty and Support

For warranty information and technical support, please refer to the official zeBrush website or contact their customer service. Keep your proof of purchase for warranty claims.

For additional information and resources, you may visit the product's detail page on Amazon.com.

© 2025 zeBrush. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B8J28VMV

More documents and user manuals: **https://manuals.plus/**