Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Whirlpool WI 7020 PF

Whirlpool WI 7020 PF Integrated Dishwasher User Manual

Model: WI 7020 PF | Brand: Whirlpool

1. Introduction

This manual provides essential information for the safe and efficient use of your new Whirlpool WI 7020 PF integrated dishwasher. Please read these instructions carefully before installation and operation, and keep them for future reference. This appliance is designed to provide optimal washing and drying results with innovative technology and intuitive controls.



Figure 1: Front view of the Whirlpool WI 7020 PF Integrated Dishwasher.

2. Important Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the dishwasher.
- This appliance must be grounded. Connect only to a properly grounded outlet.
- Do not operate a dishwasher with a damaged power cord or plug, or if it has been dropped or damaged in any way.
- Keep children away from detergent and rinse aid.
- Do not allow children to play in or on the dishwasher.
- Use only detergents and rinse aids recommended for use in a dishwasher.
- Do not store or use flammable materials near this or any other appliance.
- To avoid damage to the door seal, do not overload the dishwasher.

3. Installation and Setup

3.1 Unpacking

Remove all packaging materials. Ensure no parts are missing or damaged. Dispose of packaging materials responsibly.

3.2 Positioning

The dishwasher is designed for integrated installation. Ensure the installation space meets the required dimensions. The appliance features adjustable feet at the front for leveling.

3.3 Electrical Connection

Connect the dishwasher to a grounded electrical outlet (Schuko plug). Ensure the voltage (220-240V) and frequency (50Hz) match your household supply. The power cord length is 130 cm.

3.4 Water Connection

Connect the water inlet hose (155 cm length) to a cold water supply. Ensure the water outlet hose (150 cm length) is properly connected to a drain.

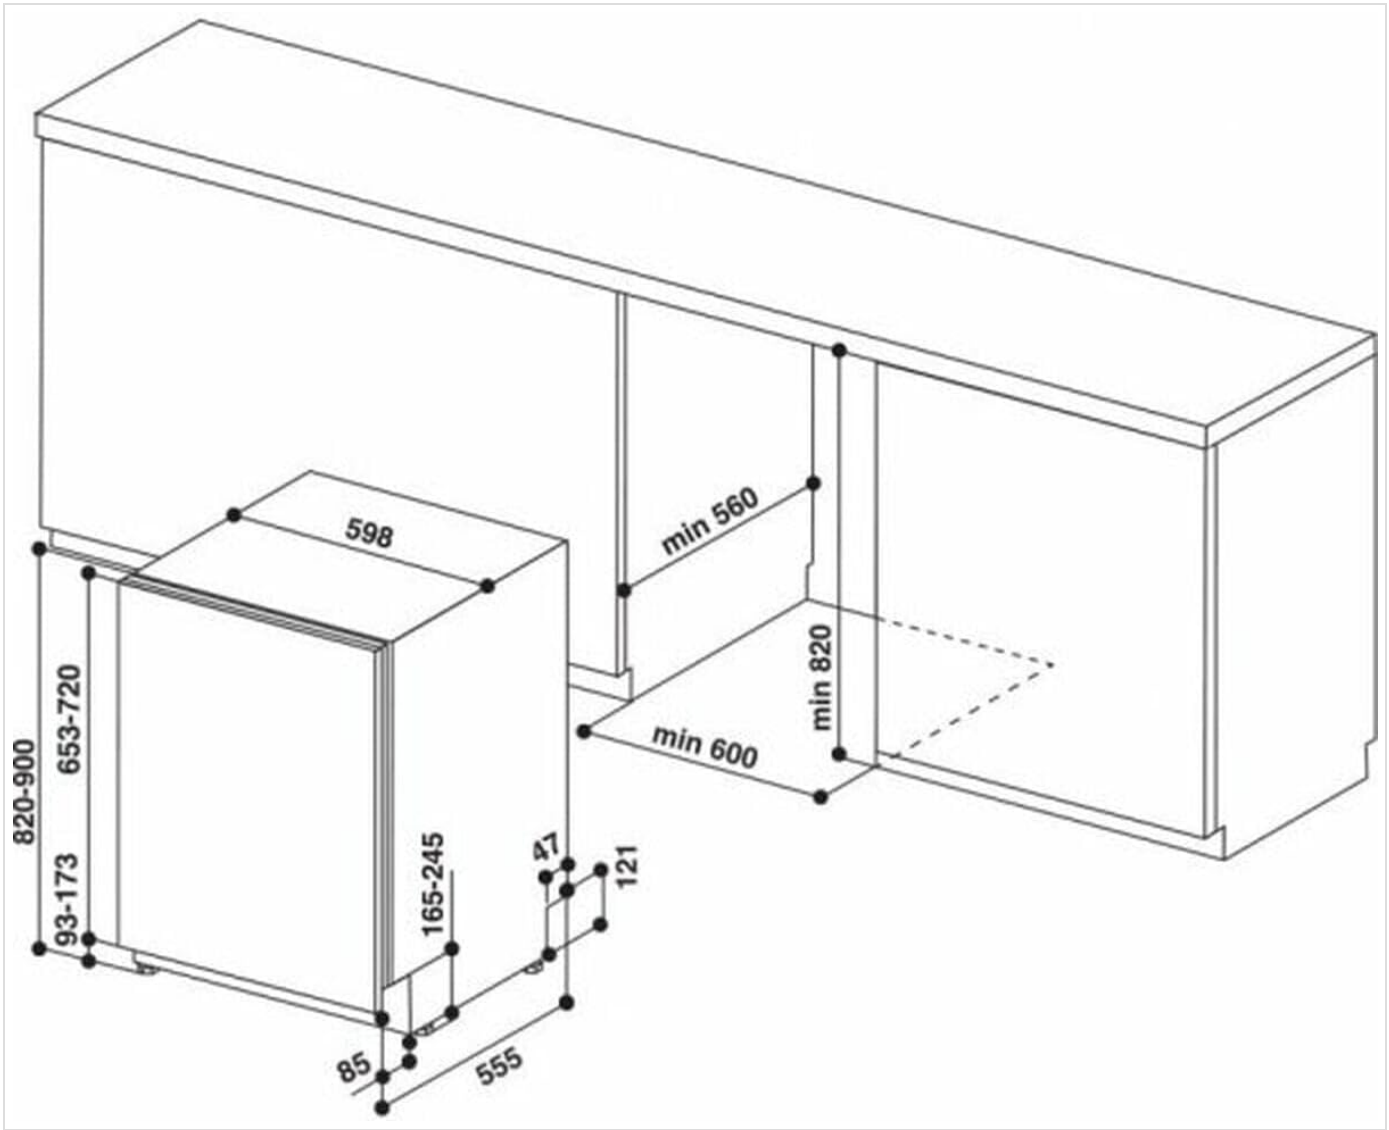


Figure 2: Installation dimensions for the Whirlpool WI 7020 PF Dishwasher. Dimensions shown are approximately 598mm width, 820-900mm height, and 555mm depth for the appliance, with minimum cabinet opening dimensions.

4. Operating Instructions

4.1 Control Panel Overview

The dishwasher features an electronic control panel with an LED display and push-button controls for program selection

and settings.

4.2 Loading the Dishwasher

Arrange dishes to allow water to reach all surfaces. The dishwasher has a capacity for 14 place settings. Utilize the Power Clean Pro area at the rear for heavily soiled items, ensuring they face the powerful water jets.



Figure 3: Interior view of the dishwasher, showing the upper and lower racks for loading dishes.



Figure 4: Close-up of the dishwasher interior, highlighting the Power Clean Pro area at the back for intensive cleaning.

4.3 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill the rinse aid dispenser as needed for optimal drying results.

4.4 Selecting a Wash Program

Choose a wash program suitable for your load. The dishwasher offers various cycle options, including the MultiZone Wash feature, which allows you to wash items in a specific basket (upper or lower) for smaller loads, optimizing water consumption. A delayed start option is also available.

4.5 Starting a Wash Cycle

Close the dishwasher door firmly. Select your desired program and press the start button. The LED display will show the program status.

4.6 NaturalDry Feature

At the end of certain wash programs, the NaturalDry feature automatically opens the dishwasher door slightly to allow natural air circulation, enhancing drying performance and energy efficiency.

5. Care and Maintenance

5.1 Cleaning Filters

Regularly clean the filter system located at the bottom of the dishwasher tub to ensure efficient operation and prevent blockages. Refer to the detailed instructions in the full manual for filter removal and cleaning.

5.2 Cleaning Spray Arms

Periodically check the spray arm nozzles for blockages. If necessary, remove the spray arms and clean the holes to ensure proper water distribution.

5.3 Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. Troubleshooting Guide

Before contacting service, check the following common issues and solutions:

- **Dishwasher does not start:** Ensure the door is fully closed, the power cord is plugged in, and the circuit breaker has not tripped.
- **Dishes are not clean:** Check that spray arms are not blocked, filters are clean, and dishes are loaded correctly. Ensure sufficient detergent is used.
- **Water not draining:** Check for blockages in the drain hose or filter system.
- **Excessive noise:** Ensure dishes are not interfering with spray arms. Check for foreign objects in the tub.
- **Door does not close properly:** Check for obstructions or misaligned racks.

7. Technical Specifications

Feature	Specification
Model Number	WI 7020 PF
Brand	Whirlpool
Type of Construction	Integrated
Control Type	Electronic (LED Display, Push-button)
Capacity	14 Place Settings
Energy Efficiency Class	E
Noise Level	46 dB
Water Consumption per Cycle	9.5 Liters
Standard Cycle Duration	3 hours 10 minutes
Connection Power	1900 W
Current Intensity	10 A
Voltage	220-240 V
Frequency	50 Hz
Power Cable Length	130 cm
Inlet Hose Length	155 cm
Outlet Hose Length	150 cm
Product Dimensions (W x H x D)	Approx. 598mm x 820-900mm x 555mm (Refer to installation diagram)
Product Weight	50 kg

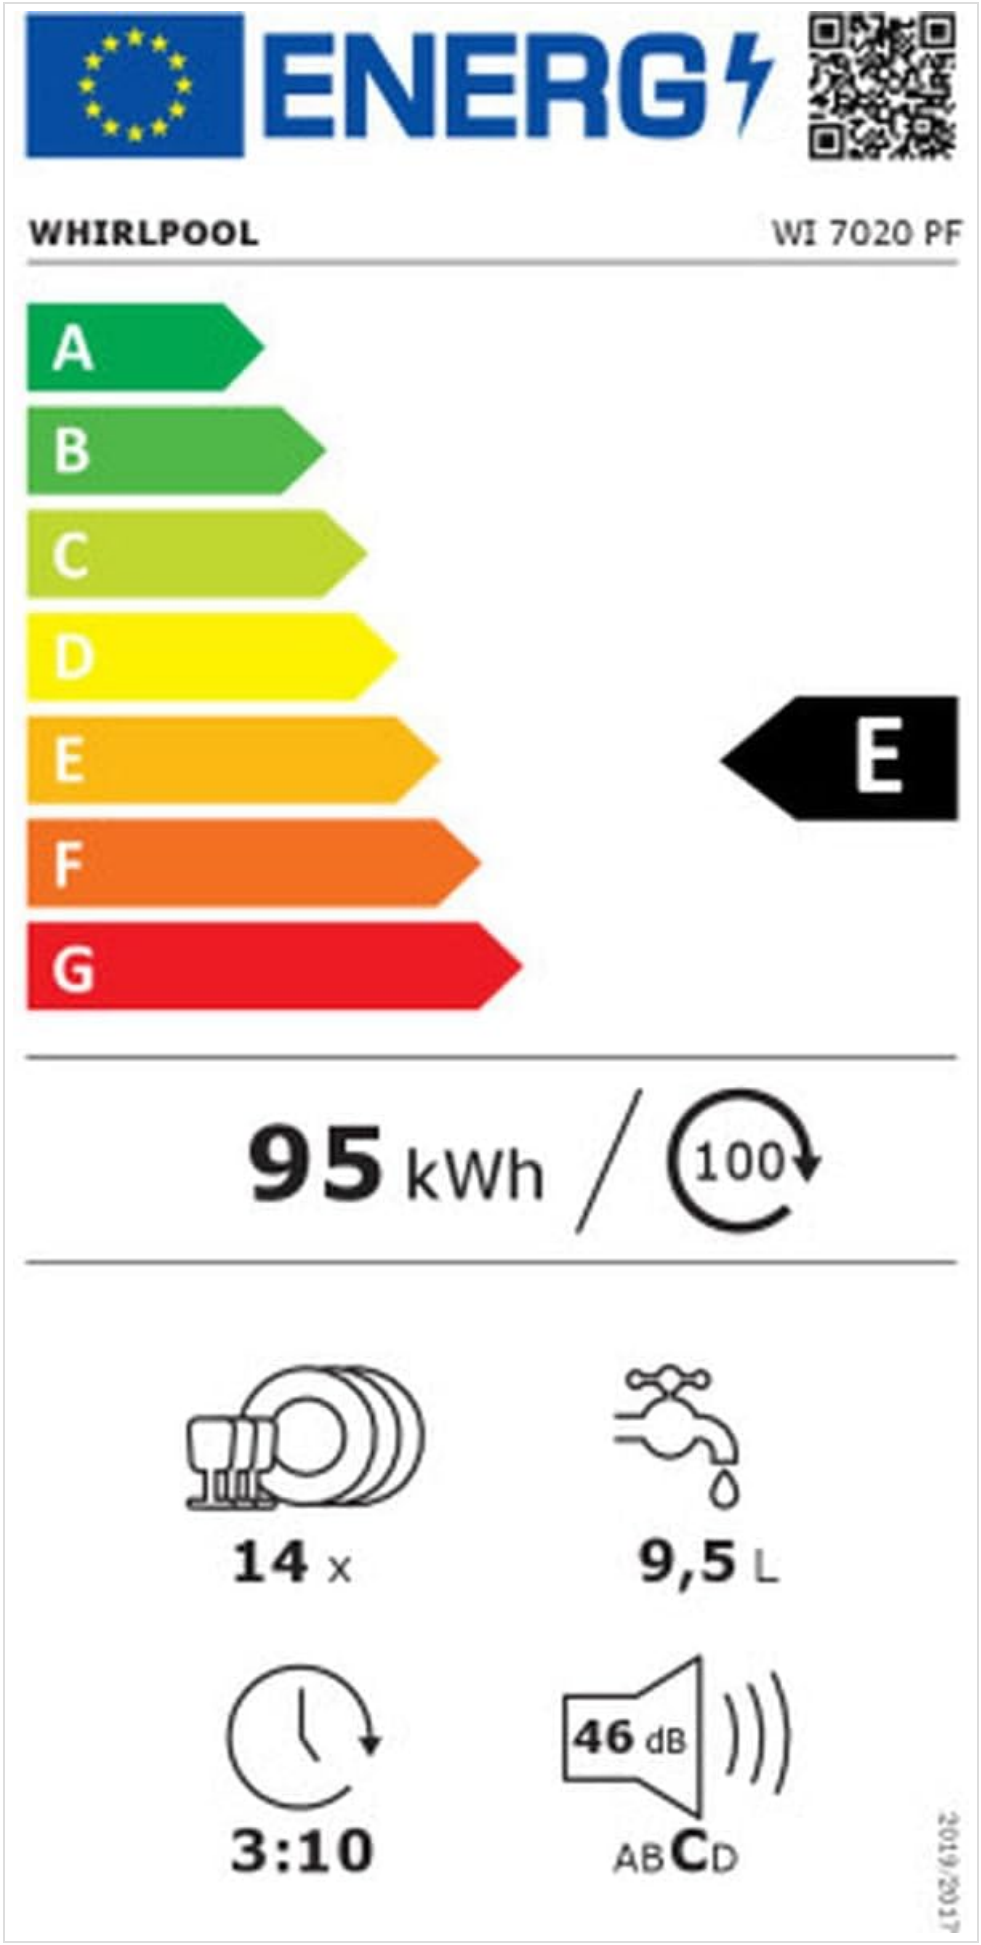


Figure 5: Energy label for the Whirlpool WI 7020 PF Dishwasher, showing Energy Class E, 95 kWh/100 cycles, 14 place settings, 9.5 L water/cycle, 46 dB noise, and 3:10 cycle duration.

8. Warranty and Support

Your Whirlpool appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer support or visit the official Whirlpool website.

You can find more information and support on theWhirlpool Brand Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question