EAST OAK SCH23002

EAST OAK Screen House Tent User Manual

Model: SCH23002
Brand: EAST OAK

Important Safety Information

Please read and understand all safety warnings before setting up or using your EAST OAK Screen House Tent.

- **Wind Conditions:** DO NOT recommend using when the wind force reaches level 6 (+24 Mph). Pay close attention to the weather. If extreme weather is in the forecast, pack up screen house and evacuate to a safe place.
- **Placement:** Choose a flat, well-drained area with firm ground to pitch the screen house.
- **Stability:** It is required to install all guylines, sandbags and ground stakes for maximum wind resistance and stability.
- **Fire Safety:** Do not assemble or use the screen house close to a bonfire, fireworks, or flammable environments. Flying sparks can create holes in the tent fabric.
- **Handling:** DO NOT drag the product (including the handbag) on the ground, this can cause the cloth to tear. Keep away from sharp items to prevent cuts, rips, and other damage.
- **Water Resistance:** This screen house is not waterproof.
- **Storage:** Please put the screen house away when not in use.

What's Included

The EAST OAK Screen House Tent package includes the following components:



Figure 1: Included Components - This diagram illustrates all parts included with your screen house: 12 Ground Stakes, 6 Guylines, 1 Carry Bag, 6 Sandbags, and 3 Telescoping Poles.

- EAST OAK Screen House Tent (Main Unit)
- Carry Bag
- Ground Stakes (12 pcs)
- Guylines (6 pcs)
- Sandbags (6 pcs)
- Telescoping Poles (3 pcs)

Setup Instructions

The EAST OAK Screen House Tent features a convenient pop-up design for quick and easy installation.

Step-by-Step Assembly:

1. **Unpack:** Take the screen house out of its zip-up carry bag and remove the elastic band securing it.
2. **Pop-Up:** Hold the top of the screen house with your hands (holding all panels). Throw it forward in a vertical position. The screen house will pop up automatically.
3. **Adjust Shape:** Make the screen house upright. Pull open each panel from the inside to the outside, and adjust it properly to a regular hexagon shape.
4. **Secure Panels:** Fasten the buckles on the panels to maintain the hexagonal shape.
5. **Install Poles:** Connect the telescoping poles with both ends downwards. Pass them through the woven tapes on the ceiling. Insert them into the small bags marked with red circles, and secure them with the touch fasteners on the side. Ensure all 3 poles are installed.
6. **Tighten Ceiling:** After installing all 3 poles, draw the woven tape in the center to the tightest extent, and fix the position.
7. **Ground Anchoring:**
    - **For Ground/Grass:** Fix the screen house on the ground with ground stakes and connect it with guylines for added stability.
    - **For Cement/Hard Floor:** You may fill the provided sandbags with sand and soil, and connect them with guylines to secure the tent.

Your browser does not support the video tag.

Video: How to Assemble the Screen House 10*10 & 12*12 - This official video demonstrates the step-by-step assembly process for the EAST OAK Screen House Tent, including setting up the frame, installing poles, and securing the tent.

Folding and Storage

Folding the EAST OAK Screen House Tent is designed to be quick and easy for convenient storage and transport.

Step-by-Step Folding:

1. **Flatten Panels:** Zip up all zippers on the screen house and fold all panels flat. Be careful to prevent distortion and shake it vigorously to flatten it. Check for any distortion beforehand.
2. **Fold Head to Tail:** Fold the panel head (marked 'A' in the video) to the tail. It's important to avoid pulling in the middle to prevent wire twisting. Leave a 2-4 inch gap for easier folding.
3. **Combine Sides:** Combine the left side (marked 'B') and right side (marked 'C') panels, leaving some vertical misalignment. Secure the B and C sides.
4. **Push Inward:** Push panel 'A' inward. Then, lay panels 'B' and 'C' down in sequence.
5. **Secure and Bag:** Use the elastic band to bind the folded tent and place it back into the carry bag.

Your browser does not support the video tag.

Video: How to Fold Screen House in 3 Quick Steps - This official video provides a concise guide on how to efficiently fold your screen house tent for compact storage.

Features and Benefits

- **Bug-Proof & Ventilated:** Features a 4-sided B3 fine mesh design for 360° ventilation, protecting against mosquitoes and bugs.
- **UV Protection:** Tent body made of high-quality Oxford fabric with anti-UV silver coating for UPF 50+ UV protection.
- **Easy Pop-Up Design:** Can be installed by a single person in under one minute.
- **Spacious Interior:** The 10x10 FT model is suitable for 4-6 people, offering comfortable and breathable space.
- **Durable Construction:** Frame made of durable 300D Oxford fabric and rust-resistant steel structure. Heavy-duty fiberglass supports the top to prevent water accumulation.
- **Enhanced Stability:** Reinforced steel main structure, stronger and more stable than comparable brands. Includes guylines, sandbags, and stakes for wind resistance.
- **User-Friendly Details:** Dual-sided zippers with double stitching for durability. Door curtains can be fixed to the side for easy access. Includes a hook on the top for hanging lamps or lights (lights sold separately).



Figure 2: Spacious Interior - The 10x10 FT screen house provides ample space for outdoor gatherings and relaxation.



Figure 3: Easy Pop-Up Installation - The tent's design allows for quick and effortless setup by one person.

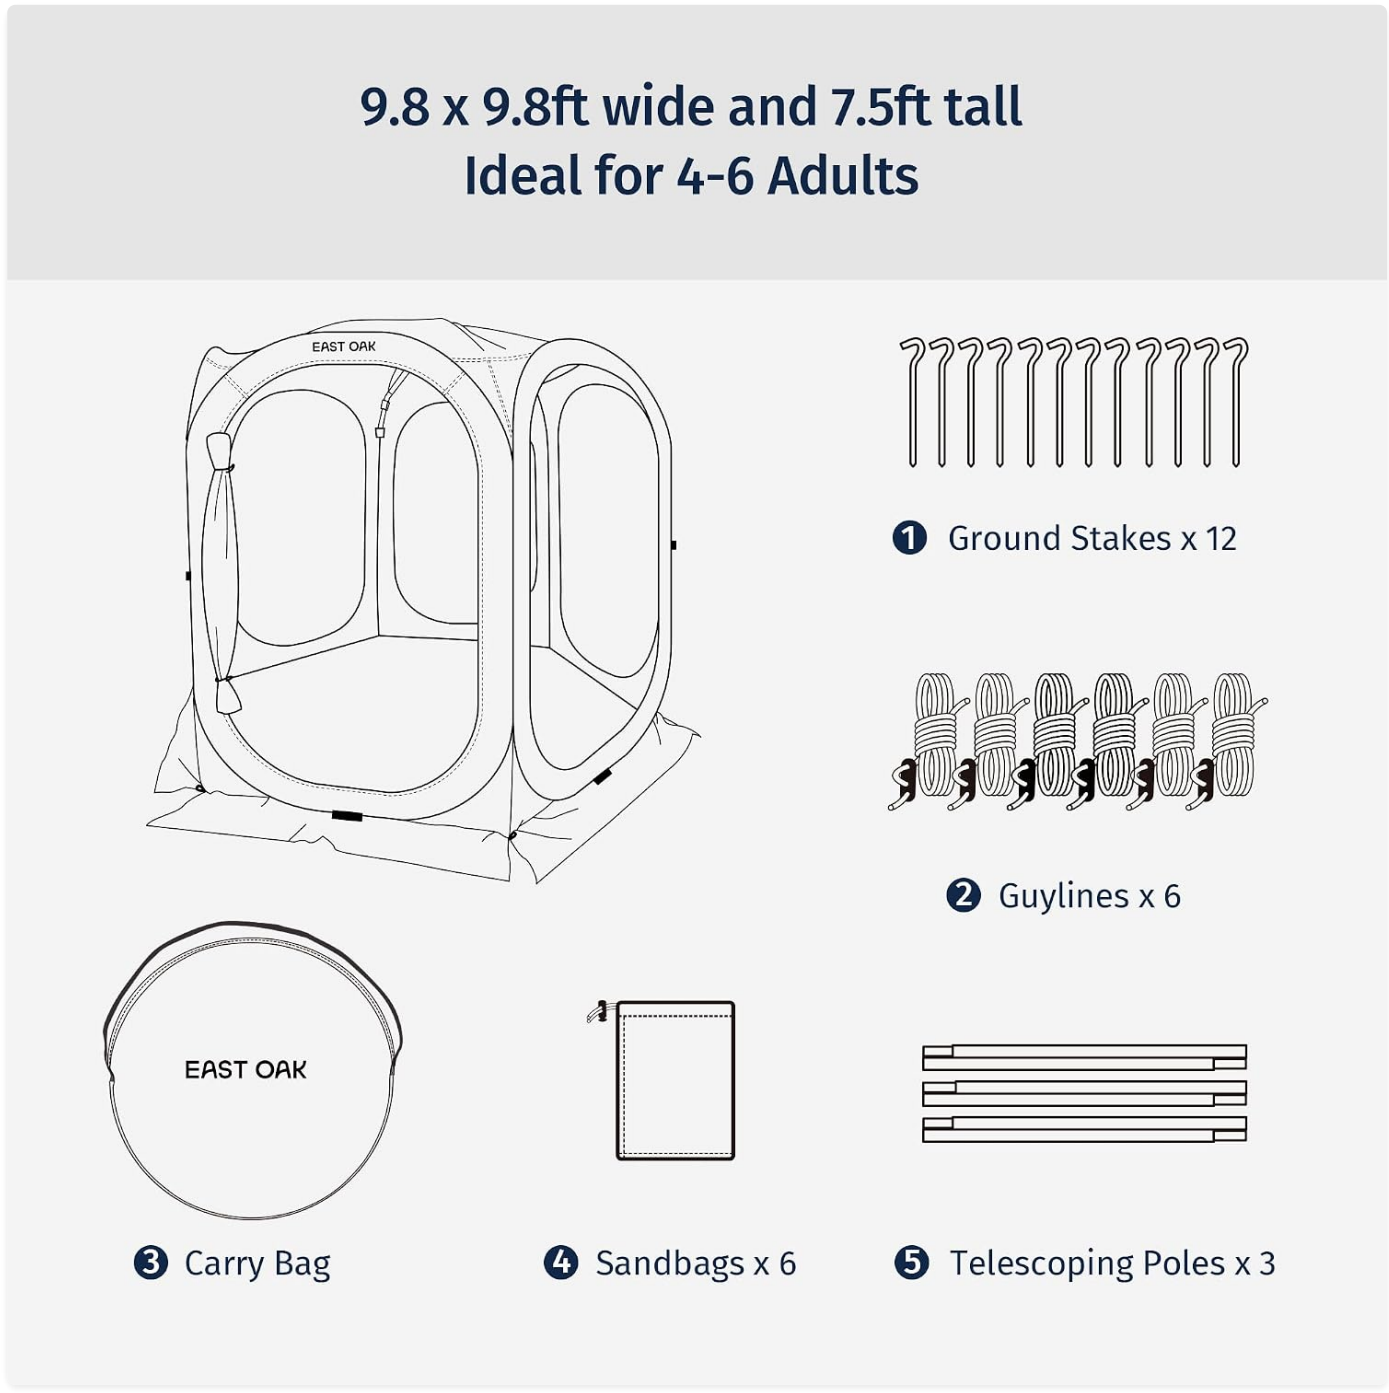


Figure 4: Bug-Resistant Mesh - The ultrafine mesh ensures a bug-free environment while maintaining excellent ventilation.



Figure 5: Night Use Features - A top hook allows for easy attachment of string lights or lanterns for extended use into the evening.

Specifications

Brand	EAST OAK
Model Number	SCH23002
Material	Alloy Steel, Fabric, Fiberglass
Color	Beige
Product Dimensions	117.6"L x 117.6"W x 90"H (10 x 10 feet coverage)

Item Weight	23.4 pounds
UV Protection	Yes (UPF 50+)
Water Resistance Level	Not Water Resistant
Assembly Required	Yes
UPC	850039974892

Warranty and Support

EAST OAK products are designed for quality and durability. For any assistance or warranty inquiries, please refer to the following contact information:

- **Website:** www.eastoak.com
- **Email Support:** support@eastoak.com
- **Phone Support:** 1-833-EAST-OAK
- **Warranty Information:** EAST OAK offers best-in-class warranties for their products. Please visit their official website or contact support for specific warranty details related to your screen house tent.
- **Around-the-Clock Assistance:** Expert assistance is available to help with any product-related questions or issues.

© 2025 EAST OAK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question