PINDOWS SG-PDS-9201-N1

PINDOWS SG-PDS-9201-N1 Digital Sports Watch User Manual

Model: SG-PDS-9201-N1 | Brand: PINDOWS

Introduction

This manual provides detailed instructions for the operation and maintenance of your PINDOWS SG-PDS-9201-N1 Digital Sports Watch. Please read this manual thoroughly to ensure proper use and to fully utilize all features of your watch.



Image: Front view of the PINDOWS SG-PDS-9201-N1 Digital Sports Watch, displaying the digital time, day, and various function indicators.

Watch Components and Functions

Familiarize yourself with the buttons and display elements of your watch:



Image: Diagram of the PINDOWS SG-PDS-9201-N1 watch highlighting the four main buttons and their primary functions.

- **1. Light Button:** Activates the LED backlight for illumination.
- **2. Start/Pause Button:** Used to start and pause the stopwatch, and to adjust settings in various modes.
- **3. Mode Button:** Cycles through different watch modes (Time, Alarm, Stopwatch, World Time).
- **4. Adjustment Button:** Used to reset the stopwatch, and to confirm or exit settings in various modes.

Key features indicated on the watch include Auto LED Light, Synchronous display, World Time (48 cities), Alarm Function, 50m Waterproof rating, Stopwatch Timing, Calendar week display, Hourly Chime, and 12/24-Hour Format.

Setup and Initial Configuration

Setting the Time and Date

1. In Timekeeping Mode, press and hold the **Mode Button** until the seconds begin to flash, indicating setting mode.
2. Press the **Adjustment Button** to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day → 12/24H Format.
3. Use the **Start/Pause Button** to increase the flashing value. Hold the button to rapidly advance the value.
4. Once all settings are configured, press the **Mode Button** to exit the setting mode.

12/24-Hour Format Selection

During time setting, when the 12/24H format is flashing, press the **Start/Pause Button** to toggle between 12-hour (with PM indicator) and 24-hour formats.

Operating Modes

Press the **Mode Button** to cycle through the following modes:

- **Timekeeping Mode:** Displays current time, day, and date.
- **Alarm Mode:** Set and activate daily alarms.
- **Stopwatch Mode:** Measure elapsed time.
- **World Time Mode:** View times in different time zones.

Using the Alarm

1. From Timekeeping Mode, press the **Mode Button** until you reach Alarm Mode.
2. Press and hold the **Start/Pause Button** until the alarm hour flashes.
3. Use the **Adjustment Button** to select the hour, then press **Start/Pause Button** to select minutes.
4. Use the **Adjustment Button** to set the desired hour and minute.
5. Press the **Mode Button** to exit alarm setting.
6. In Alarm Mode, press the **Start/Pause Button** to toggle the alarm ON/OFF. An alarm icon will appear when active.

Using the Stopwatch

1. From Timekeeping Mode, press the **Mode Button** until you reach Stopwatch Mode. The display will show "00:00:00".
2. Press the **Start/Pause Button** to start the stopwatch.
3. Press the **Start/Pause Button** again to pause the stopwatch.
4. Press the **Adjustment Button** to reset the stopwatch to "00:00:00" while it is paused.

LED Backlight Function

Press the **Light Button** to illuminate the watch face. The watch features an automatic LED light that provides clear visibility in low-light conditions.

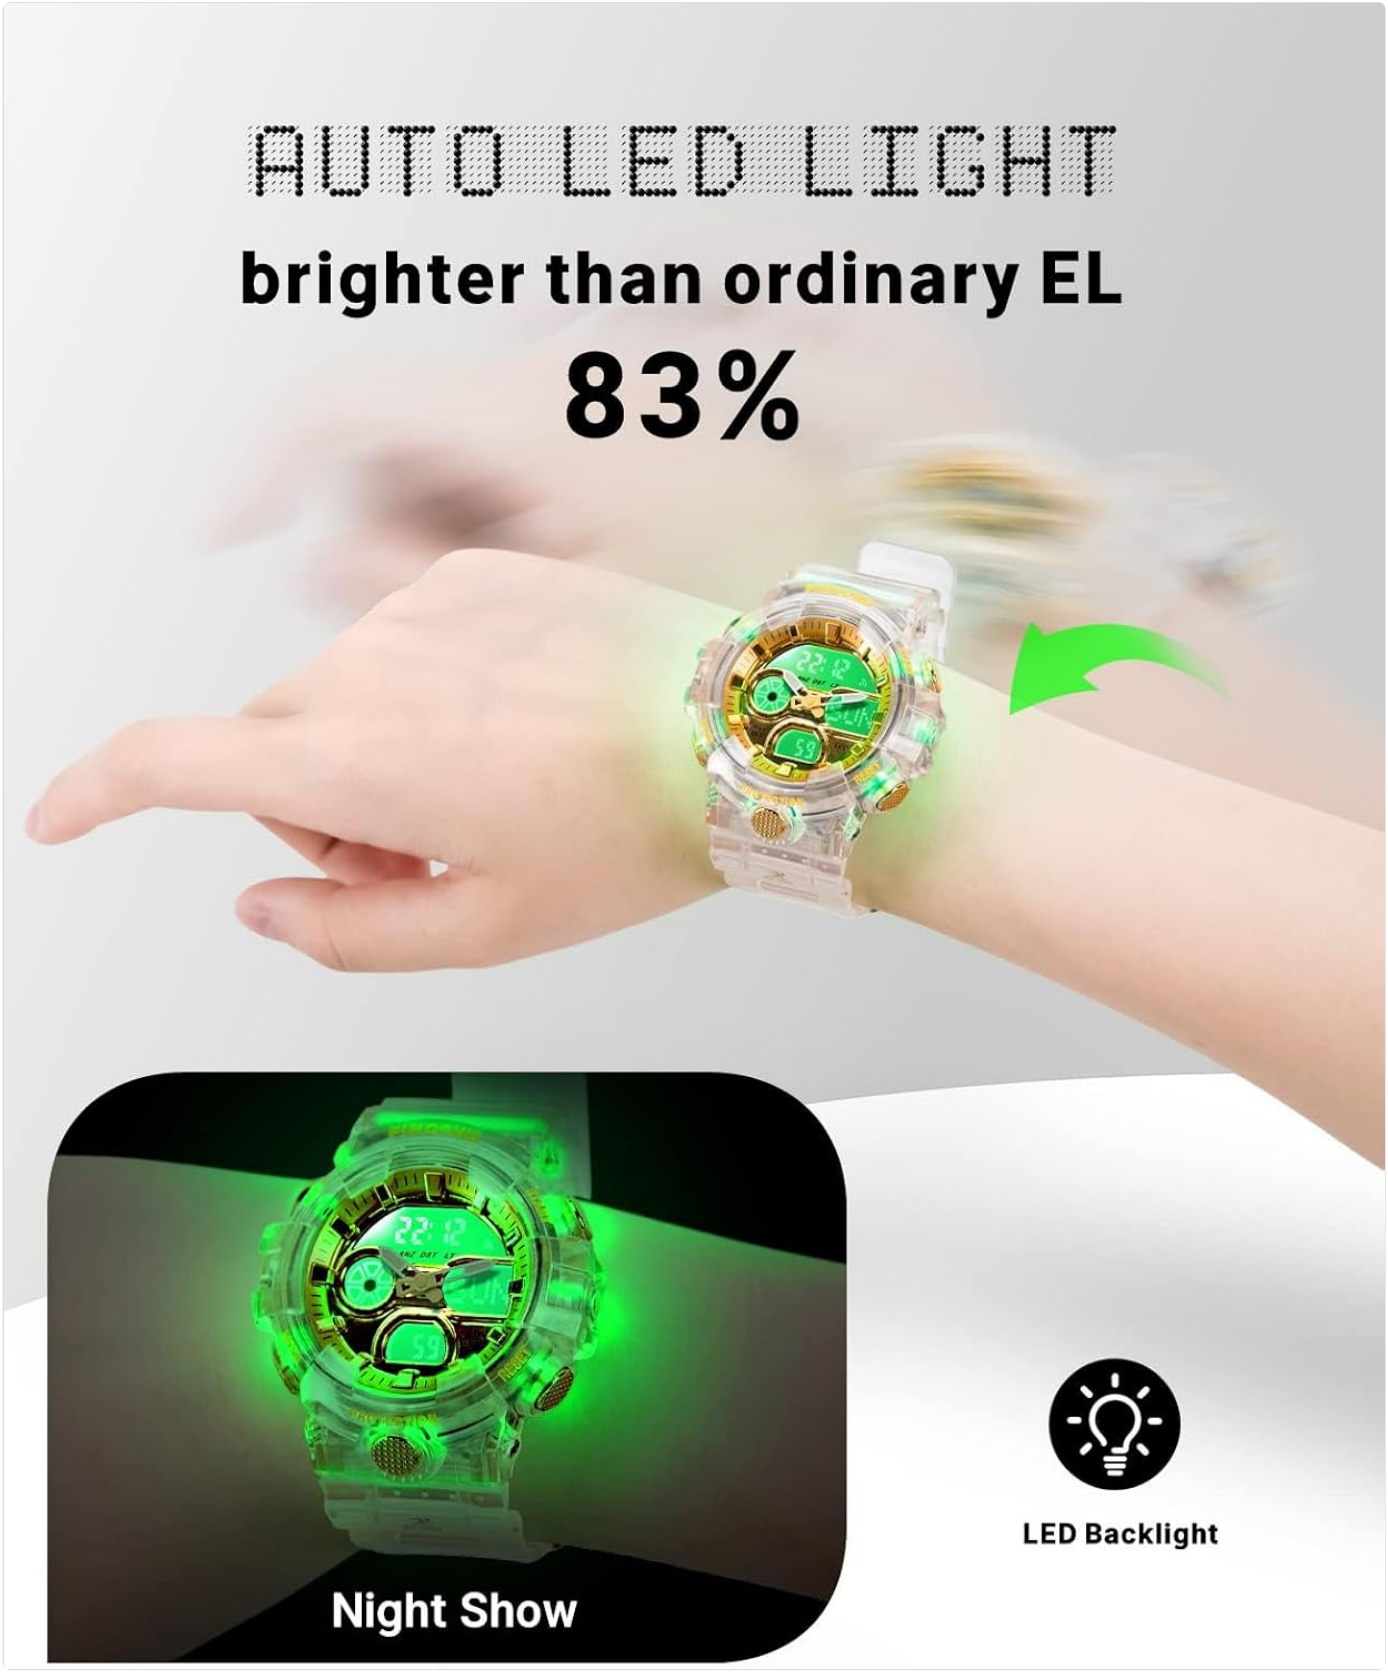


Image: The watch display illuminated by its green LED backlight, demonstrating enhanced visibility in the dark.

Hourly Chime

The hourly chime can be activated or deactivated in Alarm Mode. While in Alarm Mode, press the **Adjustment Button** to toggle the hourly chime ON/OFF. A small icon will indicate when the hourly chime is active.

World Time

Access World Time Mode by pressing the **Mode Button**. In this mode, you can view the current time in 48 different cities/time zones. Use the **Start/Pause Button** to cycle through the available cities.

Maintenance and Care

Water Resistance (5 ATM)

Your PINDOWS watch is rated for 5 ATM (50 meters) water resistance. This means it is suitable for daily use, including hand washing, light rain, and showering. It is not recommended for swimming, diving, or prolonged submersion in water, especially hot water, as steam can penetrate the seals.



Image: Visual representation of the watch's 5ATM water resistance, indicating suitability for hand washing, swimming, and exposure to rain.

- Do not operate buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperature changes.

- After exposure to saltwater, rinse the watch with fresh water and wipe it dry.

Cleaning

Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.

Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

Troubleshooting

- **Watch display is blank or dim:**

  This usually indicates a low battery. Replace the battery as described in the Maintenance section.

- **Time is incorrect:**

  Re-set the time and date following the instructions in the Setup section. Ensure the 12/24-hour format is correctly selected.

- **Buttons are unresponsive:**

  Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If the issue persists, a low battery might be the cause, or there could be an internal malfunction. Consult a technician.

- **Water appears inside the watch:**

  Immediately stop using the watch and seek professional service. This indicates a breach in the water resistance seals, which can lead to permanent damage.

Specifications

Model Number	SG-PDS-9201-N1
Brand	PINDOWS
Display Type	Digital
Water Resistance	5 ATM (50 meters)
Functions	Time, Date, Day, Alarm, Stopwatch, World Time, LED Backlight, Hourly Chime, 12/24-Hour Format
Approximate Dimensions	Case Diameter: 42mm (1.65in), Case Thickness: 17mm (0.67in), Band Width: 18mm (0.7in)
Approximate Weight	50g

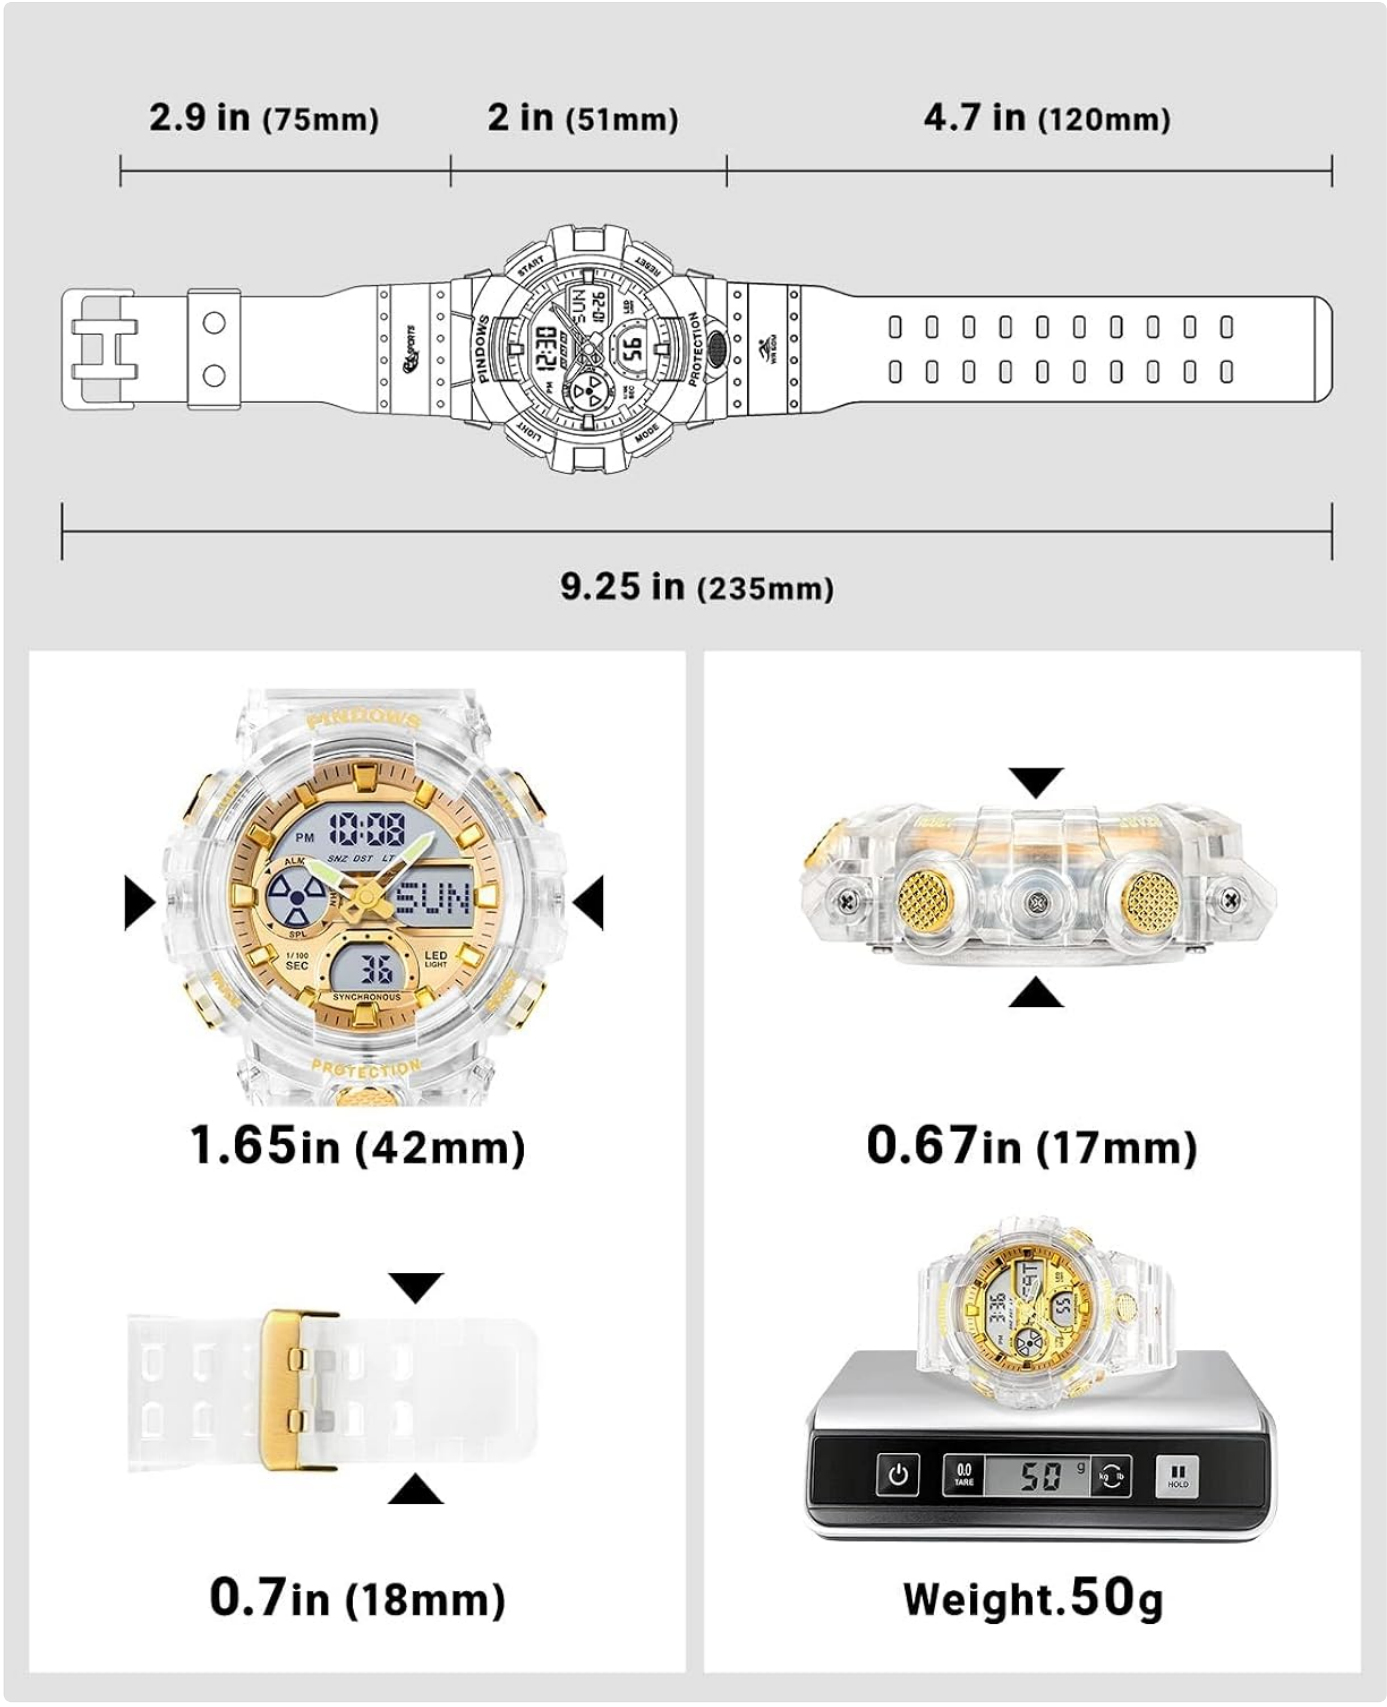


Image: Detailed measurements of the watch case, band, and overall weight.

Warranty and Support

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact PINDOWS customer service through their official website or authorized retailers. Keep your proof of purchase for warranty claims.

© 2023 PINDOWS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question