Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WINGBO SYCF5405

WINGBO 54 Inch Flush Mount DC Ceiling Fan Instruction Manual

Model: SYCF5405
Brand: WINGBO

1. Introduction

This manual provides detailed instructions for the safe installation, operation, and maintenance of your WINGBO 54 Inch Flush Mount DC Ceiling Fan. Please read this manual thoroughly before installation and retain it for future reference. Proper installation and use are essential for optimal performance and safety.

Image: The WINGBO DC Ceiling Fan designed for quiet operation and efficient air movement.

2. Safety Information

WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these guidelines:

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. Consult a qualified electrician if you are unsure.
- The fan must be mounted to a ceiling joist or a suitable support structure capable of supporting the fan's weight (approximately 15.17 lbs).
- Do not bend the blade holders during installation, balancing, or cleaning.
- Keep hands, tools, and other objects clear of the fan blades when the fan is operating.
- This fan is designed for indoor use and is suitable for damp locations.

3. Package Contents

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact WINGBO customer service.

- Ceiling Fan Motor Housing
- 4 Carved Wood Blades

- Remote Control with Wall Holder
- Mounting Bracket
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual



Image: WINGBO 54 Inch Flush Mount DC Ceiling Fan and its remote control.

4. Specifications

Brand	WINGBO
Model Name	SYCF5405
Color	Black and Walnut
Electric Fan Design	Ceiling Fan
Power Source	DC
Style	Modern
Product Dimensions	54"D x 54"W x 11"H

Room Type	Bedroom, Living Room, Covered Outdoor (Damp Rated)
Special Feature	No Light
Number of Blades	4
Blade Length	54 Inches
Voltage	24 Volts (DC)
Control Method	Remote
Number of Power Levels	6 (Speeds)
Item Weight	15.17 pounds
Certification	ETL Listed

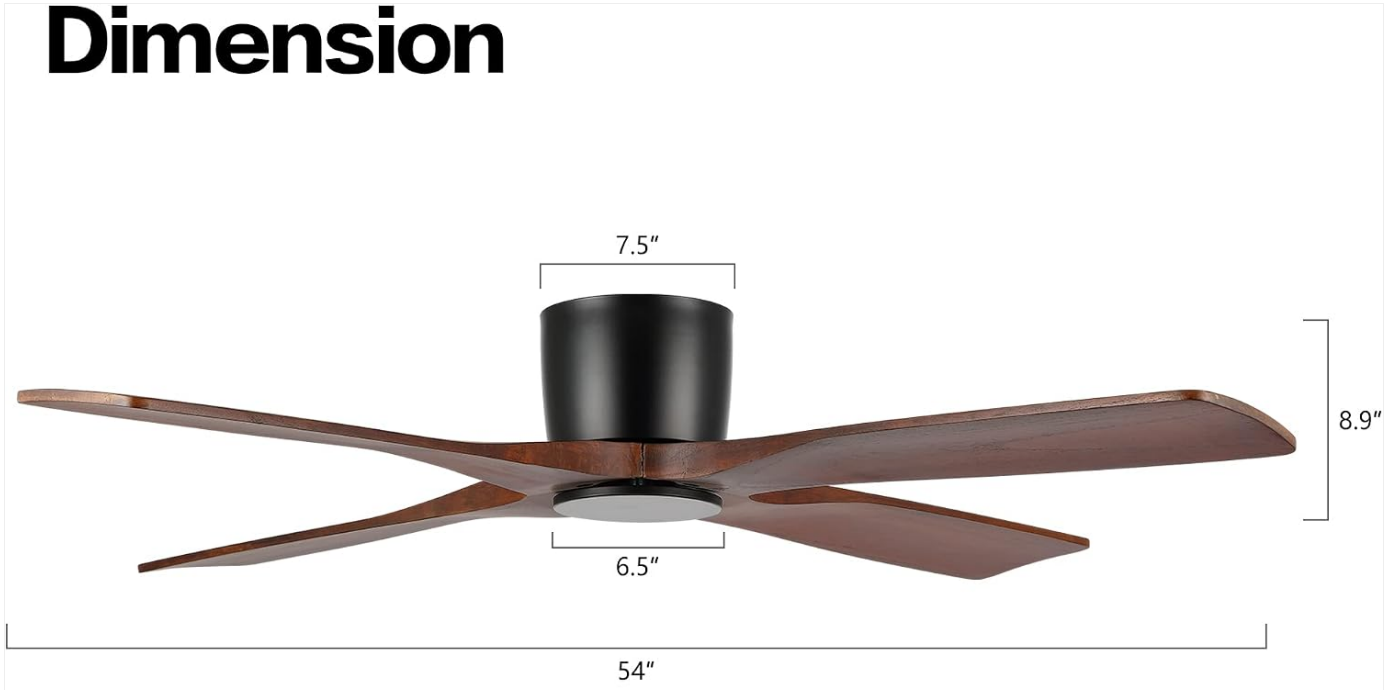


Image: Diagram showing the fan's dimensions (54" width, 8.9" height) and a close-up of the flush mount installation.

Image: Visual summary of fan features including DC motor, flush mount, reversible, easy control, quick install, and recommended room size of 12'x12' to 18'x18'.



Image: The WINGBO ceiling fan installed in a living room, bedroom, and covered outdoor area, demonstrating its versatile application.

5. Installation Instructions

Before You Begin: Ensure power is disconnected at the main circuit breaker. Read all instructions carefully.

5.1 Mounting the Bracket

1. Locate a suitable ceiling joist or outlet box rated for fan support.
2. Secure the mounting bracket to the ceiling using appropriate screws and washers. Ensure it is firmly attached.

5.2 Wiring the Fan

1. Connect the household supply wires to the fan wires according to local electrical codes. Typically, black to black (live), white to white (neutral), and green/bare copper to green (ground).
2. Carefully tuck all wires and the remote receiver into the ceiling outlet box.

5.3 Attaching the Fan Body and Blades

1. Lift the fan motor assembly and attach it to the mounting bracket. Secure with screws.
2. Attach the 4 carved wood blades to the motor housing using the provided screws. Ensure each blade is securely fastened.



Image: Detailed view of the fan's central hub and how the wooden blades connect, highlighting the flush mount design.



Image: Close-up of a single fan blade, emphasizing its solid wood construction and smooth finish.

6. Operating Instructions

Your WINGBO ceiling fan is controlled by the included remote. Ensure batteries are installed correctly in the remote before use.



Image: The remote control with labels for fan speed (1-6), follow/reverse mode, and nature mode buttons.

6.1 Remote Control Functions

- **Power On/Off:** Press the power button to turn the fan on or off.
- **Fan Speed (1-6):** Use buttons 1 through 6 to select your desired fan speed. 1 is the lowest, 6 is the highest.
- **Reverse Mode:** Press the "Follow/Reverse" button to change the direction of the fan blades. This is useful for seasonal adjustments.
- **Nature Mode:** Activates a varying speed setting to simulate natural breezes.
- **Timer Function (1H, 2H, 4H, 8H):** Press the desired button to set the fan to turn off automatically after 1, 2, 4, or 8 hours.

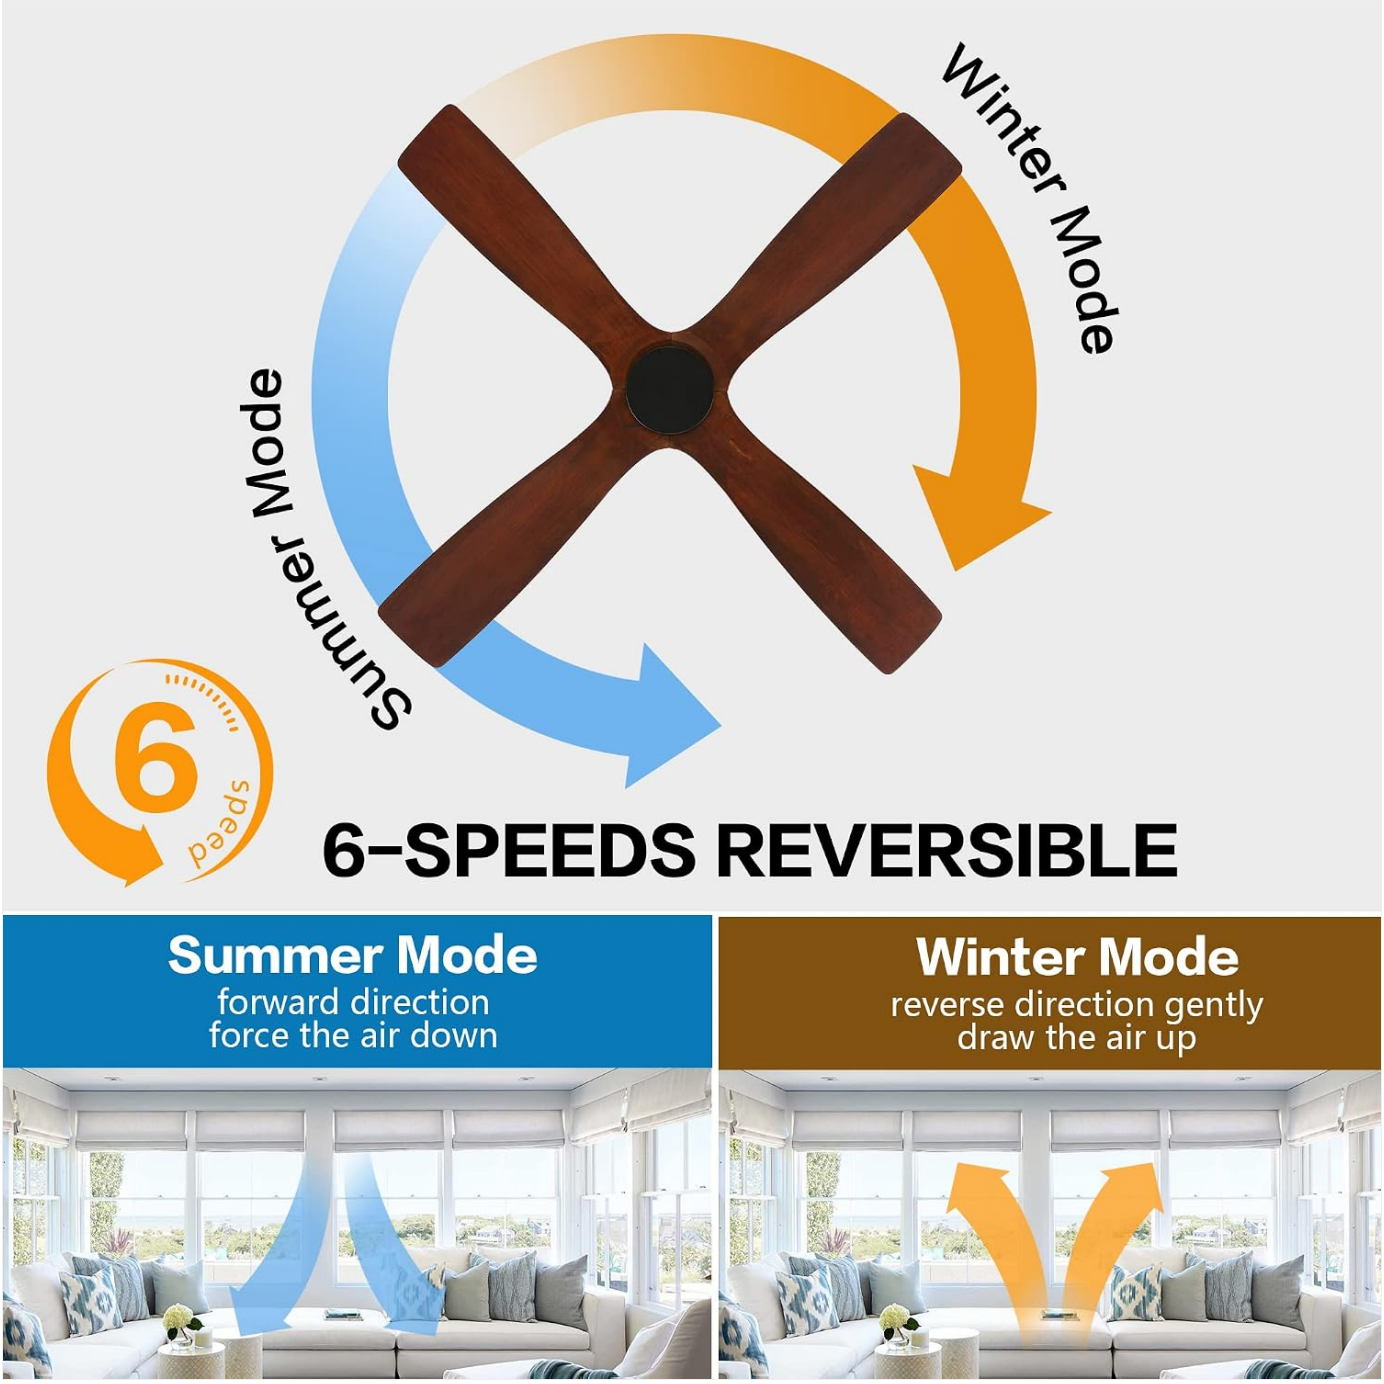


Image: Diagram illustrating the reversible function: Summer Mode (forward direction, air down) and Winter Mode (reverse direction, air up).

Image: Visual representation of the fan's reversible function, showing airflow direction for both summer (downdraft) and winter (updraft) modes, emphasizing the quiet operation.

6.2 Seasonal Operation

- **Summer Mode:** Set the fan to rotate counter-clockwise (forward direction) to create a downdraft, producing a cooling effect.
- **Winter Mode:** Set the fan to rotate clockwise (reverse direction) to create an updraft, circulating warm air near the ceiling throughout the room.



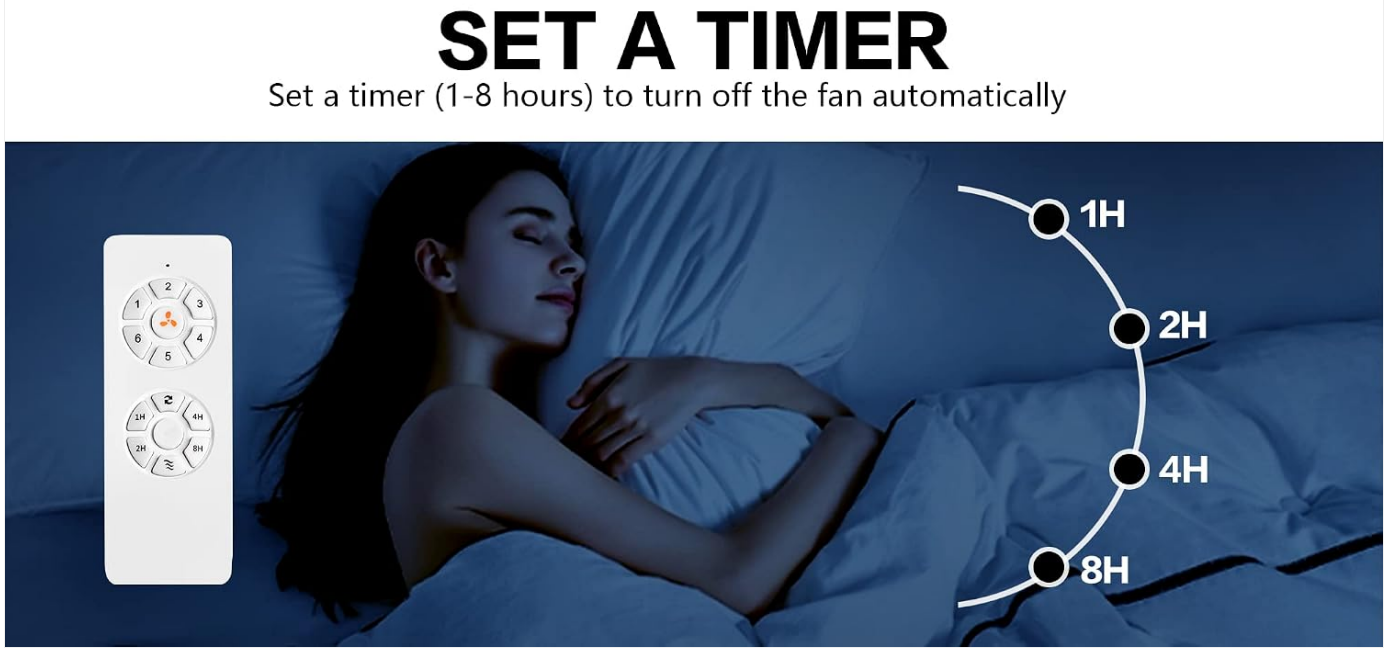


Image: A person sleeping with the fan operating, illustrating the 1-8 hour timer function on the remote control.

7. Maintenance

Regular maintenance ensures the longevity and optimal performance of your fan.

- **Cleaning:** Periodically clean the fan blades and motor housing with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Tighten Fasteners:** Check all screws and fasteners annually to ensure they are secure.
- **Blade Care:** The solid wood blades are resistant to warping. Avoid exposing them to excessive moisture or direct sunlight for prolonged periods.

8. Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low or not paired.	Check circuit breaker; Verify all wire connections are secure; Replace remote battery or re-pair remote (refer to remote instructions).
Fan wobbles excessively	Loose blades or mounting hardware; Unbalanced blades.	Ensure all blade screws and mounting screws are tight; Use a blade balancing kit (not included) if necessary.
Noisy operation	Loose screws; Motor hum; Blades hitting an obstruction.	Check and tighten all screws; Ensure no wires or objects are touching the fan; DC motors are generally quiet, but some hum can be normal.
Remote control not working	Dead batteries; Remote not paired with receiver; Obstruction between remote and receiver.	Replace batteries; Re-pair remote with fan receiver (consult remote manual); Ensure clear line of sight.

9. Warranty and Support

For warranty information or technical support, please contact WINGBO customer service. Keep your purchase receipt as proof of purchase.
You can visit the official WINGBO store for more information and support:WINGBO Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B9RB8LFC

More documents and user manuals: **https://manuals.plus/**