Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WINGBO SYCF5405

WINGBO 54 Inch Flush Mount DC Ceiling Fan Instruction Manual

Model: SYCF5405

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your WINGBO 54 Inch Flush Mount DC Ceiling Fan. This fan features 4 reversible carved wood blades, a 6-speed noiseless DC motor, and is designed for flush mounting, making it suitable for rooms with 7-10ft ceiling heights.

The fan is engineered for efficient and quiet air delivery, offering both summer (downdraft) and winter (updraft) modes to optimize air circulation throughout the year. Its minimalist design with solid white blades complements modern home aesthetics.

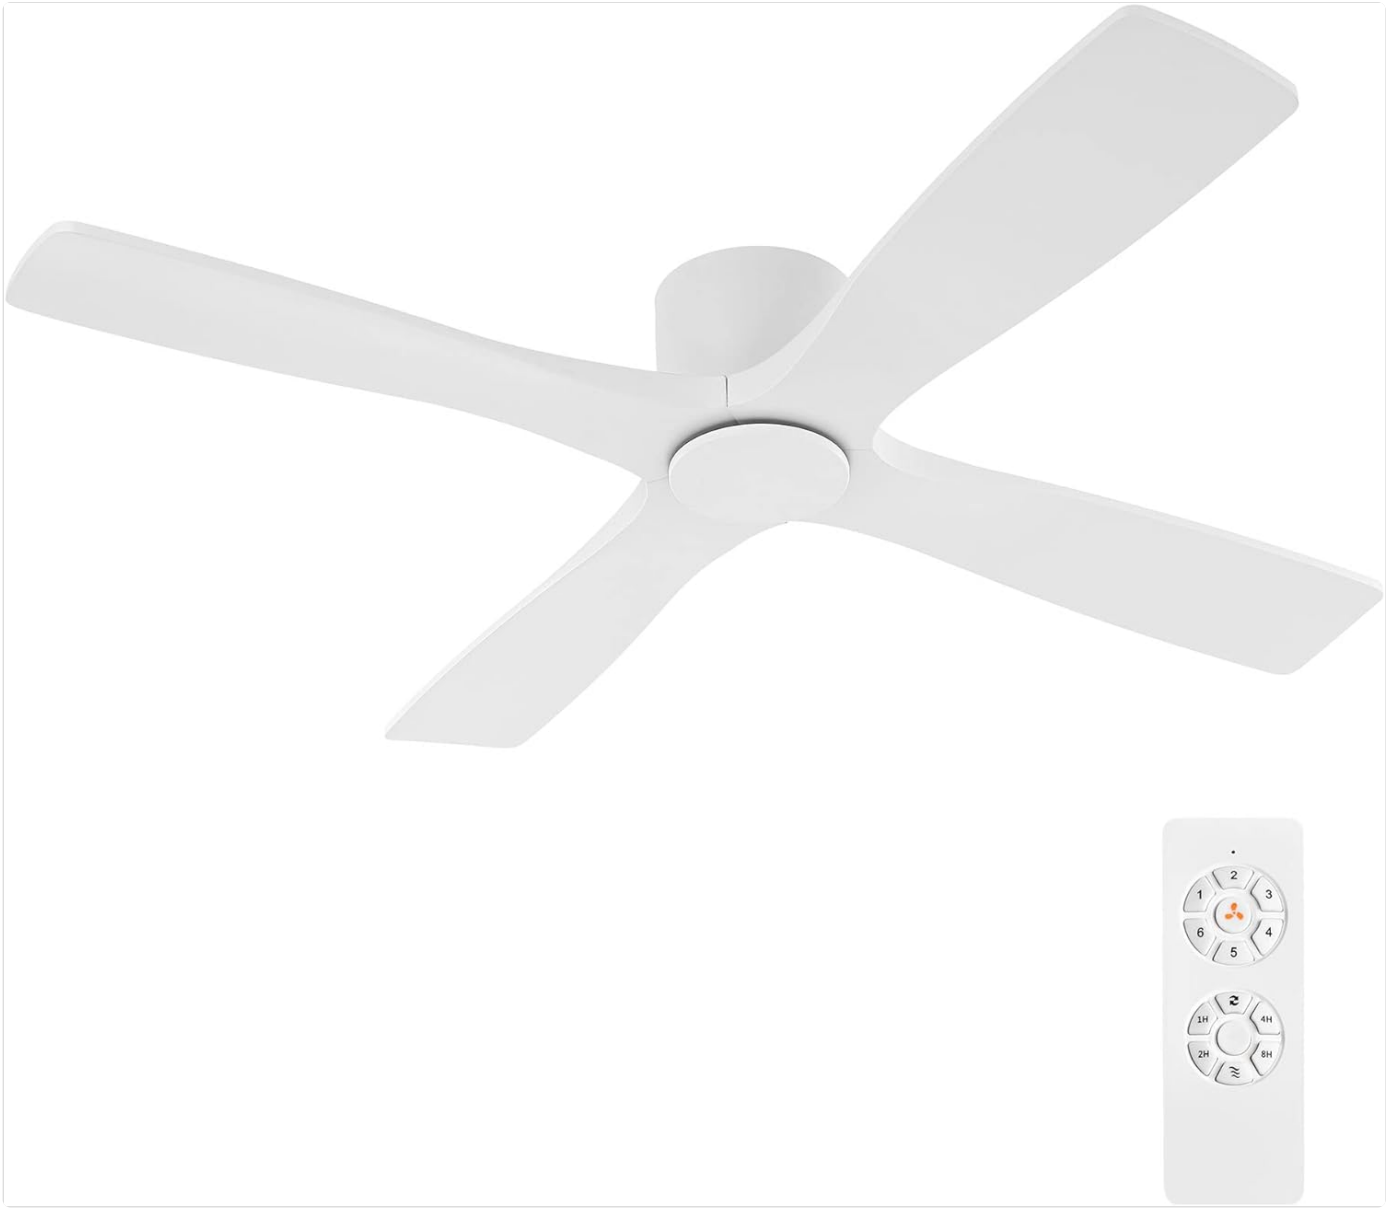


Image: WINGBO 54 Inch Flush Mount DC Ceiling Fan with remote control.

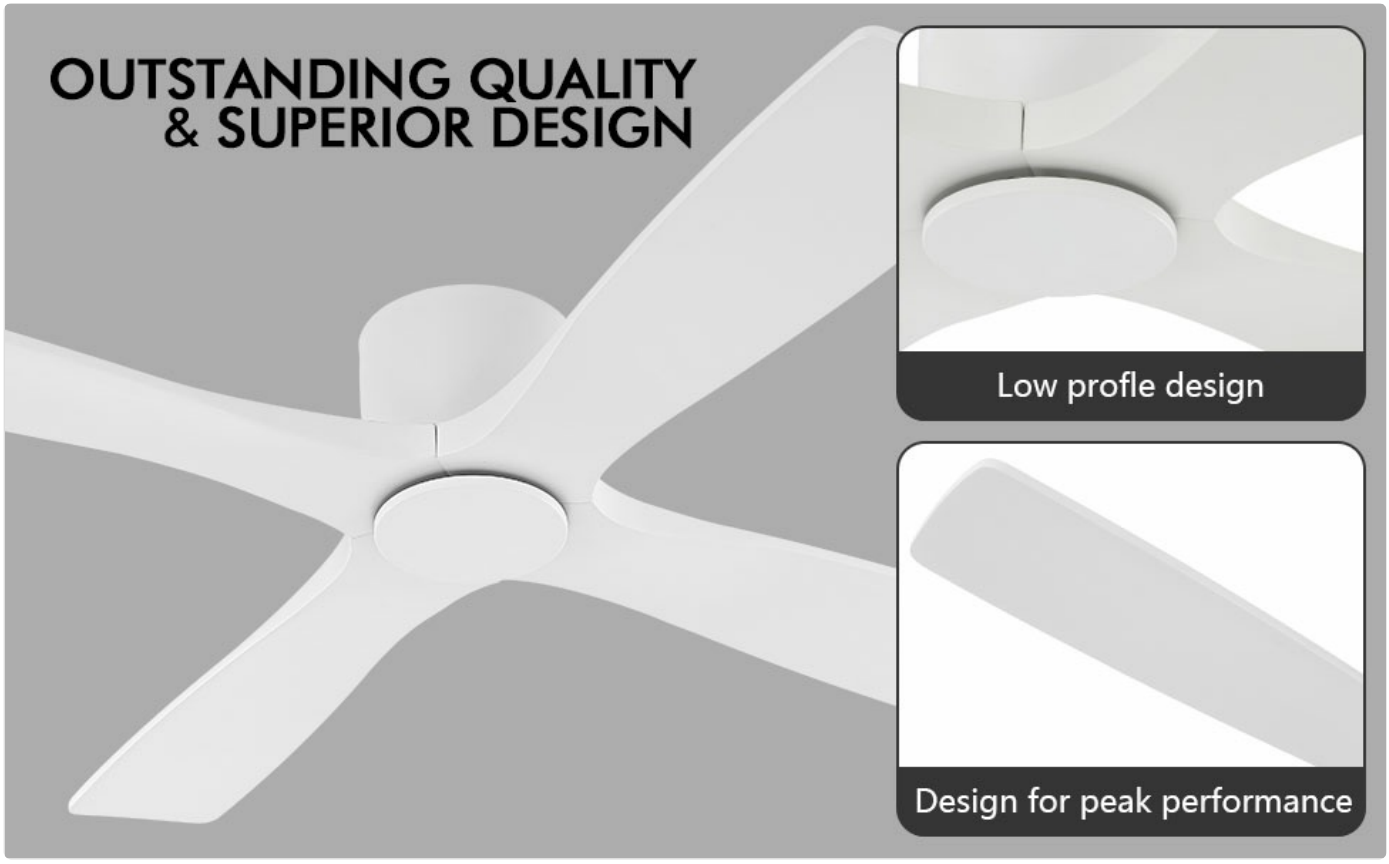


Image: Close-up view highlighting the low profile design and blade quality.

Safety Information

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 14.67 pounds).
- Do not operate the fan with damaged blades or housing.
- Keep hands, hair, and clothing clear of the fan blades when operating.
- This fan is suitable for indoor use in dry locations.

Package Contents

Verify that all components listed below are included in your package. If any parts are missing or damaged, contact customer support.

- Fan Motor Assembly
- Fan Blades (4)
- Mounting Bracket
- Canopy
- Remote Control
- Receiver
- Hardware Pack (screws, wire nuts, washers)
- Instruction Manual

Specifications

Feature	Detail
Brand	WINGBO
Model Name	SYCF5405
Size	54 inches
Number of Blades	4
Blade Material	Wood
Power Source	DC Motor
Control Method	Remote
Number of Power Levels	6 Speeds
Special Feature	No Light, Reversible Airflow
Room Type	Bedroom, Living Room, Covered Outdoor
Product Dimensions	54"D x 54"W x 11"H
Item Weight	14.67 pounds (6.67 Kilograms)
Efficiency	High/Energy-efficient

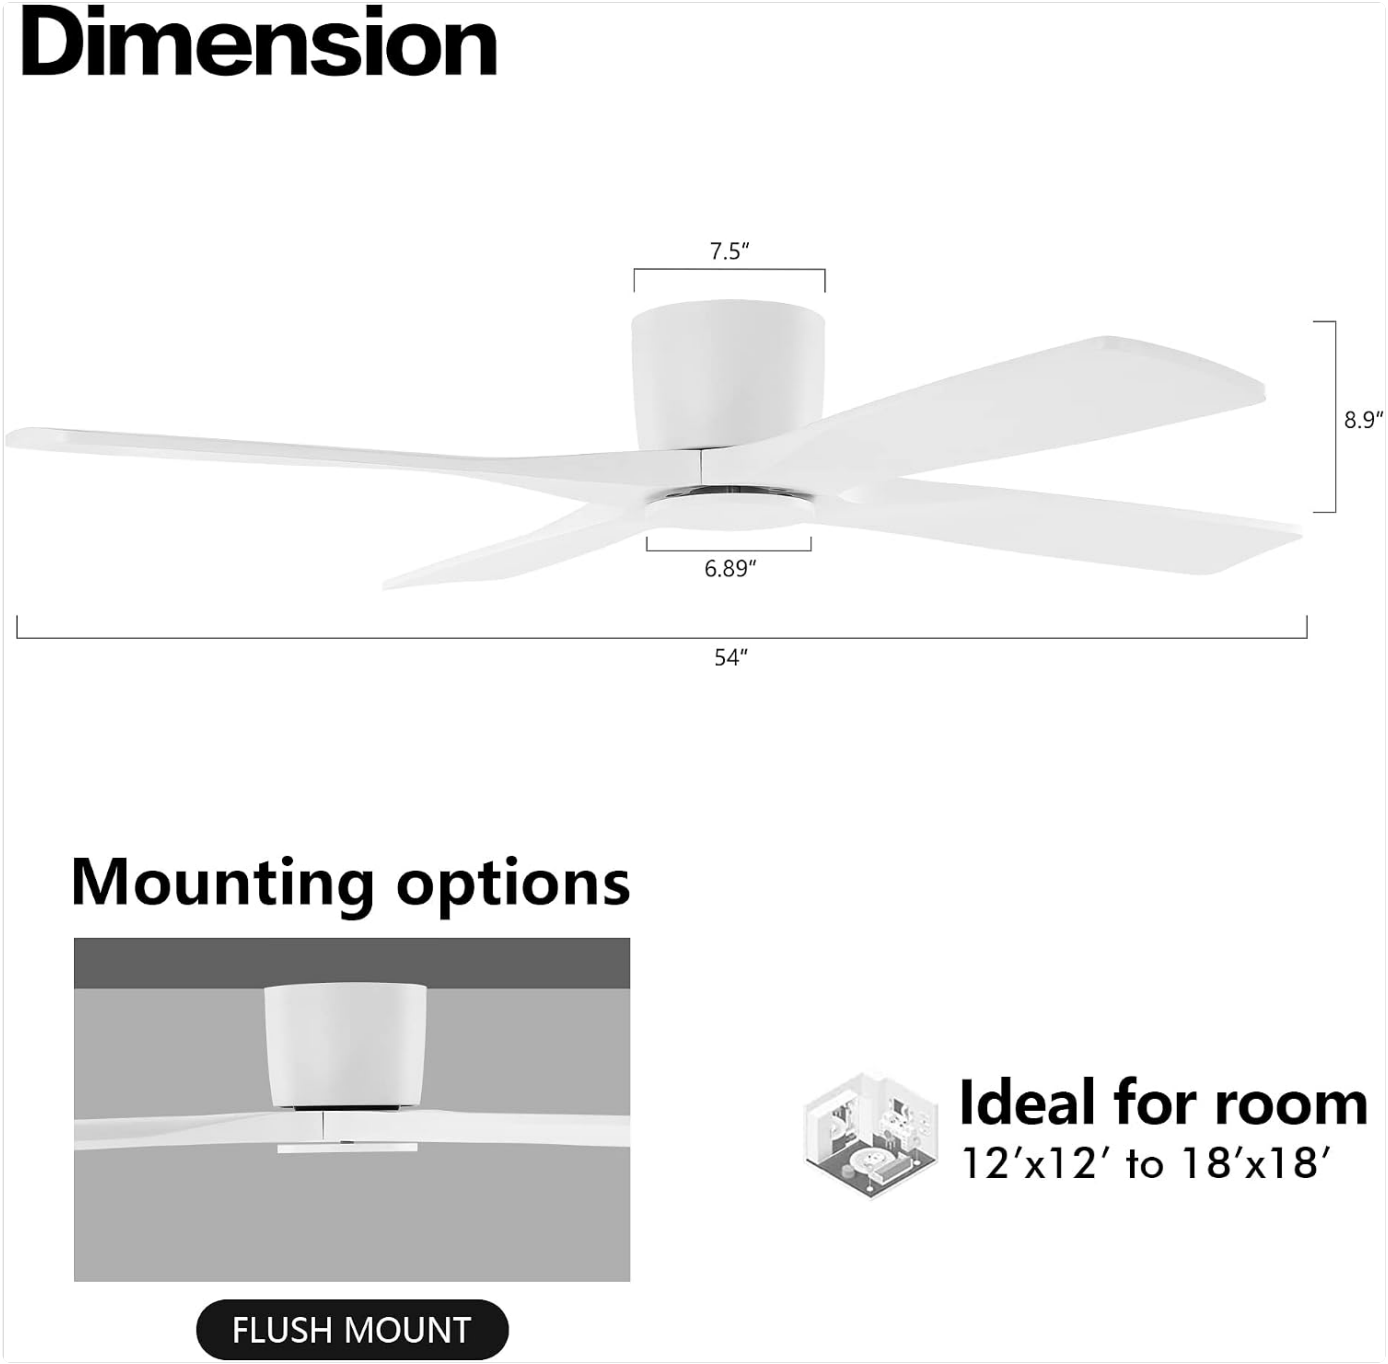


Image: Detailed dimensions of the 54-inch flush mount ceiling fan.

Setup (Installation)

Follow these steps for proper installation of your WINGBO ceiling fan. It is recommended to have two people for installation.

Installation Video Guide

Your browser does not support the video tag.

Video: WINGBO Flush Mount Wood Ceiling Fan No Light Installation. This video provides a step-by-step visual guide for the installation process.

Step-by-Step Installation

1. **Install Fan Mounting Bracket:** Secure the mounting bracket to the ceiling electrical box. Ensure it is firmly attached and can support the fan's weight.



Image: Close-up of the fan's mounting point on the ceiling.

2. **Hang the Motor Assembly:** Carefully hang the fan motor assembly onto the hook provided on the mounting bracket. This allows for hands-free wiring.
3. **Connect the Wires:** Connect the electrical wires according to the diagram in the manual and the video. Use the provided wire nuts.
    - Yellow (receiver) to Yellow (fan)
    - Red (receiver) to Red (fan)
    - Grey (receiver) to Grey (fan)
    - Black (receiver) to Hot (ceiling)
    - White (receiver) to Neutral (ceiling)
    - Green/Ground (fan) to Ground (ceiling)
4. **Install the Receiver:** Carefully tuck the receiver and connected wires into the mounting bracket area.
5. **Attach the Canopy:** Slide the canopy up and secure it to the mounting bracket, covering the wiring and receiver.
6. **Attach Blades:** Secure each of the four carved wood blades to the motor assembly using the provided screws. Ensure all screws are tightened.

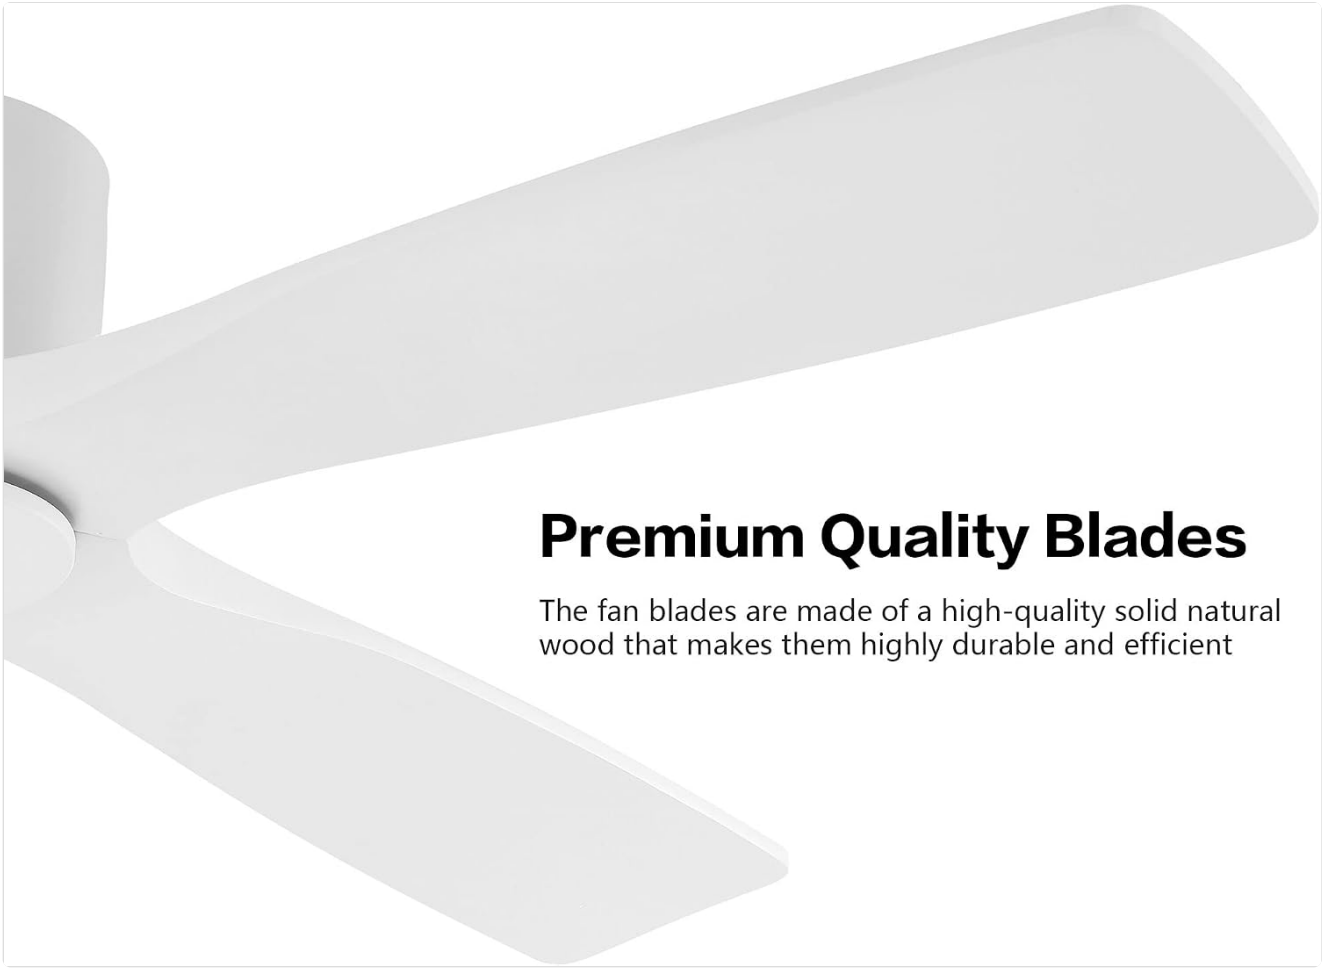


Image: Close-up of the fan's premium quality wood blades.

7. **Install the Bottom Cover:** Attach the decorative bottom cover to the center of the fan, covering the blade attachment points.

Operating Instructions

Your WINGBO ceiling fan is operated via the included remote control. Ensure batteries are installed correctly in the remote.



Image: Overview of the remote control functions for the ceiling fan.

- **Power On/Off:** Press the power button to turn the fan on or off.
- **Speed Control:** Use the numbered buttons (1-6) to select your desired fan speed. 1 is the lowest speed, 6 is the highest.
- **Reversible Airflow (Summer/Winter Mode):**
  Press the "Follow/Reverse" button to change the direction of the fan blades. This allows for year-round use:
  - *Summer Mode (Downdraft):* Blades rotate counter-clockwise to force cool air downwards, creating a cooling effect.
  - *Winter Mode (Updraft):* Blades rotate clockwise to draw cool air upwards, circulating warm air trapped near the ceiling.



Image: Illustration of summer (downdraft) and winter (updraft) modes for air circulation.

- **Nature Mode:** Activates a variable speed setting to simulate natural breezes.
- **Timer Function:** Use the 1H, 2H, 4H, or 8H buttons to set the fan to automatically turn off after the selected duration.



Image: Visual guide for setting the fan's timer function.

Product Overview Video

Your browser does not support the video tag.

Video: WINGBO DC Flush Mount Ceiling Fan without Lights, White. This video provides a general overview of the fan's features and appearance.

Maintenance

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** Dust the fan blades and motor housing regularly with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are secure. Loose connections can cause wobbling or noise.
- **Blade Balance:** If the fan wobbles, check that the blades are securely attached and that they are balanced. A balancing kit (not included) can be used if necessary.
- **Motor Lubrication:** The DC motor is permanently lubricated and does not require additional oiling.

Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control issues.	Check circuit breaker and wall switch. Ensure all wire connections are secure. Verify remote control batteries and pairing.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws. Check blade balance and use a balancing kit if needed. Ensure mounting bracket is securely fastened to the ceiling.
Noisy operation	Loose screws; Motor hum; Blades hitting an obstruction.	Check and tighten all screws. Ensure no wires are rubbing against the motor housing. Verify blades are not hitting anything.
Remote control unresponsive or inconsistent	Low batteries; Interference; Remote not paired correctly.	Replace remote batteries. Ensure no strong electrical interference nearby. Refer to remote pairing instructions (usually involves pressing a button combination after power cycle).

Warranty and Support

For warranty information and customer support, please contact WINGBO directly. Keep your purchase receipt as proof of purchase. Specific warranty terms may vary and are typically provided with the product packaging or available on the manufacturer's official website.

For additional assistance or to purchase replacement parts, please visit the official WINGBO store or contact their customer service department.

WINGBO Customer Service: Refer to contact information provided with your product or on the WINGBO website.

© 2025 WINGBO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0B9RF25XP

More documents and user manuals: **https://manuals.plus/**