Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall QQ011-BBQ-4L

oneisall Automatic Cat Feeder User Manual

Model: QQ011-BBQ-4L

1. Introduction

Thank you for choosing the oneisall Automatic Cat Feeder. This device is designed to simplify your pet feeding routine, ensuring your cat or dog receives consistent, portion-controlled meals even when you're away. Please read this manual thoroughly before operating the feeder to ensure proper setup and optimal performance.



Figure 1: oneisall Automatic Cat Feeder

This image displays the oneisall Automatic Cat Feeder, a dark blue and clear device filled with dry pet food. The feeder features a transparent hopper at the top, allowing visibility of the food level, and a stainless steel bowl at the bottom where food is dispensed. A digital display is visible on the front panel.

2. Product Overview and Key Features

The oneisall Automatic Cat Feeder offers convenience and precision for pet feeding. Its main features include:

- **Automated Feeding Schedule:** Program up to 6 meals per day with customizable portion sizes, freeing you from daily feeding tasks.
- **Large Capacity:** A 4-liter (17-cup) food tank can hold enough dry food for an adult cat for approximately 28 days or a puppy for 10 days, depending on their dietary needs.
- **Precise Portion Control:** Each portion is approximately 8 grams, allowing for scientific feeding to manage your pet's weight and prevent indigestion. Up to 50 portions can be dispensed per meal.

- **Food Freshness & Security:** Equipped with a desiccant bag to keep kibble fresh and a secure lid latch to prevent pets from accessing extra food.
- **10-Second Voice Recorder:** Record a personalized message to call your pet to meals, creating a familiar and comforting feeding experience.

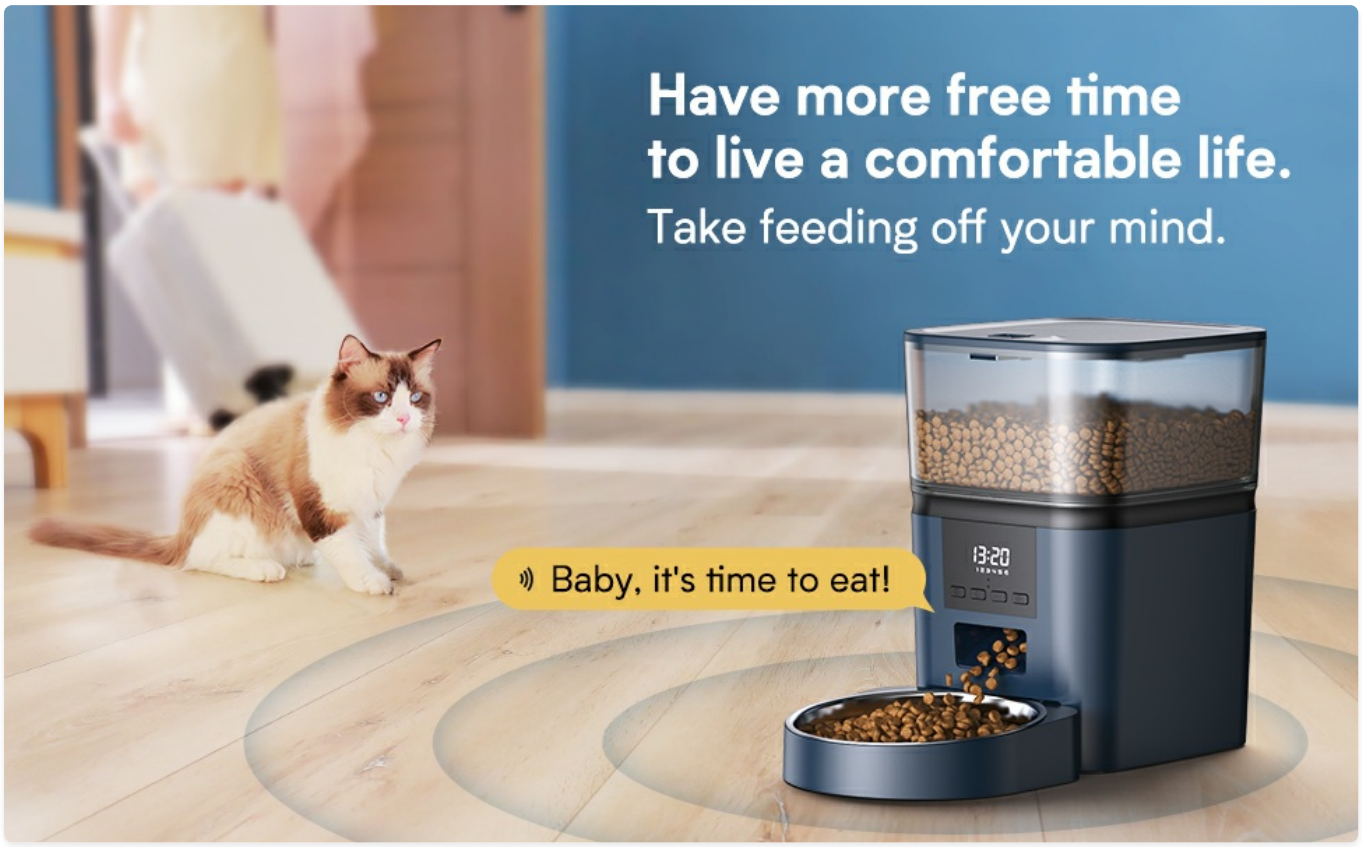


Figure 2: Pet enjoying a meal from the feeder
This image shows a cat eating dry food from the oneisall Automatic Pet Feeder's stainless steel bowl, positioned on a light wooden floor in a modern living room setting. The feeder itself is dark blue with a clear food hopper.

3. Package Contents

Please check the package for the following items:

- oneisall Automatic Pet Feeder (Main Unit)
- Power Adapter
- Charging Cord (USB)
- User Manual
- Desiccant Bag

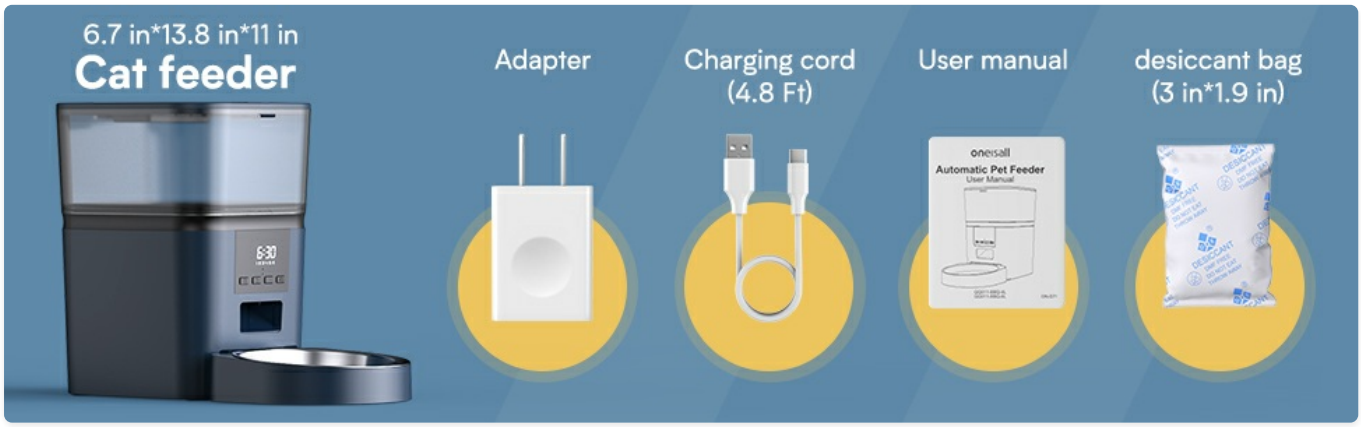


Figure 3: Package Contents

This image displays the individual components included in the oneisall Automatic Pet Feeder package: the main feeder unit, a power adapter, a charging cord, the user manual, and a desiccant bag. Each item is clearly laid out against a blue and white background.

4. Product Components

Familiarize yourself with the different parts of your automatic feeder:

- **Food Hopper:** Transparent container for storing dry pet food.
- **Base Unit:** Contains the motor, control panel, and power connections.
- **Stainless Steel Bowl:** Removable and easy-to-clean bowl for food dispensing.
- **Control Panel:** Features a digital display and buttons for programming.
- **Desiccant Bag Compartment:** Located under the lid to keep food fresh.



Figure 4: Stainless Steel Bowl

A close-up view of the removable stainless steel pet food bowl, designed for easy cleaning and hygiene.



Figure 5: Control Panel

This image shows a detailed view of the feeder's control panel, featuring a digital display that shows the time and meal settings, along with control buttons.



Figure 6: Desiccant Bag Compartment
An image of the feeder with its lid open, revealing the dedicated compartment for the desiccant bag, which helps maintain food freshness.

5. Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble:** Place the food hopper securely onto the base unit. Ensure the stainless steel bowl is correctly seated in its designated slot at the front of the feeder.
3. **Power Connection:** Connect the power adapter to the feeder's power port and plug it into a wall outlet. For backup power during outages, install 3 D-cell batteries (not included) in the battery compartment at the bottom of the unit.
4. **Fill Food Tank:** Open the lid of the food hopper and pour in dry pet food. Ensure the food is suitable for automatic feeders (kibble size should be appropriate to prevent clogging). Close the lid securely.
5. **Insert Desiccant Bag:** Place the provided desiccant bag into its compartment under the lid to help keep the food fresh. Replace the desiccant bag every 1-2 months for optimal freshness.

6. Operating Instructions

Control Panel Overview

The control panel features a digital display and several buttons:

- **SET Button:** Used to enter and confirm settings.
- **+ Button:** Increases values or navigates forward.
- **- Button:** Decreases values or navigates backward.
- **OK Button:** Confirms selections or manually dispenses food.

Setting the Current Time

The feeder's clock operates in 24-hour (military) format. Ensure accurate time setting for precise meal delivery.

1. Press and hold the **SET** button until the hour digit flashes.
2. Use the **+** or **-** buttons to adjust the hour.
3. Press **SET** to confirm the hour and move to the minute setting.
4. Use the **+** or **-** buttons to adjust the minute.
5. Press **SET** to save the time and exit.

Programming Meal Schedules

You can program up to 6 meals per day. Each meal can have a customized portion size.



Figure 7: Portion Size Reference
This diagram illustrates the feeder's internal mechanism for dispensing food and provides a reference for portion sizes, indicating that approximately 3 portions equal 1/4 cup of kibble. The feeder supports up to 50 portions per meal.

1. Press the **SET** button repeatedly until "F-01" (for Meal 1) appears on the display.
2. Use **+** or **-** to set the desired feeding time for Meal 1 (hour then minute, confirming with**SET** after each).
3. After setting the time, the portion number will flash. Use **+** or **-** to select the number of portions (1-50). Each portion is approximately 8 grams.
4. Press **SET** to confirm the portions for Meal 1.
5. Repeat steps 1-4 for additional meals (F-02 to F-06) as needed. If you do not wish to set a meal, simply skip it by pressing **SET** until the next meal number appears or until you exit programming mode.
6. To exit programming mode, press and hold **SET** or wait for the display to return to the current time.

Recording a Voice Message

You can record a 10-second voice message that will play before each scheduled meal.

1. Press and hold the **microphone icon button** (usually located near the display) until you hear a beep.
2. Speak your message clearly into the microphone. The recording will automatically stop after 10 seconds or when you release the button.
3. To play back your recording, briefly press the **microphone icon button**.

Your browser does not support the video tag.

Video 1: oneisall Automatic Pet Feeder in action
This video demonstrates the oneisall Automatic Pet Feeder's features, including its setup, portion control, and the voice recording function. It shows a cat interacting with the feeder and highlights the convenience it offers to pet owners.

Manual Feeding

To dispense food manually at any time:

- Briefly press the **OK** button. One portion of food will be dispensed.
- You can press the **OK** button multiple times to dispense more portions as needed.

7. Maintenance

Regular cleaning and maintenance will ensure the longevity and hygienic operation of your feeder.

- **Cleaning the Bowl:** The stainless steel bowl is removable and can be washed with soap and water. Rinse thoroughly and dry completely before reattaching.
- **Cleaning the Food Hopper:** The food hopper can be detached and cleaned with a damp cloth. Do not submerge the base unit in water. Ensure all parts are completely dry before reassembling and refilling with food.
- **Desiccant Bag Replacement:** For optimal food freshness, replace the desiccant bag every 1-2 months, especially in humid environments.
- **Food Refill:** Monitor the food level in the transparent hopper and refill as needed to ensure continuous feeding.

8. Troubleshooting

If you encounter issues with your oneisall Automatic Cat Feeder, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food hopper empty; food jammed; power issue.	Refill food. Check for kibble jams in the dispenser mechanism. Ensure power adapter is securely plugged in and backup batteries are installed and functional.
Incorrect feeding times.	Clock not set correctly; programming error.	Verify the current time setting (24-hour format). Re-program meal schedules carefully, ensuring correct times and portions.
Voice message not playing.	No message recorded; low battery.	Record a new voice message. Check battery level if running on backup power.
Food becoming stale quickly.	Desiccant bag needs replacement; lid not sealed.	Replace the desiccant bag. Ensure the food hopper lid is securely latched.

If the problem persists after trying these solutions, please contact customer support.

9. Specifications

Brand	oneisall
Model Number	QQ011-BBQ-4L
Capacity	4 Liters (approx. 17 cups)
Product Dimensions	12 x 12 x 15 cm; 1.61 kg
Material	Stainless Steel, Silicone
Target Species	Cat (suitable for small dogs too)

Special Features	Timed, Automatic, Voice Recorder, Portion Control, Indoor Use

10. Warranty and Support

The oneisall Automatic Cat Feeder comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the warranty card included in your package or contact oneisall customer service directly through their official website or the retailer where you purchased the product.
For further assistance, you may visit the oneisall Store on Amazon.

© 2023 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BBF5WSM5

More documents and user manuals: **https://manuals.plus/**