Vocal-Star VS-355

Vocal-Star Portable Karaoke Machine VS-355 User Manual

Model: VS-355

Introduction

Thank you for choosing the Vocal-Star Portable Karaoke Machine. This device is designed to provide a comprehensive and enjoyable karaoke experience with its powerful speaker, wireless microphones, and dynamic LED light effects. This manual will guide you through the setup, operation, and maintenance of your new karaoke machine.



The Vocal-Star Portable Karaoke Machine, complete with two wireless microphones, demonstrating its connectivity with a television and mobile devices for karaoke playback.

Safety Information

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way.

What's in the Box

Upon unpacking, please ensure all the following items are present:

- Vocal-Star Portable Karaoke Machine
- 2 Wireless Microphones
- USB Cable (for charging)

Setup

1. Charging the Karaoke Machine

Before first use, fully charge the internal rechargeable battery. Connect the provided USB cable to the DC 5V input port on the back of the machine and the other end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.

2. Microphone Setup

The karaoke machine comes with two wireless microphones. Ensure the microphones have batteries installed (if required, check battery compartment). Turn on the microphones; they should automatically pair with the karaoke machine.

3. Connecting Audio Sources


You can connect audio sources via Bluetooth or AUX input.



Detailed view of the top control panel, showing input ports for TF Card, AUX IN, USB, and DC 5V power, along with various control buttons.

Bluetooth Connection:

1. Turn on the karaoke machine. The display will show "BLUE" indicating Bluetooth mode.
2. Enable Bluetooth on your smartphone, tablet, or Smart TV.
3. Search for "Vocal-Star" or "VS-355" in your device's Bluetooth settings and select it to pair.
4. Once connected, you can play music or karaoke tracks from your device.

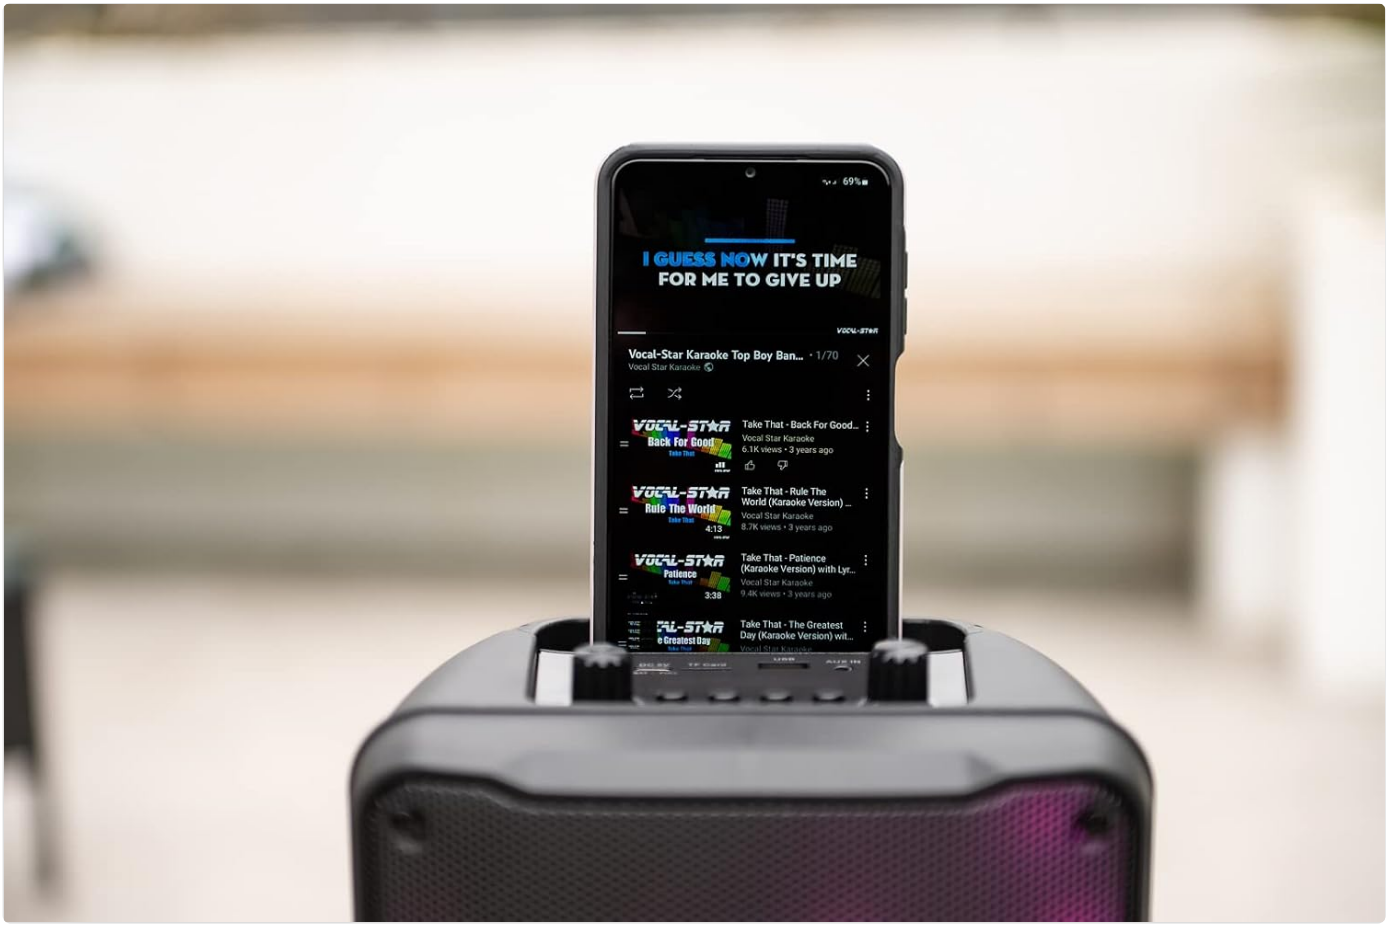

A smartphone securely placed in the integrated cradle of the karaoke machine, showing a karaoke track on its screen, ready for use.


AUX Connection:

Connect an audio device using a 3.5mm AUX cable (not included) to the AUX IN port on the machine. The machine will automatically switch to AUX mode.

4. TWS (True Wireless Stereo) Feature

If you have two Vocal-Star VS-355 karaoke machines, you can connect them wirelessly for a true stereo sound experience.

1. Ensure both machines are powered on and in Bluetooth mode.
2. On one machine, press and hold the "TWS" button (or "MODE/TWS" button) until you hear a confirmation tone.
3. The two machines will automatically pair with each other.
4. Connect your Bluetooth device to one of the paired machines. Audio will now play through both units in stereo.

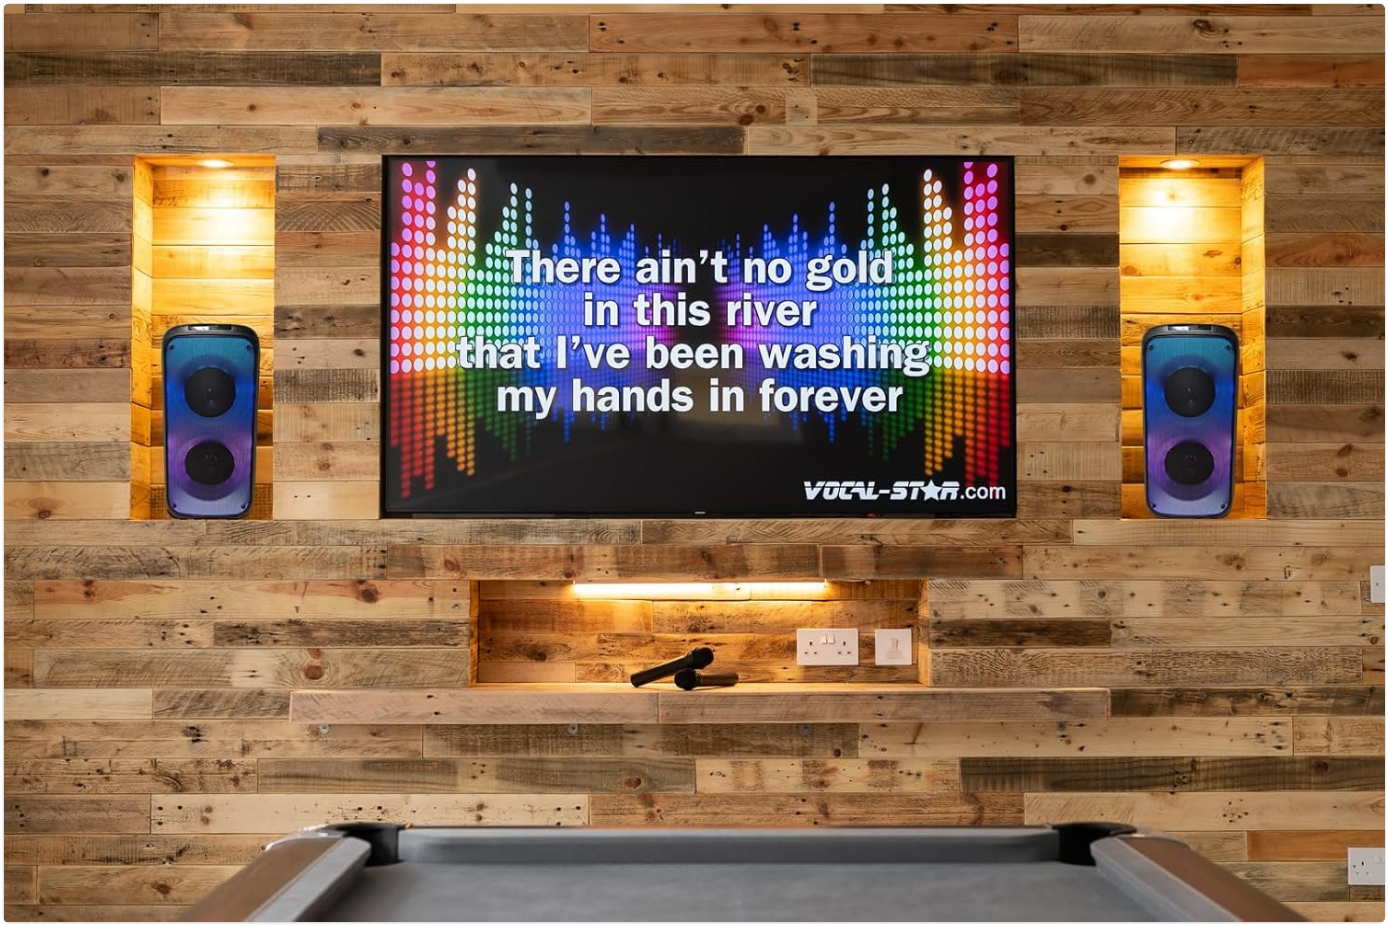

Two Vocal-Star Karaoke Machines set up for True Wireless Stereo (TWS) playback, flanking a television screen that displays karaoke lyrics, enhancing the audio experience.

Operating Instructions

1. Power On/Off

Press and hold the **POWER** button located on the control panel to turn the machine on or off.

2. Adjusting Volume and Echo

- Use the **MIC VOL+/-** buttons to adjust the microphone volume.
- Use the **ECHO/EQ+/-** buttons to adjust the echo effect on the microphones.
- Use the **VOL+/-** buttons to adjust the main music volume.

3. LED Light Effects

The machine features 6 dazzling LED light effects that dance to the beat of the music. These lights activate automatically when the machine is on. There is no specific button mentioned to change light effects, implying they cycle or are sound-activated.



The front of the Vocal-Star Karaoke Machine showcasing its dynamic LED light display, which adds a party atmosphere to any performance.

4. Recording Vocals to USB

Insert a USB drive into the USB port. Press the**REC** button to start recording your vocals. Press it again to stop recording. The recorded file will be saved on the USB drive.

5. EQ Mode

Press the **ECHO/EQ+/-** button (or a dedicated EQ button if present, based on the image, it's combined with Echo) to cycle through different EQ modes, adjusting the sound profile to your preference.

Maintenance

1. Cleaning

Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or solvents. Keep the microphone grilles clean to ensure clear sound pickup.

2. Storage

When not in use, store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before long-term storage to preserve battery life.

3. Battery Care

To maximize battery lifespan, avoid fully discharging the battery frequently. Recharge the unit when the battery low indicator appears. If storing for extended periods, charge the battery every 3-6 months.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is depleted; Power cable not connected.	Charge the unit using the provided USB cable. Ensure the power button is pressed and held to turn on.
No sound from speaker	Volume too low; Incorrect input mode; Device not paired (Bluetooth).	Increase main volume. Press MODE button to select correct input (Bluetooth/AUX). Re-pair Bluetooth device.
Microphones not working	Microphone batteries low/dead; Microphone not turned on; Microphone volume too low.	Replace microphone batteries. Turn on microphones. Increase MIC VOL.
Bluetooth connection issues	Device too far; Interference; Machine not in pairing mode.	Ensure device is within 10 meters. Move away from other electronic devices. Restart machine and try pairing again.
Poor sound quality	Source audio quality; EQ settings; Microphone too close/far from mouth.	Check source audio. Adjust EQ settings. Maintain optimal distance from microphone.

Specifications

- **Model:** VS-355
- **Brand:** Vocal-Star
- **Power Output:** 100W (2x5" Woofer Speaker)
- **Battery:** 1 Lithium Ion battery (included)
- **Battery Life:** Up to 12 hours (depending on usage)
- **Connectivity:** Bluetooth, AUX, USB, TF Card
- **Microphones:** 2 Wireless Microphones

- **Special Features:** 6 Dazzling LED Full Speaker Lights Effects, Records Vocals to USB, TWS (True Wireless Stereo)
- **Product Dimensions:** 19 x 18 x 40 cm
- **Weight:** 3.49 kg
- **Colour:** Black
- **Manufacturer:** Vocal-Star
- **Country of Origin:** China



Diagram illustrating the physical dimensions of the Vocal-Star Karaoke Machine: 51cm height, 25cm width, and 23cm depth.

Warranty and Support

This Vocal-Star product is designed for durability and performance. For any issues not covered in the troubleshooting section, or for warranty inquiries, please contact Vocal-Star customer support. Please refer to your purchase documentation for specific warranty terms and contact details.
For further assistance, you may visit the official Vocal-Star website or contact their customer service department. Keep your proof of purchase for warranty claims.

© 2024 Vocal-Star. All rights reserved.