Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bosch UniversalFan 18V-1000

Bosch UniversalFan 18V-1000 Cordless Portable Fan Instruction Manual

1. Introduction

This manual provides essential information for the safe and efficient operation, setup, and maintenance of your Bosch UniversalFan 18V-1000 cordless portable fan. Please read these instructions thoroughly before using the product and retain them for future reference.



Figure 1: Bosch UniversalFan 18V-1000 with its carton packaging.

2. Safety Instructions

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This fan is designed for use with the Bosch 18V POWER FOR ALL ALLIANCE battery system. Using incompatible batteries may result in damage to the fan or battery, and could pose a safety risk.

- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Keep fingers, hair, and loose clothing away from the fan blades during operation.
- Do not operate the fan in wet conditions or immerse it in water.
- Only use original Bosch 18V POWER FOR ALL ALLIANCE batteries and chargers.
- Do not block the air intake or outlet.
- Supervise children and individuals with reduced physical, sensory, or mental capabilities when near the appliance.

3. Package Contents

Verify that all items are present upon unpacking:

- Bosch UniversalFan 18V-1000 Cordless Portable Fan
- Carton packaging

Note: The 18V battery and charger are not included and must be purchased separately. This fan is part of the POWER FOR ALL ALLIANCE, allowing a single battery to power a wide range of compatible devices.



Figure 2: The UniversalFan 18V-1000 is supplied in carton packaging.



Figure 3: The POWER FOR ALL ALLIANCE system allows one 18V battery to power multiple tools.

4. Setup

4.1 Battery Installation

1. Ensure the fan is switched off before inserting or removing the battery.
2. Align the 18V POWER FOR ALL ALLIANCE battery with the battery slot on the fan base.
3. Slide the battery into the slot until it clicks securely into place.
4. To remove, press the battery release button and slide the battery out.

4.2 Positioning the Fan

The UniversalFan 18V-1000 offers multiple positioning options for versatility:

- **Freestanding:** Place the fan on any stable surface.
- **Hanging:** Utilize the retractable hooks for hanging the fan.
- **Clamping:** Use the designated clamping areas to secure the fan.
- **Rod Holders:** Attach to compatible rods using the integrated holders.
- **Keyhole Mount:** Mount the fan on a wall using the keyhole slot.
- **Tripod Mount:** Secure the fan to a tripod for elevated positioning.



Figure 4: The fan can be mounted on a ladder for elevated airflow.

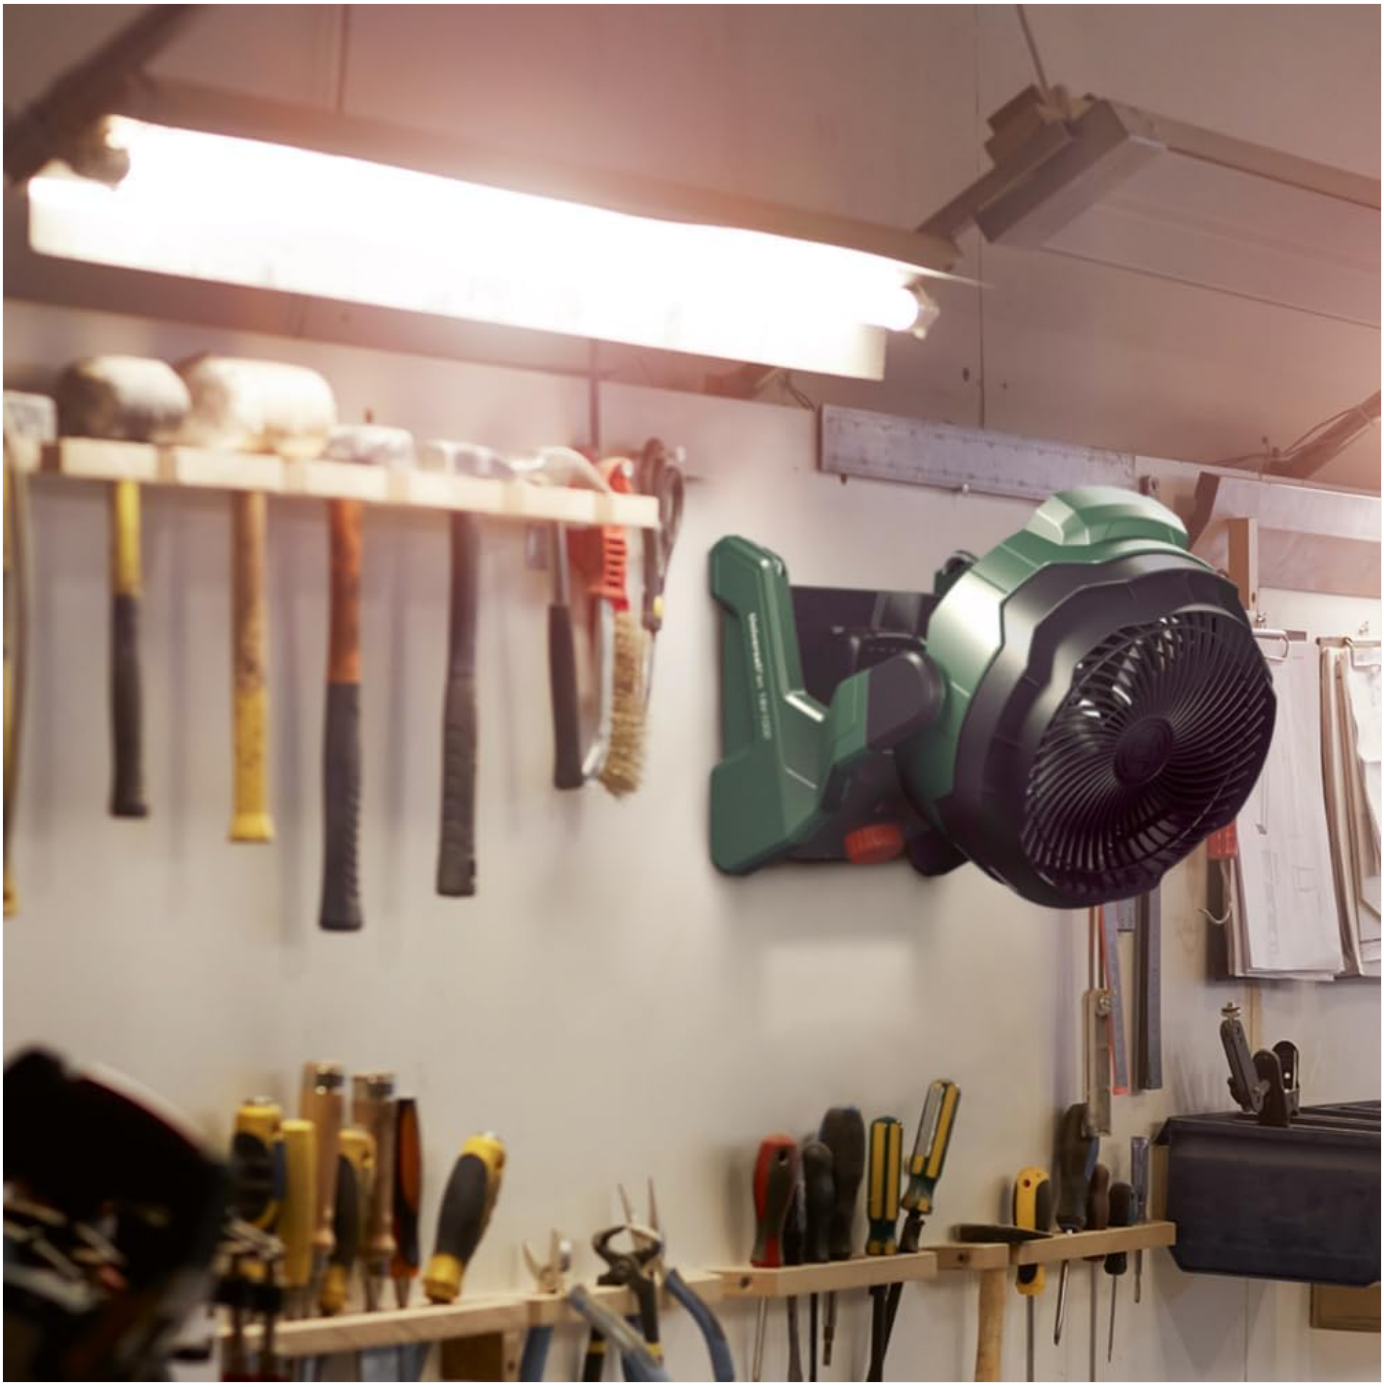


Figure 5: Wall mounting provides flexible positioning in a workshop environment.

4.3 Adjusting the Fan Head

The fan head can be manually rotated to direct airflow:

- Rotate the fan head up to 30° forward.
- Rotate the fan head up to 150° backward.

This allows for a total vertical adjustment range of 180°.

5. Operating Instructions

5.1 Power On/Off

To turn the fan on or off, use the power button or control knob located on the front of the unit.

5.2 Adjusting Fan Speed

The fan features continuously adjustable speed control. Rotate the control knob to increase or decrease the airflow intensity. The fan's Constant Power feature ensures that the selected speed level is maintained consistently throughout the battery's runtime.



Figure 6: The control knob allows for continuous speed adjustment.



Figure 7: The portable fan provides cooling in various outdoor settings, such as camping.

6. Maintenance

6.1 Cleaning

- Always disconnect the battery before cleaning.
- Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the fan in water or any other liquid.
- Periodically check the air intake and outlet for dust or debris and clean as necessary to maintain optimal airflow.

6.2 Storage

- Store the fan in a clean, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery.

6.3 Battery Care

- Charge batteries fully before first use and after each use.
- Store batteries in a cool, dry place, ideally at a partial charge (e.g., 50%).
- Avoid exposing batteries to extreme heat or cold.

7. Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Battery not inserted correctly or discharged. Incompatible battery.	Ensure battery is fully charged and correctly inserted. Verify battery compatibility with Bosch 18V POWER FOR ALL ALLIANCE system.
Low airflow.	Air intake/outlet blocked. Fan speed set too low.	Clear any obstructions from the air intake/outlet. Increase fan speed using the control knob.
Fan makes unusual noise.	Debris in fan blades. Loose components.	Turn off and disconnect battery. Carefully inspect and remove any debris from blades. If noise persists, contact customer support.

If issues persist after attempting these solutions, please contact Bosch customer support for further assistance.

8. Specifications

- **Model:** UniversalFan 18V-1000
- **Item Model Number:** 06039E1000
- **Battery Voltage:** 18 V
- **Max. Airflow Volume:** 1000 m^3/h
- **Airflow Range:** >5 m
- **Head Diameter:** 22.5 cm
- **Head Rotation (vertical):** 30° forward, 150° backward (180° total)
- **Runtime (4.0 Ah battery at maximum speed):** 5 hours
- **Runtime (4.0 Ah battery at minimum speed):** 25 hours
- **Maximum Sound Power Level (LWA):** 62 dB
- **Weight without Battery:** 2.3 kg (approximately 5.06 pounds)
- **Product Dimensions (D x W x H):** 10" x 12.2" x 16.3"
- **Power Source:** Battery Powered
- **Control Method:** Remote (implied by product data, but physical knob is primary)
- **Indoor/Outdoor Usage:** Outdoor
- **Global Trade Identification Number (GTIN):** 04053423233728

9. Warranty and Support

The Bosch UniversalFan 18V-1000 comes with a 3-year guarantee. For warranty claims, technical support, or service inquiries, please contact Bosch customer service. Keep your proof of purchase for warranty validation.
For more information, visit the official Bosch website or contact your local Bosch service center.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BBRJV28G

More documents and user manuals: **https://manuals.plus/**