Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY CV-MBE646-DVD-HD008-D2208-SH

ALLIMITY DVD-HD008 Replaced Remote Control User Manual

Model: DVD-HD008

Introduction

This user manual provides instructions for the ALLIMITY DVD-HD008 Replaced Remote Control, designed to be compatible with Laser DVD Players, specifically model DVDHD008. This remote control serves as a direct replacement and does not require programming.

Product Overview





Figure 1: Front view of the ALLIMITY DVD-HD008 remote control, showing all buttons including power, audio, mute, subtitle, menu, number pad, navigation keys, volume controls, playback controls, and special function buttons.

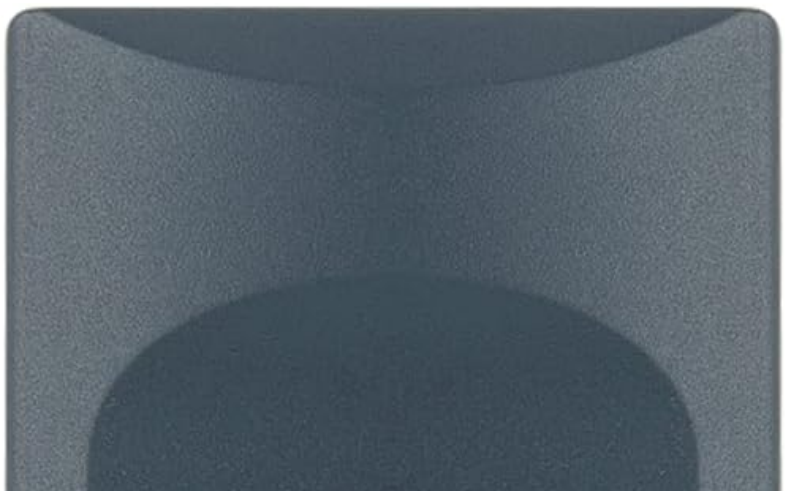




Figure 2: Back view of the ALLIMITY DVD-HD008 remote control, illustrating the battery compartment with the cover removed, ready for battery insertion.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it. Refer to Figure 2 for visual guidance.
3. Insert two (2) 1.5V AAA alkaline batteries into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Batteries are not included with the remote control. Always use new alkaline batteries for optimal performance. Remove batteries if the remote control will not be used for an extended period to prevent leakage.

2. Initial Use

This remote control is a replacement unit and does not require any programming. Once batteries are correctly installed, it is ready for use with compatible Laser DVD Players (model DVDHD008).

Operating Instructions

The ALLIMITY DVD-HD008 remote control provides full functionality for your compatible Laser DVD Player. Below is a general guide to common button functions:

- **Power Button ( ):** Turns the DVD player on or off.
- **Number Pad (0-9):** Used for direct track selection, chapter selection, or inputting numerical values.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **VOL+/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio.
- **AUDIO:** Cycles through available audio tracks or languages.
- **SUBTITLE:** Cycles through available subtitle tracks.
- **MENU:** Accesses the main menu of the DVD.
- **DISPLAY:** Shows on-screen display information (e.g., time, chapter).
- **RETURN:** Returns to the previous menu or screen.
- **Playback Controls (Play/Pause, Stop, Fast Forward, Rewind, Next, Previous):** Standard controls for media playback.
- **SETUP:** Accesses the system setup menu of the DVD player.
- **ZOOM:** Adjusts the screen zoom level.
- **USB:** Switches input to USB mode (if supported by the DVD player).

For specific functions of your DVD player, refer to your DVD player's original user manual.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Damage:** Do not drop the remote control or expose it to water or excessive moisture.

Troubleshooting

Problem	Possible Cause	Solution
Remote control not working.	Batteries are dead or incorrectly installed.	Check battery polarity (+/-). Replace with new 1.5V AAA alkaline batteries.
Remote control range is poor.	Low batteries; Obstruction between remote and DVD player; Remote sensor on DVD player is blocked.	Replace batteries. Ensure a clear line of sight to the DVD player's infrared sensor. Remove any obstructions.
Certain buttons do not respond.	Button malfunction; DVD player does not support the function.	Ensure the function is supported by your specific DVD player model. If other buttons work, the specific button might be faulty (unlikely for a new remote).
Remote works intermittently.	Loose battery connection; Low battery power.	Re-seat batteries firmly. Replace batteries.

Specifications

Model: DVD-HD008 (Replacement for Laser DVD Player DVDHD008)

Brand: ALLIMITY

Connectivity Technology: Infrared

Compatible Devices: Laser DVD Players (specifically DVDHD008)

Power Supply: 2 x 1.5V AAA Alkaline Batteries (Not Included)

Product Dimensions: 6.5 x 1.38 x 0.72 inches (approximately)

Item Weight: 1.44 ounces (approximately)

Manufacturer: ALLIMITY

Country of Origin: China

Support

For any questions or concerns regarding your ALLIMITY DVD-HD008 Replaced Remote Control, please contact the seller or manufacturer directly. When contacting support, please provide your product model number (DVD-HD008) and a detailed description of the issue.
Manufacturer: ALLIMITY
Contact Information: Please refer to your purchase documentation or the seller's contact details on the platform where the product was acquired.

© 2024 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BBVGL5JZ

More documents and user manuals: **https://manuals.plus/**