Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall X2N5

oneisall 2 in 1 Pet Cat & Dog Grooming Kit User Manual

Model: X2N5 | Brand: oneisall

Introduction

This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your oneisall 2 in 1 Pet Cat & Dog Grooming Kit. This kit is designed to make pet grooming at home easier and more convenient, featuring quiet operation and cordless design for both the main clippers and the precision paw trimmer.

Safety Information

It is crucial to read and understand all safety precautions before operating the grooming kit. Failure to do so may result in injury or damage to the product.

- Avoid using the device near water or in wet environments.
- Do not use the clippers on yourself or other people. This product is intended for pet grooming only.
- Always unplug the device when not in use, before cleaning, or before performing any maintenance.
- Always use the provided guide guards to control the length and depth of the clip, preventing accidental injury to your pet.
- Operate the product in a well-ventilated area to prevent overheating.
- Follow all recommended cleaning and maintenance procedures to ensure the product remains in good working order and for optimal performance.

Product Overview and Components

The oneisall 2 in 1 Pet Grooming Kit includes the following main components:

- Standard Dog Clippers (Model X2N5)
- Small Paw Trimmer (Model C61)
- 6 Guide Guards (3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- Cleaning Brush
- Comb
- Scissors
- USB Charging Cable and Power Adapter



Image: All components included in the oneisall 2 in 1 Pet Grooming Kit, featuring the main clippers, paw trimmer, various guide combs, scissors, comb, cleaning brush, and charging accessories.



Image: Detailed dimensions of the main clippers (Model X2N5) and the paw trimmer (Model C61), highlighting their compact and ergonomic design.

Setup

1. **Initial Charge:** Before first use, fully charge both the standard dog clippers and the small paw trimmer.
    - The standard dog clipper battery lasts approximately 4 hours on a 3-hour charge.
    - The smaller paw trimmer battery lasts approximately 2 hours on a 2-hour charge.



Image: The main clippers and paw trimmer connected to their USB charging cables, illustrating the charging process and battery indicator lights.

2. **Attach Guide Guard (Standard Clippers):** Select the desired guide guard (3mm, 6mm, 9mm, 12mm, 15mm, or 18mm) based on the desired hair length. Align the guard with the clipper blade and snap it securely into place.



Image: The main clippers shown with various guide guards, demonstrating the different lengths available for grooming.

3. **Prepare Pet:** Ensure your pet's coat is clean, dry, and free of tangles or mats before grooming. Brushing your pet thoroughly beforehand will help achieve a smoother cut and prevent blade snagging.

Operating Instructions

Using the Standard Dog Clippers

1. **Power On:** Press the power button to turn on the clippers. The clippers feature an upgraded motor designed for low noise (within 60dB) to keep pets calm.



Image: A visual representation of the low noise level of the oneisall clippers compared to common sounds, with a dog and cat sleeping peacefully nearby.

2. **Grooming Technique:** Hold the clippers firmly and move them in the direction of hair growth. Use smooth, even strokes. For thick coats, multiple passes may be necessary. The cordless design allows for easy maneuverability.

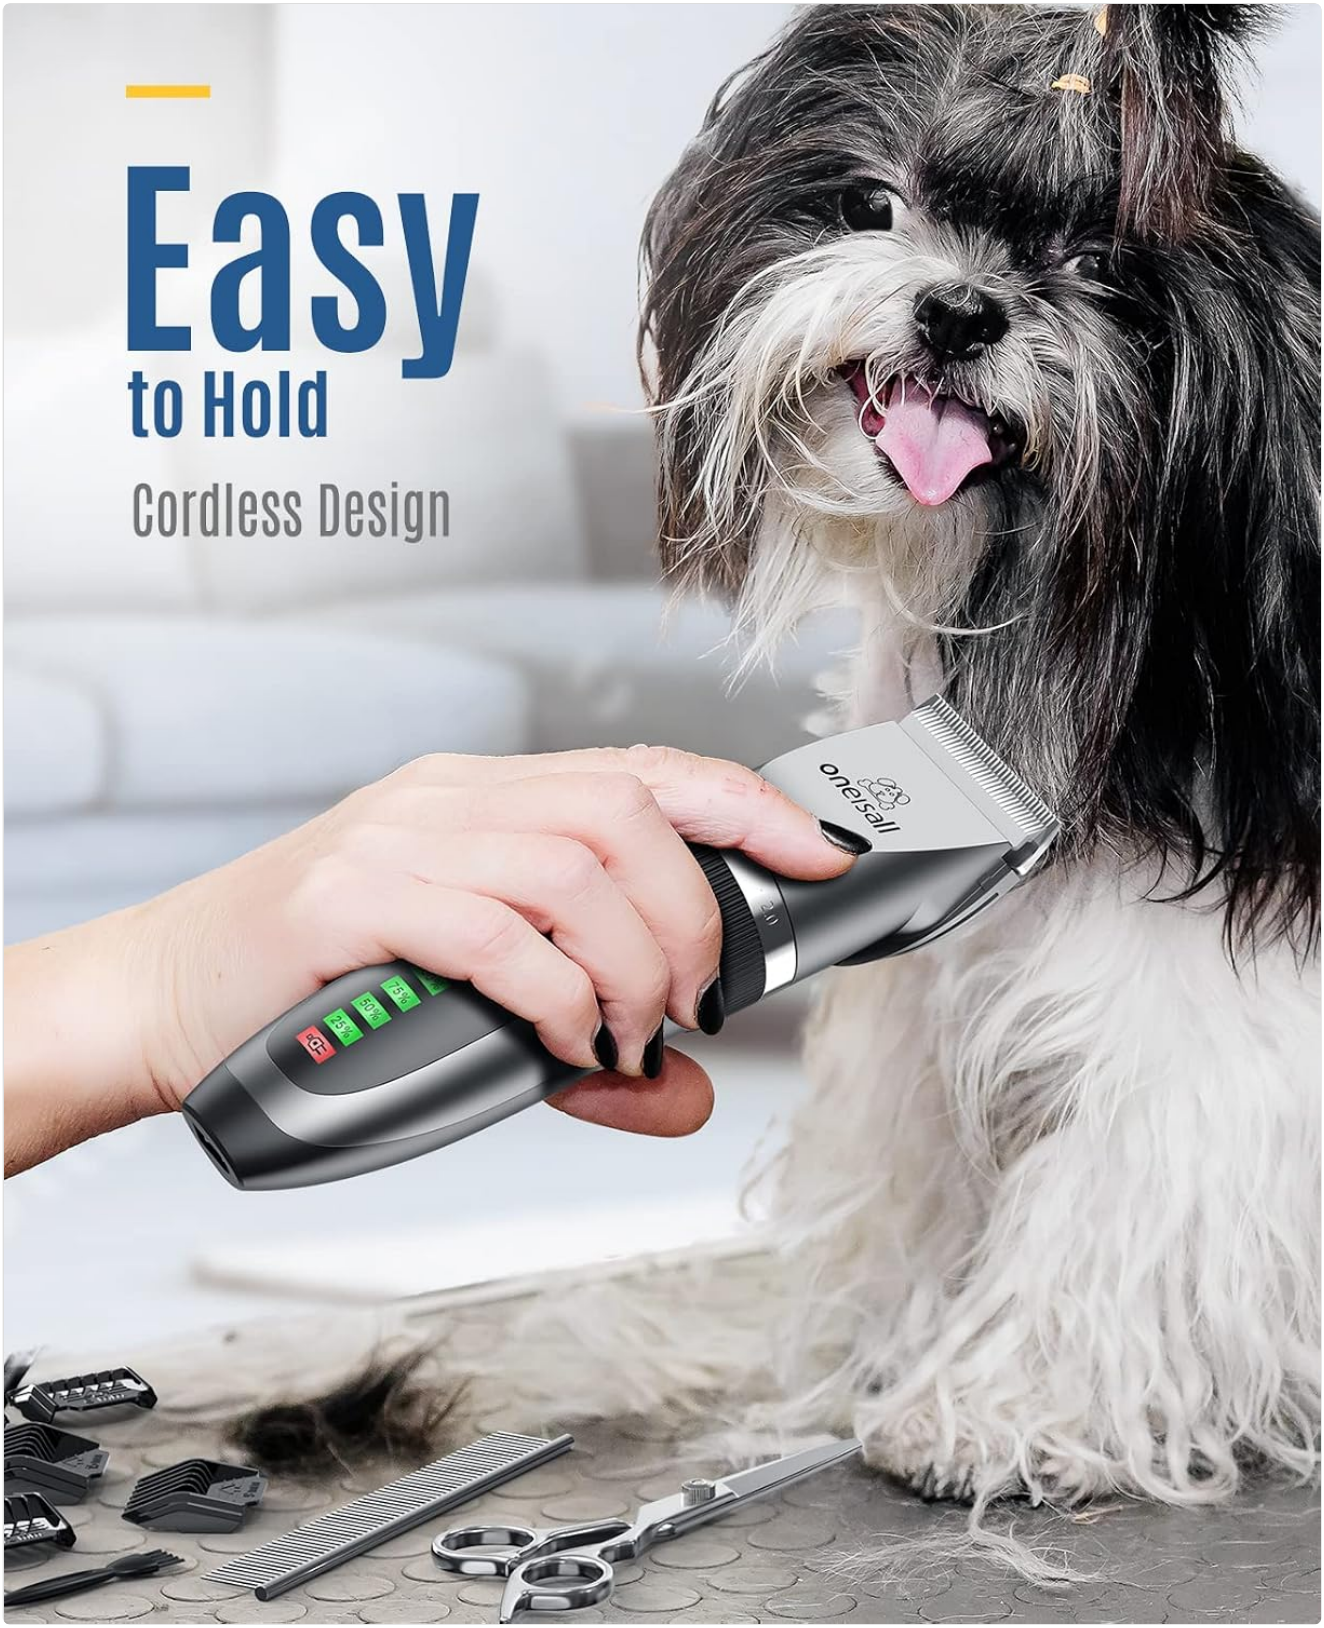


Image: A hand holding the oneisall main clippers, demonstrating the comfortable and easy-to-hold cordless design while grooming a dog.

3. **Adjusting Blade Length:** The main clipper blade can be adjusted for fine-tuning without a guide comb. Refer to the markings on the clipper for precise length settings.

Using the Small Paw Trimmer

1. **Power On:** Press the power button on the paw trimmer. This trimmer is also designed for quiet operation, ideal for sensitive areas.
2. **Precision Trimming:** Use the paw trimmer for delicate areas such as paws, around the eyes, ears, and the sanitary area (butt). Its small blade design allows for precise and safe trimming.



Image: The small paw trimmer being used to trim hair around a dog's paw, with before and after examples of groomed paws, and icons indicating its use for ears, face, and butt.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your grooming kit.

1. **Cleaning Blades:** After each use, turn off and unplug the clippers. Use the included cleaning brush to remove any hair from the blades. The blades can be detached for a more thorough cleaning.
2. **Lubrication:** Periodically apply a few drops of clipper oil (not included, but commonly available) to the blades to keep them sharp and ensure smooth operation. This helps prevent friction and overheating.

3. **Storage:** Store the grooming kit in a dry, cool place, away from direct sunlight and out of reach of children and pets.

Troubleshooting

Problem	Possible Cause	Solution
Clippers not turning on or charging.	Low battery; faulty charging cable/adapter; internal issue.	Ensure fully charged. Check charging cable and adapter for damage. If issues persist, contact customer support.
Clippers pulling hair or cutting unevenly.	Blades are dull or dirty; hair is matted/tangled; incorrect technique.	Clean and lubricate blades. Brush and detangle pet's hair thoroughly before grooming. Use smooth, even strokes.
Excessive noise or vibration.	Blades not properly aligned or lubricated; internal motor issue.	Ensure blades are clean and well-lubricated. Check for proper blade attachment. If problem continues, contact support.
Clippers overheating.	Prolonged use; dirty/unlubricated blades; poor ventilation.	Allow clippers to cool down. Clean and lubricate blades. Ensure proper airflow during use.

Specifications

- **Model Name:** Dog Clippers and Dog Paw Trimmer Kit
- **Model Numbers:** X2N5 (Standard Clippers), C61 (Paw Trimmer)
- **Color:** Silver
- **Material:** Stainless Steel blades
- **Item Weight:** 1.74 pounds (total package)
- **Product Dimensions:** 8.27 x 11.02 x 2.36 inches
- **Battery Type:** Lithium Ion (included)
- **Charging Type:** USB Power Supply
- **Standard Clipper Battery Life:** Approx. 4 hours on 3-hour charge
- **Paw Trimmer Battery Life:** Approx. 2 hours on 2-hour charge
- **Noise Level:** Within 60dB
- **Included Accessories:** 6 Guide Guards (3mm/6mm/9mm/12mm/15mm/18mm), Cleaning Brush, Comb, Scissors, USB Charging Cable, Power Adapter.

Warranty and Support

oneisall is committed to customer satisfaction and product quality.

- **Warranty:** This product comes with a 2-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Customer Service:** For any questions, concerns, or support needs, please contact oneisall customer service. We offer 24-hour customer service to assist you.
- **Contact Information:** Refer to the product packaging or the official oneisall website for the most current contact details.

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0BBZ7SVSY

More documents and user manuals: **https://manuals.plus/**