Famiworths 1177

Famiworths Single Serve Coffee Maker

Model: 1177

Introduction Safety Components Setup Operation Maintenance Troubleshooting Specifications Warranty

1. Introduction

Thank you for choosing the Famiworths Single Serve Coffee Maker. This appliance is designed to provide a convenient and efficient way to brew your favorite coffee, whether from K-Cups or ground coffee. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.



Image 1.1: The Famiworths Single Serve Coffee Maker, showcasing its compatibility with both K-Cups and ground coffee, along with the included reusable filter basket and K-Cup holder.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use only cold water in the water reservoir.
- Do not remove the brew basket or K-Cup holder during brewing.

3. Product Components and Features

Familiarize yourself with the various parts of your Famiworths coffee maker:

- **Water Reservoir:** Located at the back, for filling with water. Features internal markings for 6, 8, 10, and 14 oz. brew sizes.
- **Brew Head:** Contains the needle that pierces K-Cups and dispenses water into the brew basket.
- **K-Cup Holder:** Removable holder for K-Cup pods.
- **Reusable Ground Basket:** A filter basket designed for brewing with ground coffee, with a capacity of up to 0.88 oz (25g).
- **Control Buttons:** 'REGULAR' and 'BOLD' buttons for brewing.
- **Drip Tray:** Removable tray to catch drips and spills, accommodating travel mugs up to 6.7 inches tall.



Image 3.1: Key features of the Famiworths coffee maker, including one-button operation, two reusable accessories (ground basket and K-cup holder), and clear water level markings for various brew sizes.



Image 3.2: The compact design of the Famiworths coffee maker, showing its dimensions of 5.6 inches deep, 8.2 inches wide, and 12 inches high, making it suitable for small spaces.



The Famiworths coffee maker offers 3-in-1 brewing capabilities, supporting K-Cups, ground coffee, and tea.

The 'BOLD' brewing option extracts more flavor and aroma for a richer coffee experience.

4. Setup

4.1 Initial Cleaning

Before first use, it is recommended to run two or three brewing cycles with only water to clean the internal components. Do not add coffee during this initial cleaning process.

1. Fill the water reservoir with clean water up to the 14 oz mark.
2. Place an empty mug or container on the drip tray.
3. Press either the 'REGULAR' or 'BOLD' button to start a brewing cycle.
4. Discard the hot water.
5. Repeat steps 1-4 two more times.

4.2 Placement and Power Connection

- Place the coffee maker on a stable, flat, heat-resistant surface.
- Ensure there is adequate clearance around the unit for ventilation.
- Plug the power cord into a standard 120V AC electrical outlet.

5. Operating Instructions

5.1 General Operation

The Famiworths coffee maker is designed for simple, one-button operation. The amount of water you pour into the reservoir determines the brew size (6 to 14 oz).



Image 5.1: Demonstrating the one-button easy operation of the Famiworths coffee maker. Simply press the BOLD or REGULAR button to start brewing.

5.2 Using K-Cups

1. Lift the lid of the brew head.
2. Insert a K-Cup pod into the K-Cup holder, ensuring it is seated correctly.
3. Close the lid firmly until it clicks.
4. Fill the water reservoir with the desired amount of water (6-14 oz).
5. Place your mug on the drip tray.
6. Press either the 'REGULAR' or 'BOLD' button to begin brewing. The selected button will flash while heating and remain lit during brewing.
7. Once brewing is complete, the light will turn off. Carefully remove your mug.

5.3 Using Ground Coffee

1. Lift the lid of the brew head.
2. Place the reusable ground basket into the brew head.

3. Add your desired amount of ground coffee into the reusable basket (up to 0.88 oz / 25g). Do not overfill.
4. Close the lid firmly until it clicks.
5. Fill the water reservoir with the desired amount of water (6-14 oz).
6. Place your mug on the drip tray.
7. Press either the 'REGULAR' or 'BOLD' button to begin brewing. The selected button will flash while heating and remain lit during brewing.
8. Once brewing is complete, the light will turn off. Carefully remove your mug.



Image 5.2: The Famiworths coffee maker features a plus-size brew basket, capable of holding up to 25g (0.88 oz) of ground coffee, offering 150% increased

capacity compared to standard baskets.



Image 5.3: The two-in-one brewing system, featuring both the K-cup holder and the larger ground coffee basket, allowing for versatile coffee preparation.

5.4 Brewing Tips

- **Bold Brew:** The 'BOLD' setting activates a unique brewing process that extracts more flavor and aroma, resulting in stronger, richer coffee. This is achieved by slowing the water flow for the initial part of the brew cycle.
- **Optimal Temperature:** The coffee maker brews at an optimal temperature of approximately 185°F (85°C), ideal for immediate consumption or adding milk/cream.
- **Brew Time:** A 6 oz cup of coffee typically brews in about 3 minutes.
- **Water Quantity:** The volume of coffee dispensed will be nearly equal to the water poured into the reservoir. Adjust water and coffee amounts to your taste preference.
- **Travel Mugs:** The removable drip tray allows for travel mugs up to 6.7 inches in height.



Image 5.4: The Famiworths coffee maker ensures an ideal brewing temperature between 180°F and 190°F for optimal taste and aroma extraction.



Image 5.5: The Famiworths coffee maker is designed to be travel mug friendly, fitting mugs up to 6.7 inches tall by removing the drip tray.

6. Maintenance

6.1 Daily Cleaning

Regular cleaning helps maintain the performance and longevity of your coffee maker.

- Always unplug the coffee maker before cleaning.

- Remove and empty the drip tray. Wash it with warm, soapy water and rinse thoroughly.
- Remove the K-Cup holder or reusable ground basket. Wash with warm, soapy water and rinse.
- Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the unit in water.
- Ensure all parts are completely dry before reassembling or storing.

6.2 Descaling

Mineral deposits from water can build up over time, affecting performance and taste. The coffee maker features a descaling reminder.

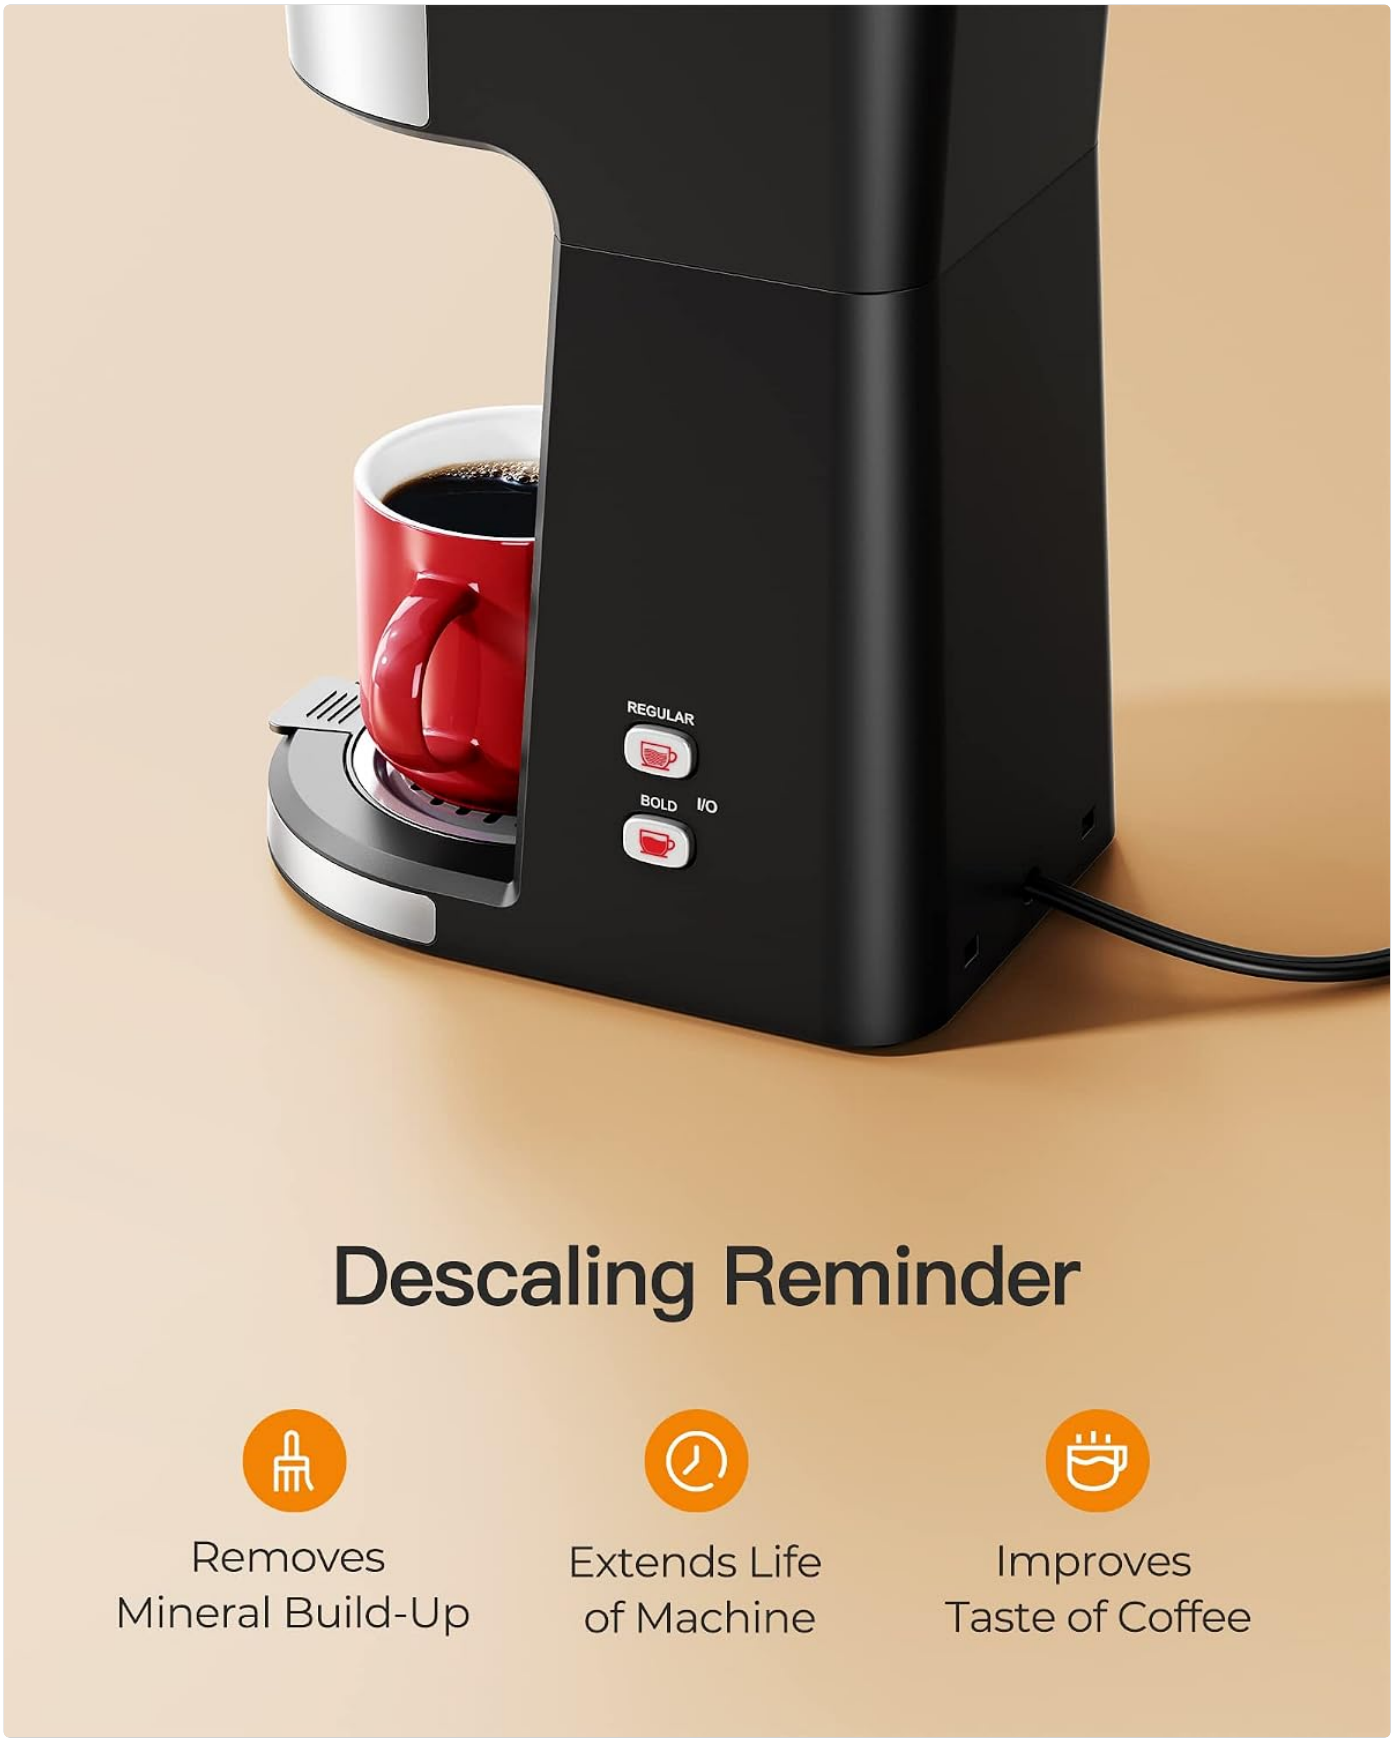


Image 6.1: The descaling reminder feature, indicated by the two control buttons flashing red alternately. Regular descaling removes mineral build-up, extends

machine life, and improves coffee taste.

Descaling Reminder:

The 'REGULAR' and 'BOLD' buttons will flash red alternately every 150 brew cycles to remind you to descale the unit. The lights will continue to flash until a descaling cycle is performed.

Descaling Process:

1. Ensure the coffee maker is unplugged and cooled.
2. Prepare a descaling solution according to the descaler product instructions, or use a mixture of white vinegar and water (e.g., 1:1 ratio).
3. Pour 14 oz of the descaling solution into the water reservoir.
4. Place a large empty mug or container on the drip tray.
5. Plug in the coffee maker.
6. Press and hold both the 'REGULAR' and 'BOLD' buttons simultaneously for 2 seconds to activate the descaling mode. The machine will begin a heating descaling process.
7. Once the descaling cycle is complete, discard the solution from the mug.
8. Rinse the water reservoir thoroughly with fresh water.
9. Run 3-4 cycles with fresh, clean water (14 oz each) to flush out any remaining descaling solution. Discard water after each cycle.

7. Troubleshooting

If you encounter issues with your Famiworths coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Coffee is not brewing.	No water in reservoir; lid not closed properly; K-Cup/basket not inserted correctly.	Fill the water reservoir. Ensure the brew head lid is firmly closed. Check that the K-Cup or ground basket is properly seated.
Coffee tastes weak.	Too much water; not enough coffee grounds; coffee too coarse; descaling needed.	Reduce water amount or increase coffee grounds. Use a finer grind for ground coffee. Perform a descaling cycle. Use the 'BOLD' brew setting.
Descaling reminder lights flashing.	Unit requires descaling.	Perform a descaling cycle as described in Section 6.2.
Water leaks from unit.	Water reservoir overfilled; K-Cup/basket not seated correctly; drip tray full.	Do not overfill the water reservoir. Ensure K-Cup or ground basket is properly inserted. Empty the drip tray regularly.
Plastic taste in coffee.	New unit; residual manufacturing oils.	Run several plain water cycles through the machine. This taste typically dissipates with regular use.
Splatter during brewing.	Mug too far from dispenser.	Use a taller mug or place a small, heat-resistant object on the drip tray to raise your mug closer to the dispenser.

8. Specifications

Feature	Detail
Brand	Famiworths
Model Name	Coffee Maker (Model 1177)
Color	Classic Black

Feature	Detail
Product Dimensions	5.6"D x 8.2"W x 12"H
Item Weight	2.64 pounds
Special Feature	Permanent Filter
Coffee Maker Type	Drip Coffee Machine
Style	Bold & Regular
Specific Uses For Product	Coffee
Recommended Uses For Product	Traveling
Exterior Finish	Stainless Steel, Shiny; Plastic, Variable
Included Components	Filter (Reusable Ground Basket, K-Cup Holder)
Operation Mode	Fully Automatic
Voltage	120V
Number of Items	1
Human Interface Input	Buttons
Coffee Input Type	K-Cups and Ground Coffee
Unit Count	1.0 Count
Date First Available	March 3, 2022

9. Warranty and Support

Famiworths products are manufactured to the highest quality standards. For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the contact information provided with your product packaging or visit the official Famiworths website.

Please retain your proof of purchase for warranty claims.

© 2024 Famiworths. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question